SGH-S959G

PORTABLE QUAD-BAND

MOBILE PHONE

User Manual

Please read this manual before operating your phone and keep it for future reference.



Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Open Source Software

Some software components of this product incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit:

http://opensource.samsung.com.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF

S959G_UM_English_UDLE4_PS_060412_F4

THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

SAMSUNG IS NOT LIABLE FOR PERFORMANCE ISSUES OR INCOMPATIBILITIES CAUSED BY YOUR EDITING OF REGISTRY SETTINGS, OR YOUR MODIFICATION OF OPERATING SYSTEM SOFTWARE.

USING CUSTOM OPERATING SYSTEM SOFTWARE MAY CAUSE YOUR DEVICE AND APPLICATIONS TO WORK IMPROPERLY.

Samsung Telecommunications America (STA), LLC

Headquarters:

1301 E. Lookout Drive

Richardson, TX 75082

Customer Care Center:

1000 Klein Rd.

Plano, TX 75074

Toll Free Tel: 1.888.987.HELP (4357)

Internet Address:

http://www.samsung.com

©2012 Samsung Telecommunications America, LLC. Samsung is a registered trademark of Samsung Electronics Co., Ltd.

Do you have questions about your Samsung Mobile Device?

For 24 hour information and assistance, we offer a new FAQ/ARS System (Automated Response System) at: www.samsung.com/us/support

Nuance[®], VSuiteTM, T9[®] Text Input, and the Nuance logo are trademarks or registered trademarks of Nuance Communications, Inc., or its affiliates in the United States and/or other countries.

The Bluetooth® word mark, figure mark (stylized "B Design"), and combination mark (Bluetooth word mark and "B Design") are registered trademarks and are wholly owned by the Bluetooth SIG.

microSD™ and the microSD logo are Trademarks of the SD Card Association.

Openwave® is a registered Trademark of Openwave, Inc.

Google, the Google logo, Android, the Android logo, Google Play, Gmail, Google Mail, Google Maps, Google Music, Google Talk, Picasa, YouTube and other marks are trademarks of Google Inc.

Wi-Fi is a registered trademark of the Wireless Fidelity Alliance, Inc.

Swype and the Swype logos are trademarks of Swype, Inc. © 2011 Swype, Inc. All rights reserved.

SISO are trademarks of SRS Labs, Inc. CS Headphone and WOW HD technologies are incorporated under license from

SRS Labs, Inc.

PIVX., DivX., DivX.,

DivX Certified® to play DivX® video up to HD 720p, including premium content.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX

ABOUT DIVX VIDEO: DIVX@VIS a digital video format created by DIVX, LLC, a substitiary of Novi Corporation. This is an official DIVX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX video. ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu (tap Applications > Settings > About phone > Legal information > License settings > DivX® VOD > Register). Go to vod.divx.com for more information on how to complete your registration.

Table of Contents

Section 1: Getting Started	5
Setting Up Your Phone	5
Charging a Battery	9
Switching the Phone On or Off	
Locking and Unlocking the Touch Screen	
Setting up your Phone	
Creating a New Google Account	12
Signing into Your Google Account	13
Retrieving your Google Account Password	13
Setting Up Your Voice Mail	14
Android System Recovery	14
Safe Mode	15
Troubleshooting	
Section 2: Understanding Your Phone	16
Features of Your Phone	16
Front View of Your Phone	16
Side Views of Your Phone	
Rear View of Your Phone	18
Display Layout	19
Status Bar	20
Notification Bar	23
Home Screen	25
Applications	27
Screen Navigation	33

Menu Navigation	3
Customizing Your Home Screen	3
Memory Card	4
Section 3: Call Functions	4
Displaying Your Phone Number	4
Making a Call	
Making a Call Using Speed Dial	4
Making a Call from the Address Book	4
Answering a Call	4
Dialing Options	5
Call Log	5
Call Duration	5
Options During a Call	5
Section 4: Entering Text	5
Text Input Methods	5
Entering Text Using the Samsung Keypad	5
Entering Text Using Swype	
Using the Voice to Text Feature	6
Section 5: Contacts and Your Address Book	6
Adding a New Contact	6
Editing an Existing Contact	6
Using Contacts	6
Joining Contacts	6
Synchronizing Accounts	7

Address Book Options	Using Gmail
Groups	Google Talk
Address Book Favorites	Google +
Managing Address Book Entries	Messenger
Section 6: Multimedia76	Section 8: Connections114
Music	Browser
Using Playlists	Wi-Fi 119
Play Music (Google Music)	Bluetooth
Videos	PC Connections
Video Maker	Section 9: Applications127
Gallery	AllShare
Camera 88	Calculator
Using the Camera	Calendar 129
Camera Options	Camera 130
Using the Camcorder	Clock
Camcorder Options	Contacts
Photo Editor	Downloads
Section 7: Messaging101	Email
Types of Messages	Gallery
Creating and Sending Messages	Gmail
Message Options	Google+
Viewing New Received Messages	Latitude
Deleting Messages	Maps
Message Search	Memo
Messaging Settings	Messenger
Text Templates	Mini Diary
Using Email109	Music
0	

My Files	Power Saving Mode	164
Navigation	Location and Security	164
Photo Editor	Applications	167
Places	Accounts and Synchronization	170
Play Books	Motion	170
Play Music	Privacy	170
Play Store	Storage	171
Downloading a New Google Application	Language and keyboard	171
Quickoffice	Voice Input and Output	175
Search	Accessibility Settings	176
Settings	Dock Settings	176
Social Hub	Date and Time	177
Talk	About Phone	177
Task147	Software Update	178
Task Manager	Section 11: Health and Safety Information	180
Video Maker	Exposure to Radio Frequency (RF) Signals	180
Videos	Specific Absorption Rate (SAR) Certification Information	184
Voice Command	FCC Part 15 Information to User	186
Voice Recorder	Commercial Mobile Alerting System (CMAS)	186
Voice Search	Smart Practices While Driving	186
Voice Talk	Battery Use and Safety	187
YouTube150	Samsung Mobile Products and Recycling	189
Section 10: Changing Your Settings152	UL Certified Travel Charger	190
Wireless and Network	Display / Touch-Screen	190
Call Settings	GPS & AGPS	191
Sound Settings	Emergency Calls	192
Display Settings	Care and Maintenance	192

-- ----

Responsible Listening	193
Operating Environment	195
FCC Hearing Aid Compatibility (HAC) Regulations for	
Wireless Devices	197
Restricting Children's Access to Your Mobile Device	198
FCC Notice and Cautions	199
Other Important Safety Information	199
End User License Agreement for Software	200
Section 12: Samsung Product Registration2	205
Index2	206

Section 1: Getting Started

This section explains how to start using your phone by first configuring your hardware, activating your service, and then setting up your voice mail.


Setting Up Your Phone

Prior to use it is necessary to install both the battery and SIM into their corresponding internal compartments. The microSD $^{\text{TM}}$ card slot is also located in this same internal area.

 Remove the back cover by inserting a fingernal into the slot on the bottom side of your phone (1).



2. Lift the cover up (2) and away from the phone (3).

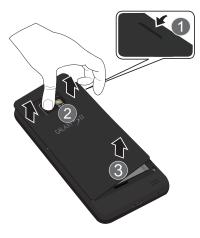

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, available optional services, and many others features.

Important! The plug-in SIM card information and its contacts can be easily damaged by scratching or bending, so be careful when handling, inserting, or removing the card. Keep all SIM cards out of reach of small children.



- Carefully slide the SIM card into the SIM card socket (as shown) until the card locks into place.
 - Make sure that the card's gold contacts face into the phone and that the upper-left angled corner of the card is positioned as shown.

Note: If the card is not inserted correctly, the phone will not detect the SIM card and (NO SIM detected) will be displayed within the Notification area at the top of the screen.

Re-orient the card back into the slot and confirm detection.

Removing and Installing the Memory Card

You can use a microSD™ (SD) or microSDHC™ card to expand available memory space if you desire. This secure digital card enables you to exchange images, music, and data between SD-compatible devices. This type of memory card is designed for use with this mobile phone and other devices.

Note: Your phone has been tested to support up to a 32GB memory card.

Installing the Memory Card

 Remove the battery. Use your thumbnail or a sharp object to lift the battery up (1) and then away from the device (2).



- Insert and then carefully push the microSD card into the slot until it clicks (as shown).
 - Make sure the microSD's gold contact pins face downward and the card is securely inserted.

For more information on Memory Cards, see "Memory Card" on page 44.



Removing the Memory Card

- Remove the battery.
- 2. Push on the memory card until it clicks and is released.
- 3. Grasp the memory card and remove it from the phone.

Installing the Battery

- 1. Insert the battery into the opening on the back of the phone, making sure the connectors align (1).
- 2. Gently press down to secure the battery (2).



Replacing the Back Cover

- Align the tabs along the bottom edge of the cover to their corresponding locations along the edge of the battery compartment as shown (1).
- 2. Place the battery cover onto the back of the phone and press down (2).



Press along the edge of the back cover (3) until you have a secure seal.



Note: Make sure the battery is properly installed before switching on the phone.

Charging a Battery

Your device is powered by a rechargeable Li-ion battery. The Travel Charger that is used to charge the battery, is included with your device. Use only Samsung-approved batteries and chargers.

Note: Long backlight settings, searching for service, vibrate mode, web browser use, and other variables may reduce the battery's talk and standby times.

Although you can use the phone while the battery is charging, doing so will require additional charging time.

Note: You must fully charge the battery before using your phone for the first time. A discharged battery recharges fully in approximately 4 hours.

Using the Travel Charger

Important! Verify that the handset battery is installed prior to connection. If the battery is not properly installed and the wall charger is connected, the handset may power off and on continuously, preventing proper operation.



- Plug the flat end of the Travel Charger into the Power/ Accessory Interface connector and the other end into a standard AC wall outlet.
- When charging is finished, remove the flat end from the interface connector jack on the phone.

Warning! If your handset has a touch screen display, please note that a touch screen responds best to a light touch from the pad of your finger. Using excessive force or a metallic object when pressing on the touch screen may damage the tempered glass surface and void the warranty.

Note: Failure to unplug the wall charger before you remove the battery, can cause damage to the phone.

Low Battery Indicator

When the battery is weak and only a few minutes of talk time remain, the battery icon () blinks and the device sounds a warning tone at regular intervals. In this condition, your phone conserves its remaining battery power, not by turning off the backlight, but by entering the dimming mode. For a quick check of your battery level, glance at the battery charge indicator located in the upper-right corner of your device's display. Solid color () indicates a full charge.

When the battery level becomes too low, the phone automatically turns off.

Switching the Phone On or Off

- Press and hold (on the upper right side of the phone) until the device switches on. The device searches for your network and after finding it, you can make or receive calls.
- 2. Sweep your finger across the screen to unlock the device.

Note: The display language is preset to English at the factory. To change the language, use the Language menu. For more information, refer to "Changing Your Settings" on page 152.

- To switch off the device, press and hold until the Phone options screen displays.
- 4. Tap Power off ((1)).

Locking and Unlocking the Touch Screen

By default, the device screen locks when the backlight turns off.

- Press to lock the touch screen.
 or -
- 1. Press again to display the main screen.
- Place your finger on the screen and swipe the glass in any of the directions shown unlock the device.

Setting up your Phone

When you first turn on your phone, you will need to set up a few things.

- Read the Location consent information and tap either Agree or Disagree.
- When the Welcome screen displays, touch the green android to begin.
- If you already have a Google account, tap Sign in, otherwise, tap Create and follow the onscreen instructions to create a Google account. You can also tap Skip if you want to create an account later.

Note: In order to utilize your device to the fullest extent, you will need to create a Google™ Account when you first use your device. With a Google Account, you will have access to more Google applications and applications will always be in sync between your phone and computer.

- 4. At the Use Google location screen, a green checkmark appears next to the text that explains that you allow Google's location service to collect anonymous location data from your phone. If you disagree, tap the checkmark to remove it.
 - A green checkmark also appears next to the text that explains that you allows your location to be used for Google search results and other Google services. If you disagree, tap the checkmark to remove it.
- Tap Next.
- If prompted to set your time and date information, place a checkmark in the Automatic field to allow the device to obtain this information directly from the network.
- 7. Tap Next. The main Home screen is displayed.

Creating a New Google Account

You should create a Google Account when you first use your device in order to fully utilize the functionality. This account provides access to several device features such as Gmail, Google Maps, Google Search, and the Play Store (formerly know as "Market") applications. Before you are able to access Google applications, you must enter your account information. These applications sync between your device and your online Google account.

To create a new Google Account from your phone:

- 1. From the Home screen, tap (Play Store).
- Read the introduction and tap Next → Create to begin.
- Follow the on-screen instructions to create a Google Account.
 - or -

If this is not the first time you are starting the phone, tap $(Applications) \rightarrow (Gmail)$.

- 4. Tap Next to continue.
- Follow the on-screen instructions to create Google Account.

Note: If you already have a Google account, you only need to sign in.

To create a new Google Account from the Web:

- From a computer, launch a Web browser and navigate to www.google.com/account.
- 2. On the main page, click Create an account for free.
- 3. Follow the on-screen prompts to create your free account.
- Look for an email from Google in the email box you provided, and respond to the email to confirm and activate your new account.

Signing into Your Google Account

- Launch an application that requires a Google account (such as the Play Store or Gmail).
- Click Next → Sign in.
- Tap the Username and Password fields and enter your information.
- Tap Sign in. Your device communicates with the Google servers to confirm your information.
- If prompted, create a new Gmail username by entering a prefix for your @gmail.com email address.

Retrieving your Google Account Password

A Google account password is required for Google applications. If you misplace or forget your Google Account password, follow these instructions to retrieve it:

- From your computer, use an Internet browser to navigate to http://google.com/accounts.
- Once the URL loads, click on the Can't access your account? link.
- Enter your full Gmail address and click Submit. Follow the password recovery procedure.

Setting Up Your Voice Mail

1. From the Home screen, tap , then touch and hold

You may be prompted to enter a password.

Follow the tutorial to create a password, record a greeting, and record your name.

Note: These steps may be different depending on your network.

Accessing Your Voice Mail

- 1. From the Home screen, tap , then touch and hold
- When connected, follow the voice prompts from the voice mail center.

Accessing Your Voice Mail From Another Phone

- 1. Dial your wireless phone number.
- When you hear your voicemail greeting, press the asterisk key on the phone you are using.
- Enter your passcode.

Android System Recovery

Android System Recovery is used for Google updates but the average user will never need to perform a system recovery.

Note: If you entered this menu by mistake, use the Volume Up/ Down keys to select **reboot system now**, then press the Power key. Your phone will then continue to boot up.

To enter the Android System Recovery mode, follow these steps:

- With the phone turned off, press the Power key and Volume Up/Down keys at the same time until the phone switches on.
- Once the SAMSUNG logo appears, release the Power key while continuing to press the Volume Up/Down keys.
- Continue to press the Volume Up/Down keys for at least 8 seconds, until Recovery mode is launched and the Android System Recovery screen is displayed.
- Release the Volume Up/Down keys.
- 5. The following options are available:
 - reboot system now: this option turns on your phone.
 - apply update from sdcard: this option allows you to apply updates from your memory card to your phone.

- wipe data/factory reset: deletes all data from the phone except pictures and videos. For more information, refer to "Factory data reset" on page 171.
- wipe cache partition: allows you to delete all cache data such as log files.
- Use the Volume Up/Down keys to scroll up or down, then use the Power key to make a selection.

Safe Mode

You can boot your phone into Safe Mode if you wish to troubleshoot whether or not added applications are causing problems with the device. Safe mode will only load basic system software.

- 1. Make sure your phone is turned off.
- Press and hold the power key (to boot up your device.
- After the animation starts to display, continually tap the (Menu) key until the backlight turns on behind the four bottom keys.
- Press and hold the key.
 When the Home screen is displayed, Safe mode is displayed in the lower left corner of the screen.

Troubleshooting

If your device has fatal errors, hangs up, or freezes, you may need to reset the device to regain functionality.

If your device is frozen and unresponsive, press and hold the Power/Lock Key for 8 to 10 seconds.

For more information, refer to "Android System Recovery" on page 14.

Section 2: Understanding Your Phone

This section outlines some key features of your phone and describes the screen and the icons that appear when the phone is in use. It also shows how to navigate through the phone and provides information on using a memory card.

Features of Your Phone

Your phone is lightweight, easy-to-use and offers many useful features. The following list outlines a few of the features included in your phone.

- Touch screen provides quick response to a variety of in-phone menus and options including applications and seven home screens
- Solid Android Gingerbread platform
- Ready access to the Internet
- Built-in Bluetooth and Wi-Fi technology
- Brilliant wide-screen AMOLED display
- . 8 Megapixel camera and camcorder
- GPS Navigation functionality provides real-time navigation
- microSD card compatibility for use in data storage and access
- HSDPA 7.2 mbps high speed download capability
- Assisted GPS (TeleNav GPS Navigation)
- Up to 32GB expandable memory slot

Sync and update social network applications

Front View of Your Phone



- Front facing camera: allows you to take pictures of yourself when you set the camera shooting mode to Self shot.
- Menu key: allows you to access sub-menus with additional options for different features and applications.
- Home key: allows you to return to the main Home screen from any screen or menu.
- 4. Back key redisplays the previous screen or clears entries.
- Search key: allows you to access the Google Search feature where you can search for items on the internet.
- Display shows all the information needed to operate your phone, such as the connection status, received signal strength, phone battery level, and time.
- **7. Receiver** allows you to hear the other caller and the different ring tones or sounds offered by your phone.

Side Views of Your Phone



- Proximity Sensor detects how close an object is to the surface of the screen. This is typically used to detect when your face is pressed up against the screen, such as during a phone call.
 - While talking on the phone, the sensor detects talk activity and locks the keypad to prevent accidental key presses.
- Light Sensor lets you use the ambient light level to adjust the screen brightness/contrast. This sensor decreases screen brightness in dim light.
 - In a bright light condition (outdoors), the sensors cause the device to increase the brightness and contrast for better viewing.
 - In dim light conditions, the device increases the screen brightness to compensate.
- 3. Volume key allows you to adjust the ringer volume while in standby mode or adjust the voice volume during a call. When receiving an incoming call, briefly press down either volume key () to mute the ring tone. Adjusts text size when reading a message or using the browser in the Applications folder.
- 4. Power/Accessory Interface connector: allows you to connect a Travel Charger or other optional accessories such as a USB/data cable or a hands-free headset for convenient, hands-free conversations.

- Microphone is used during phone calls and allows other callers to hear you clearly when you are speaking to them. It is also used to make voice note recordings.
- 6. Power/Lock key: () lets you power your phone on and off. Also allows you to lock or unlock the touch screen. For more information on locking your phone, see "Locking and Unlocking the Phone" on page 36
- 3.5mm Headset jack: allows you to plug in headphones.

Rear View of Your Phone



- 1. Camera lens: is used to take pictures and shoot videos.
- External speaker: allows you to hear when the Speakerphone is turned on.
- Flash: is used to provide adequate light when taking pictures in dark places.

Display Layout

Your display screen provides a wealth of information about the phone's status and options, as well as providing access to application icons. For more information, refer to "Front View of Your Phone" on page 16.

Your phone's display provides information about the phone's status, and is the interface to the features of your phone. The display indicates your connection status, signal strength, battery status and time. Icons display at the top of the phone when an incoming call or message is received and also alerts you at a specified time when an alarm was set. The screen also displays notifications, and Application (or shortcut) bar with four icons: Phone, Contacts, Messaging, and Applications.



Status Bar

The Status Bar shows information about the connection status, signal strength, phone battery level, and time, and displays notifications about incoming messages, calls and other actions.

This list identifies the icons you see on your phone's display screen:

Indicator Icons

This list identifies the symbols you'll see on your phone's display and Indicator area:



Displays your current signal strength. The greater the number of bars, the stronger the signal.



Indicates that the Airplane Mode is active. You cannot send or receive any calls or access online information.



Displays when there is no SIM card in the phone.



Displays when there is no network available.



Displays when there is a system error or alert.



Displays if you have not setup the automatic software update feature. For more information, refer to "Software Update" on page 178.



Displays when a call is in progress.



Displays when a call is on hold.



Displays when the speakerphone is on.



Displays when a call has been missed.



Displays when a call has been muted.



Displays when Call forwarding is set to Always forward. For more information, refer to "Call Settings" on page 158.



Displays when you phone is set to automatically reject calls from your Reject list or all calls.



Displays your battery charge level. Icon shown is fully charged.



Displays your current battery is 100 percent charged. This icon is followed by an audible beep.



Displays when your battery is charging. Also displays battery charge level.



Displays your current battery charge level is very low.



Device Power Critical – Shows your current battery only has three percent power remaining and will immediately shutdown.



Displays when your connection to an EDGE network is active.



Displays when your phone is communicating with the EDGE network



Displays when your connection to a 3G network is active.



Displays when your phone is communicating with the 3G network



Displays when your connection to an HSPA+ network is active



Displays when your phone is communicating with the HSPA+ network.



Displays when your phone is downloading a file. It will blink green when it is installing.



Displays when a Play Store download has completed.



Displays when updates are available for download.



Displays when the phone is connected to a computer via a supported USB cable connection.



Displays when the phone is tethered via a supported USB cable connection



Displays when a new text or multimedia message is received.



Displays when a new Google+ notification has been received.



Displays when a new voice mail is received.



Displays when Email is received.



Displays when the time and date for a Calendar Event has arrived. For more information, refer to "Calendar" on page 129.



Displays when you set an alarm to ring at a specified time. For more information, refer to "Alarm" on page 131.



Displays when the Sound profile is set to Silent mode and Vibrate is set to Never or Only when not in silent mode.



Displays when the Sound profile is set to Silent mode and Vibrate is set to Always or Only in silent mode.



Displays when Bluetooth is activated.



Displays when a Bluetooth device has been paired with the phone.



Displays when Bluetooth is on but is not connected to a Bluetooth device.



Displays when Wi-Fi is connected, active, and communicating with a Wireless Access Point (WAP).



Displays when Wi-Fi is active but there is a communication issue with the target Wireless Access Point (WAP).



Displays when Wi-Fi Direct is active and your phone is connected to another device.



Displays when the phone has detected an active USB connection and is in a USB Debugging mode.



Displays when data synchronization and application sync is active and synchronization is in progress for Gmail. Calendar. and Contacts.



Displays when your phone is connected to a Digital Living Network Alliance (DLNA) certified device using the AllShare application.



Displays when your phone as been configured as a portable Wi-Fi hotspot.



Displays when GPS is active and acquiring a signal.



Displays when Power saving mode is enabled.



Displays when data on the phone has been encrypted.



Displays when data on the phone has been decrypted.



Displays when the external SD card (internal microSD) has been disconnected (unmounted) from the phone and is now ready for either removal or formatting.



Displays when the contents of the microSD card are being scanned.



Displays when the External SD card is being prepared for mounting to the device. This is required for communication with the External SD card.



Displays when an external microSD memory card is full.



Displays when TTY device has been inserted.



Displays in the notifications window when a song is currently playing within the Music player and you have gone to another screen (ex: Home screen while music plays in the background).



Displays in the notifications window when a song is currently playing within the Play Music (Google Music) application.

For more details on configuring your phone's settings, see "Changing Your Settings" on page 152.

Notification Bar

The Notification area indicates new message events (data sync status, new messages, calendar events, call status, etc). You can expand this area to provide more detailed information about the current on-screen notification icons

- Tap the Status bar to reveal the Notifications tab, and then drag the tab to the bottom of the screen to open the Notifications panel (1).
- Tap a notification entry to open the associated application (2).

Note: The Notifications panel can also be opened on the Home screen by pressing and then tapping Notifications.





Clearing Notifications

1. Tap the status bar to reveal the Notifications tab, and then drag the tab to the bottom of the screen to open the Notifications panel

Tap **Clear**. The notifications are cleared from the panel.

Accessing Additional Panel Functions

In addition to notifications, this panel also provides quick and ready access to five device functions. These can be quickly activated or deactivated.



The following functions can either be activated (green) or deactivated (white): Wi-Fi, Bluetooth, GPS, Flight mode, or Screen Rotation

Home Screen

The Home screen is the starting point for using the applications on your phone. There are initially seven available panels, each populated with default shortcuts or applications. You can customize each of these panels.



- Notification area displays those icons associated with end-user notifications such as: email messages, calls (missed, call in progress), new voicemail, upcoming event, USB connection, emails, and Text/MMS messages.
 - These notifications appear at the top-left of the screen (within the Status bar area) and display important user information.
 - —This information can be accessed by either swiping down from the Status bar or by accessing the Notifications panel [> Notifications].
- Status area displays those icons associated with the status of the device such as communication, coverage, Bluetooth, 4G/3G, Wi-Fi communication, battery levels, GPS, etc.
- Home Screen is a customizable screen that provides information about notifications and device status, and allows access to application Widgets.
- Extended Home Screens extend beyond the current visible screen width to provide more space for adding icons, widgets, and other customization features.
 - There are six available extended screens (panels) each of which may be populated with its own shortcuts or widgets. These screens share the use of the three Primary Shortcuts.
 - —The current screen is indicated at the bottom by a larger circle. Up to seven (7) total screens are available.

Note: Both the status bar and primary shortcuts are visible across all screens.

- Widgets are self-contained on-screen applications (not shortcuts).
 These can be placed onto any of the available screens (Home or extended).
- Shortcuts are icons that launch available device applications such as Camera, YouTube, Voicemail, Contacts, Phone, Email, etc. These function the same as shortcuts on your computer.
 - Although some may already be found on the Extended Home screens, the majority can also be found within the Applications screens.
 - The Application screens can be accessed by tapping (Applications) from the Primary shortcuts area.
 - Shortcuts can be removed from a screen and added back any number of times

- Primary Shortcuts: are four shortcuts present throughout all of the available screens and can be used to both navigate within the device or launch any of the following functions:
 - Phone () launches the phone-related screen functions (Keypad, Logs, Contacts, Favorites, and Groups).
 - -Messaging (, allows you to create and view Messages.
 - ─ Web () launches the built-in Internet browser.
 - Applications/Home toggles functionality between the Home and Application screens.
 - Tap (Applications) to access the Application screens loaded with every available local application.
 - While in the Applications screens, tap (Home) to easily return to the Home screen.

As you transition from screen to screen, the screen counter (located at the bottom) displays the current panel number in a circle.

For more information, refer to "Adding and Removing Primary Shortcuts" on page 39.

Applications

The Application menu provides quick access to the items you use most frequently.

The following table contains a description of each application. If the application is already described in another section of this user manual, then a cross reference to that particular section is provided.

For information on navigating through the Applications icons, see "Navigating Through the Application Menus" on page 37

- 1. From the Home screen, tap , then tap one of the application icons.
- 2. Follow the on-screen instructions.
- 3. To return to the Home screen, tap

The following applications are available:



AllShare:

AllShare allows your phone to stream photos, music and videos from its memory to other Digital Living Network Alliance (DLNA) certified devices. Your phone can also play digital content streamed from other DLNA certified devices.

For more information, refer to "AllShare" on page 127.



Calculator:

Using this feature you can use the phone as a calculator. The calculator provides the basic arithmetic functions; addition, subtraction, multiplication, and division. You can also use this as a scientific calculator.

For more information, refer to "Calculator" on page 128.



talendar:

With the Calendar feature, you can consult the calendar by day, week, or month, create events, and set an alarm to act as a reminder, if necessary.

For more information, refer to "Calendar" on page 129.



Camera:

Use your 8.0 megapixel camera feature to produce photos and videos.

For more information, refer to "Camera" on page 88.



Clock:

The Clock application allows you to access alarms, view the World Clock, set a stopwatch, and use a timer. For more information, refer to "Clock" on page 131.



Contacts:

You can manage your daily contacts by storing their name and number in your Address Book. Address Book entries can be sorted by name, entry, or group. You can also synchronize your phone Address Book with AT&T Address Book, the network backup service.

For more information, refer to "Contacts and Your Address" Book" on page 65.



Downloads:

The Downloads application allows you to manage all of your downloads from the Play Store and the Browser.

For more information, refer to "Downloads" on page 133.



Email:

Email enables you to review and create email using various email services. You can also receive text message alerts when you receive an important email. For more information, refer to "Using Email" on page 109. This icon only displays in the Applications menu when Email has been removed as a Home screen shortcut.



Gallery:

The Gallery is where you view photos and play back videos. For photos, you can also perform basic editing tasks, view a slideshow, set photos as wallpaper or contact image, and share as a picture message.

For more information, refer to "Gallery" on page 87.



Gmail:

Gmail is a web-based email service. Gmail is configured when you first set up your phone. Depending on your synchronization settings. Gmail can automatically synchronize with your Gmail account on the web. For more information, refer to "Using Gmail" on page 111.



Google +: Google+ makes messaging and sharing with your friends a lot easier. You can set up Circles of friends, visit the Stream to get updates from your Circles, use Messenger for fast messaging with everyone in your Circles, or use Instant Upload to automatically upload videos and photos to your own private album on Google+.

For more information, refer to "Google +" on page 113.



Latitude:

With Google Latitude, you can see the location of all of your friends on a map or on a list. You can also share or hide your location.

For more information, refer to "Latitude" on page 134.



Maps:

Depending on your location, you can view basic, custom, and satellite maps and local business information, including locations, contact information, and driving directions. You can also post public messages about a location and track your friends.

For more information, refer to "Maps" on page 135.



Memo:

This feature allows you to create a memo.

For more information, refer to "Memo" on page 137.



Messenger: Messenger allows you to bring groups of friends together into a simple group conversation. When you get a new conversation in Messenger, Google+ sends an update to your phone.

For more information, refer to "Messenger" on page 113.



Mini diary:

The Mini diary allows you to keep a diary of your daily activities and also attach pictures. You can publish your diary entries to Facebook and MySpace.

For more information, refer to "Mini Diary" on page 138.



Music:

Music allows you to play music files that you have stored on your phone and memory card. You can also create playlists.

For more information, refer to "Music" on page 76.



My files:

My files allows you to manage your sounds, images, videos, bluetooth files, Android files, and other memory card data in one convenient location.

For more information, refer to "My Files" on page 139.



Navigation:

Navigation is an internet-connected GPS navigation system with voice guidance. You can type or speak your destination.

For more information, refer to "Navigation" on page 140.



Photo Editor:

The Photo editor application provides basic editing functions for pictures that you take on your phone. Along with basic image tuning like brightness, contrast, and color it also provides a wide variety of effects used for editing the picture.

For more information, refer to "Photo Editor" on page 99.



Places:

Places is an application that uses Google Maps and your location to help you find Restaurants, Cafes, Bars, Attractions, and more. You can also add your own locations.

For more information, refer to "Places" on page 142.



Play Books:

With Play Books, you can find more than 3 million free ebooks and hundreds of thousands more to buy in the eBookstore.

For more information, refer to "Play Books" on page 143.



Play Music (Google Music)

Launches the built-in Google Music Player that allows you to play music files that you have both downloaded from Google Music and stored on your microSD card.

For more information, refer to "Play Music (Google Music)" on page 79.



Play Store:

Formerly known as the "Android Market", it provides access to downloadable applications and games to install on your phone. The Play Store also allows you to provide feedback and comments about an application, or flag an application that might be incompatible with your phone.

For more information, refer to "Play Store" on page 143.



Quickoffice:

The Quickoffice application allows you to create and save Microsoft Word and Excel documents. You can also view existing Powerpoint presentations and PDFs.

For more information, refer to "Quickoffice" on page 145.



Search:

The Google Search Bar provides you an on-screen Internet search engine powered by GoogleTM.

For more information, refer to "Search" on page 146.



Settings:

This icon navigates to the sound and phone settings for your phone. It includes such settings as: display, security, memory, and any extra settings associated with your phone.

For more information, refer to "Changing Your Settings" on page 152.



Social Hub:

With Social Hub, you can now easily and intuitively satisfy all of your relevant communication needs from one integrated user experience. E-mails, instant messaging, social network contents, and calendar contents from all major service providers are available.

For more information, refer to "Social Hub" on page 146.



Talk:

Google Talk is a free Windows and web-based application for instant messaging offered by Google. Conversation logs are automatically saved to a Chats area in your Gmail account. This allows you to search a chat log and store them in your Gmail accounts.

For more information, refer to "Google Talk" on page 112.



Task:

The Task application allows you to keep track of tasks that you have. You can also sync them with different accounts.

For more information, refer to "Task" on page 147.



Task Manager:

The Task Manager application provides information about the processes and programs running on your phone, as well as the memory status. It can also be used to terminate processes and applications.

For more information, refer to "Task Manager" on page 148.



Video Maker:

Video maker allows you to custom-make your own videos. You can add themes, music, pictures, and other videos to you video.

For more information, refer to "Video Maker" on page 87.



Videos:

The Video application plays video files stored on your microSD card.

For more information, refer to "Videos" on page 84.



Voice command:

With the Voice command application you can use your voice to perform operations that you would normally have to do by hand such as dialing a phone number, texting a message, playing music, etc.

For more information, refer to "Voice Command" on page 148.



Voice Recorder:

The Voice Recorder allows you to record an audio file up to one minute long and then immediately send it as a message.

For more information, refer to "Voice Recorder" on page 149.



Voice Search:

The Voice Search feature is a voice-activated application that allows you to tell the phone what to search for and then the phone activates a Google search based on what you said

For more information, refer to "Voice Search" on page 149.



Voice talk:

With the Voice talk application you can use your voice to perform operations that you would normally have to do by hand such as dialing a phone number, texting a message, playing music, etc. For more information, refer to "Voice Talk" on page 150.



YouTube:

YouTube is a video sharing website on which users can upload and share videos, and view them in MPEG-4 format. For more information, refer to "YouTube" on page 150.

Tip: To open applications quickly, add the icons of frequently-used applications to the Home screen or to the folders you created. For details, see "Customizing Your Home Screen" on page 38.

Screen Navigation

Using the touch screen display and the keys, you can navigate the features of your phone and enter characters. The following conventions are used in this manual to describe the navigation action in the procedures.

Terms used in this user manual

The following terms describe the most common hardware and on-screen actions

- Press and hold: Pressing relates to use of the hardware keys and buttons to select or activate an item. For example: press the Navigation key to scroll through a menu. Some buttons and keys require you to press and hold them to activate a feature, for example, you press the Lock key to lock and unlock the phone.
- Tap: Use a brief touch to select items on the display or to enter text on the virtual QWERTY keyboard. For example: touch an Application icon to open the application. A light touch works best.

Press and hold



Tap



Touch and hold



- **Touch and hold**: Touch and hold an icon or key to open the available options, or to access a pop-up menu. For example: press and hold from the Home screen to access a menu of customization options.
- Sweep: To sweep, lightly drag your finger vertically or horizontally across the screen. Use sweep when Unlocking the screen and Scrolling through the Home screen or a menu.



Swipe or slide and Drag



Rotate

- Flick: Move your finger in lighter, quicker strokes than swiping. This
 finger gesture is always used in a vertical motion, such as when
 flicking through contacts or a message list.
- Swipe or slide: Quickly drag your finger vertically or horizontally across the screen. This allows you to move the area of focus or to scroll through a list. For example: slide your finger left or right on the Home screen to scroll among the seven panels.
- Drag: Press and hold your finger with some pressure before you start to move it. Do not release your finger until you have reached the target position.
- Rotate: Automatically change the screen orientation from portrait to landscape by turning the device sideways. For example: rotate to landscape orientation when entering text, to provide a larger keyboard, or when viewing web content to minimize scrolling.

Flick

- Pinch: "Pinch" the screen using your thumb and forefinger to zoom out when viewing a picture or a Web page. (Move fingers inward to zoom out.)
- Spread: "Spread" the screen using your thumb and forefinger to zoom in when viewing a picture or a Web page. (Move fingers outward to zoom in.)





- Motion Navigation and Activation: The phone comes equipped with
 the ability to assign specific functions to certain phone actions that are
 detected by both the accelerometer and gyroscope.
- Panning: To pan, touch and hold a selected icon, then move the
 device to the left or right to reposition it to another page. You must first
 activate Motion on your device. Use panning to move icons on your
 Home screens or Application Menus to another page.
 - For more information, refer to "Motion" on page 170.
- Tilt: To activate the tilt feature, press and hold two points on the screen then tilt the device back and forth to reduce or enlarge the screen. Use tilt to reduce or enlarge the screen in the Gallery or Browser.
 - For more information, refer to "Motion" on page 170.

Menu Navigation

You can tailor the phone's range of functions to fit your needs using both menus and widgets. Menus, sub-menus, and features can be accessed by scrolling through the available on-screen menus. Your phone originally has seven home screens.

Command Keys

Menu Key

Press Menu to display a context-sensitive menu of options for the current screen or feature.

Home Key

Press Home to display the Home screen.

Back Key

Press Back to return you to the previously active screen. If the on-screen keyboard is currently open, this key closes the keyboard.

Search Key

Press **Q. Search** to launch Quick Search, to search the web and your phone.

Locking and Unlocking the Phone

To unlock your phone:

- Press the lock button located on the upper right side of your phone.
- 2. Sweep the touch screen in any direction.



3. The Home screen will display as shown above.

Home Screen Overview

The main home screen is the starting point for many applications and functions, and it allows you to add items like application icons, shortcuts, folders, or Google widgets to give you instant access to information and applications. This is the default page and accessible from any menu by pressing

Navigating Through the Home Screens

Your phone initially has seven home screens. If you like, you can place different applications on each of the home screens.

 From the main Home screen, sweep the screen with your finger in either direction. The main Home Screen is located in the middle with three Home screens on each side.







Navigating Through the Application Menus

Your phone initially has four Application Menus available. Follow these steps to navigate through the Application Menus:

- At the Home screen, tap The first Application Menu will be displayed.
- Sweep the screen left or right to access the other three menus.
- 3. Tap one of the application icons.



Note: As you add applications, the number of Application menus that you have available will increase.

Navigating Using Sub-Menus

Sub-menus are available when you are at any Home screen or have selected a feature or application such as Phone, Contacts, Messaging, or Web.

To access a sub-menu:

- Press .
 A sub-menu will appear at the bottom of the phone screen.
- Tap an option.



Accessing Recently-Used Applications

- 1. Press and hold from any screen to open the recently-used applications window.
- 2. Tap an icon to open the selected application.

Customizing Your Home Screen

You can customize your Home screen by doing the following:

- Creating Shortcuts
- Adding and Removing Widgets on the Home Screen
- Repositioning Widgets
- Creating Folders
- Changing the Wallpaper
- Adding and Deleting Home Screens

Creating Shortcuts

Shortcuts are different than the current Home screen Widgets that only launch an application. Shortcuts activate a feature, action, or launch an application.

Note: To move a shortcut from one screen to another, it must first be deleted from its current screen. Navigate to the new screen, then add the shortcut.

Adding a shortcut from the Applications Menu

- 1. Press 📤 to activate the Home screen.
- 2. Navigate to the desired Home Page.
- 3. Tap to display your current applications.
- 4. Scroll through the list and locate your desired application.
- Touch and hold the application icon. This creates an immediate shortcut of the selected icon and closes the Applications tab.
- While still holding the on-screen icon, position it on the current page. Once complete, release the screen to lock the new shortcut into its new position on the current screen.

Adding a shortcut via the Add to Home screen

- 1. Press to activate the Home screen.
- 2. Touch and hold on an empty area of the Home screen.
- 3. From the Add to Home window tap Shortcuts.
- Tap a shortcut from the available list.
- Follow the on-screen instructions to add the new shortcut to your current Home screen.

Deleting a shortcut

- 1. Press 📤 to activate the Home screen.
- Touch and hold the desired shortcut. This unlocks it from its location on the current screen.
- Drag the icon over the Delete tab and release it.
 As you place the shortcut into the Trash, both items turn red.

Note: This action does not delete the shortcut, it just removes it from the current screen.

Adding and Removing Primary Shortcuts

You can change any of your primary shortcuts with the exception of the **Applications** \bigoplus and **Home** shortcuts.

- Press to activate the Home screen.
- 2. Tap 🛨 to display your current applications.
- 3. Press and tap View Type.
- Tap Customizable grid. A green circle will appear next to the option.
- 5. Press and tap Edit → 0K (if necessary).
- 6. Scroll through the list and locate your desired application.

- Touch and hold the on-screen icon, then drag it over the primary shortcut that you want to replace. The new primary shortcut then appears at the bottom of the screen. The old primary shortcut will return to the menu.
- Press and tap Save.
- Press to return to the Home screen.
 The new primary shortcut will now appear on all Home screens.

Note: When a primary shortcut is removed, it will then appear as an option in the Application menu.

Adding and Removing Widgets

Widgets are self-contained applications that reside in either your Applications tab or on the main or extended Home screens. Unlike a shortcut, the Widget appears as an on-screen application.

Note: To move a Widget from one screen to another, it must first be deleted from its current screen. Activate the new screen, then add the Widget.

Adding a Widget

- 1. Press 📤 to activate the Home screen.
- Navigate to the desired Home Page.
- 3. Touch and hold on an empty area of the screen.
- From the Add to Home window tap Widgets.
 - . Tap an available Widget to place it on your current screen.

Removing a Widget

- Touch and hold a Widget until you can move it around on the screen.
- Drag the Widget over the Delete tab and release it.
 As you place the Widget into the Trash, both items turn red.

Note: This action does not actually delete the Widget, it just removes it from the current Home screen.

Moving Icons in the Applications Menu

- 1. Press to activate the Home screen.
- 2. Tap to display your current applications.
- Press and tap View Type.
- Tap Customizable grid. A green circle will appear next to the option.
- 5. Press and tap Edit → OK (if necessary).

- Scroll through the list and locate the icon you wish to move.
- Touch and drag the icon to the position that you want. To move to a different page, drag the icon to the edge of the page until the page scrolls to the desired page.
- 8. Press and tap Save.
- 9. Press to return to the Home screen.

Adding and Removing Primary Shortcuts

The device comes with four Primary shortcuts: Phone, Contacts, Messaging, and Applications/Home. As long as the menu is displayed in a **Customizable grid**, you can replace the Phone, Contacts, and Messaging shortcuts with other applications so you access the shortcuts that are most frequently used.

- 1. Press and then tap (Applications).
- Press and then tap View Type → Customizable grid.
- 3. Press and then tap Edit → OK (if necessary). The application pages then appear at the top of the screen, the primary shortcuts appear at the bottom, and you have the option to also generate a new folder or page to house these application shortcuts.

- Scroll through the application pages at the top and locate the desired application.
- Touch and hold the on-screen icon, then drag it over one of the four primary shortcuts to replace it.
 - The new primary shortcut displays at the bottom of the screen. The previous primary shortcuts switches places with your selected icon.
- 6. Press and then tap Save.
- 7. Tap 1 to return to the Home screen.

Creating and Managing Folders

Folders are located on any of the seven available Home screens and can contain both files (such as data and images) and Contact information or entries.

To create a folder on-screen:

- 1. Press 📤 to activate the Home screen.
- 2. Navigate to the desired Home Page.
- 3. Touch and hold on an empty area of the screen.
- 4. From the Add to Home window tap Folders.
- Tap an available folder type to place it on your current screen.
 - Choices include New folder, All contacts, Contacts with phone numbers, Received list from Bluetooth, and Starred contacts.

Note: Starred contacts are those Contact entries tagged as very important.

Renaming a folder

- Tap the desired folder you want to rename. This opens its contents on an on-screen popup window.
- With the folder open, touch and hold the grey Folder title bar (top of the Folder window) until the Rename folder pop-up displays.
- 3. Enter a new title for this folder and tap Yes.

Changing the Wallpaper

You can change the Wallpaper (background) of your home screens by following these steps:

- 1. Press to activate the Home screen.
- 2. Touch and hold on an empty area of the screen.
- 3. From the Add to Home window tap Wallpapers.
- 4. Tap one of the following options:
 - Gallery: select a wallpaper from photographs you have taken with your camera.
 - Live wallpapers: select an animated wallpaper.
 - Wallpaper gallery: select from many still-life wallpapers.

5. Select a wallpaper and tap the **Set wallpaper** or **Save** icon.

Moving Home Screens

Your phone comes with seven Home screens. You can arrange the screens in any order that you want.

To move a Home screen, follow these steps:

- . Press 📤 to activate the Home screen.
- 2. Press and tap Edit.
- 3. Touch and hold the Home screen you want to move.



Drag it to the location that you would like to place it.
 In the following example, the Featured Apps Home screen is moved to the last position.

When you move a Home screen, the other Home screens will be re-ordered automatically.


5. Press 📤 to return to the main Home screen.

Adding and Deleting Home Screens

You can delete Home screens and then add Home screens later if you want.


To delete a Home screen:

- Press to activate the Home screen.
- 2. Press and tap Edit.
- 3. Touch and hold the Home screen you want to delete.
- 4. Drag it to the trash can located at the bottom of the screen.
- If there are items on the Home screen that you want to delete, the Home screen has items. Delete? prompt is displayed.
- 6. Tap Yes to remove the page, otherwise, tap No.
- 7. Press 🌣 to return to the main Home screen.

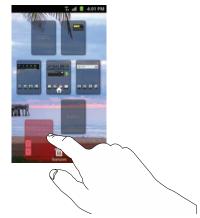

To add a Home screen:

- 1. Press 📤 to activate the Home screen.
- Press and tap Edit.
- Touch and hold the Home screen that contains and drag it to the new location.

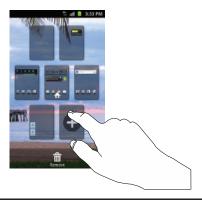

Note: The icon will only be displayed if a Home screen has previously been deleted.

Press to return to the main Home screen.
 You can now add items to your new Home screen.

Memory Card

Your device lets you use a microSD™ (SD) or microSDHC™ card to expand available memory space. This secure digital card enables you to exchange images, music, and data between SD-compatible devices. This section addresses the features and options of your device's SD functionality. The device has a USB SD card mode.

Using the SD Card

There are several methods for using the SD card:

- Connecting to your PC to store files (such as music, videos, or other types of files and media).
- 2. To activate the camera, video, music player, and other dependant media or applications.

Important! The Camera, Music Player, and Video functionality is all dependant on a mounted SD card. Your device can support SDHC cards of up to 32GB capacity.

SD Card Overview

After mounting an SD card in the device you can use your computer to access and manage the SD card.

Important! If access to the external SD card is not available, download and install the USB drivers.

Mounting the SD Card

To store photos, music, videos, and other applications. You must mount (install) the SD card prior to use. Mounting the SD card establishes a USB connection with your computer.

Important! You must disable USB storage to mount the SD card.

- Insert the SD card into the external, SD card slot. For more information, refer to "Removing and Installing the Memory Card" on page 6.
- Your SD card is scanned to see the available information on it

Unmounting the SD card

Unmounting the SD card prevents corruption and damage to the SD card while removing it from the slot.

- From the Home screen, tap
 → Settings → Storage.
- 2. Tap Unmount SD card.
- Tap **0K**.For more information, refer to "Removing and Installing the

Memory Card" on page 6. SD card Available Memory Status

To view the memory allocation for your external SD card:

- The available memory displays under the Total space and Available space headings.

Erasing Files from the SD card

- Ensure the SD card is mounted. For more information, refer to "Mounting the SD Card" on page 45.
- From the Home screen, tap
 → Settings → Storage.
- Tap Unmount SD card.
- 3. Tap Format SD card.
- At the Format SD Card confirmation prompt, tap Format SD Card.

Warning! Performing the next step erases all data stored on the SD card.

5. Tap Erase everything to format or press \supset to cancel.

Section 3: Call Functions

This section describes how to make or answer a call. It also includes the features and functionality associated with making or answering a call.

For more information, refer to "Call Settings" on page 158.

Displaying Your Phone Number

■ Tap → Settings → About phone → Status. Your phone number is displayed in the My phone number field.

Making a Call

- 1. From the Home screen, tap and use the on-screen keypad to enter the number you wish to dial.
- 2. Tap to make the call.

Note: When you activate the Auto redial option in the Voice Call menu, the phone will automatically redial up to 10 times when the person does not answer the call or is already on the phone. For more information, refer to "Call Settings" on page 158.

Making an International Call

- From the Home screen, tap , then touch and hold
 The + character appears.
- Use the on-screen keypad to enter the country code, area code, and phone number.
 - If you make a mistake, tap until the desired numbers have been deleted.
- Tap to make the call.

Manual Pause Dialing

To manually call a number with pause(s) without storing it in your Contacts list:

- From the Home screen, tap and use the on-screen keypad to enter the phone number.
- Press to display the dialer sub-menu.
- Tap Add 3 sec pause to add a three-second pause, and use the keypad to enter the additional numbers.

Tip: You can create pauses longer than three seconds by entering multiple 3 sec pauses.

- or -

Select **Add wait** to add a wait. A wait will pause the calling sequence until you enter a number or press a key.

4. Tap to make the call.

For more information, refer to "Adding Pauses to Contact Numbers" on page 67.

Correcting an Entered Number

Use the following steps to correct a mis-typed entry when dialing.

- After entering a number using the keypad:
 - If you make a mistake, tap to erase a single character.
 - Press and hold to erase the entire string of numbers.

Ending a Call

Tap the key.

Dialing a Recent Number

All incoming, outgoing and missed calls are recorded in the **Call log**. If the number or caller is listed in your Address Book, the associated name also displayed.

- 1. From the Home screen, tap 📞
- 2. Tap **Logs** 👼 .

A list of recent calls is displayed.

 Tap the desired Contact to enter the **Details** page, then tap to make a call.

Making a Call Using Speed Dial

You can assign a short cut number to a phone number in your Contacts List for speed dialing.

- 1. Tap tap \longrightarrow Contacts \square to display your Contacts List.
- 2. Press 🔳 to display the Contacts List sub-menu.
- Tap More → Speed dial setting.
- The Speed dial setting screen displays showing the numbers 1 through 9. The number 1 is reserved for Voicemail.
- 5. Tap an unused number.
- From the Contacts screen, select a contact to assign to the speed dial location. The selected contact number will display in the speed dial number box.
- To remove a speed dial number or change the order, press

 to display the Speed Dial sub-menu.
- Tap Change order or Remove.
- To make a call using Speed Dial, tap to access the Keypad, and from the Dialer, touch and hold the speed dial number

Making a Call from the Address Book

You can store phone numbers that you use regularly on the SIM card or in the phone's memory. These entries are collectively called the **Address Book**.

For further details about the **Address Book** feature, see "Finding an Address Book Entry" on page 68

Answering a Call

When a call is received the phone rings and displays the caller's phone number, or name if stored in the Address Book.

- At the incoming <u>call screen</u>:
 - Touch and slide to the right to answer the call.
 - Touch and slide to the left to reject the call and send it to your voicemail.
 - Touch and slide the Reject call with message tab upward and tap a predefined text message to send to the caller.
 - I'll call you in 5 minutes
 - I am in class now
 - I am in a meeting
 - Sorry, I am busy. Call back later.
 - or
 - Tap Create new message to compose a new message.



2. Tap 🔝 to end the call.

Note: You can answer a call while using the Address Book or other menu feature. After ending the call, the phone returns to the previously active function screen.

Dialing Options

From the Home screen and Application menus, you have the option to access the Dialer and initiate a call by tapping

➤ **Keypad.** From the Dialer and the Contacts screen, the following tabs are located at the top of your screen:

- Keypad: dials the current number entered using the on-screen keypad.
- Logs: displays a list of all dialed, received, and missed calls.
- Contacts: takes you to your Address Book where you can select a contact to call.
- Favorites: displays your contacts that you have marked as Favorites.
 Also displays frequently called numbers.
- Groups: displays the different groups that are set up on your phone.
 From this tab you can assign your contacts to default groups or create your own groups.

After you begin to enter numbers, the **Add to Contacts** option appears so you can save the Contact if needed.

Call Log

The phone stores the numbers of the calls you've dialed, received, or missed in the Call log. The Call log displays the details of the call.

From the Home screen, tap



Tap **Logs**

A list of recent calls is displayed. If the number or caller is listed in your Address Book, the associated name is displayed.

Each entry contains the phone number (if it is available) and Contacts entry name (if the number is in your Contacts).



Indicates all outgoing calls made from your device.



Indicates any received calls that were answered.



Indicates any received calls that were rejected.



Indicates a missed call.

Viewing Missed Calls from the Home Screen

The number of calls you have missed is displayed on the Home screen.

1. Tap the puzzle piece with the number of missed calls on it and move it to the area where the piece is missing.



Note: If there is a voicemail sent by the same number, associated icons are displayed and can then be selected.

The Call log is displayed. Missed calls are identified by the icon next to the number.

Calling Back a Missed Call

A list of recent calls is displayed. If the number or caller is listed in your Address Book, the associated name is displayed.

- Tap the desired missed call. The call detail page is displayed.
- 3. Tap 📞


Saving a Recent Call to your Address Book

- 2. Tap the call you want to save to your Address Book.
- The call detail page is displayed. Tap Create contact to add the call to your Address Book.

The Create contact screen is displayed.

- or -

If you want to replace the number for an existing contact, tap **Update existing**.

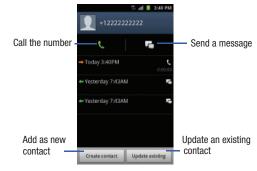

- 4. Enter information into the various fields using the keypad.
- 5. Tap Save when you are finished.

Note: By default, your contacts are automatically saved to your phone. To change where your contacts are saved to, from the main Contacts screen, press → More → Settings → Save new contacts to. Select Always ask, Phone, or Account.

For further details about the **Address Book** feature, see "Adding a New Contact" on page 65

Sending a Message to a Recent Call

- Tap the call you want to send a message to. The call detail page is displayed.
- 3. Tap 🗔
- **4.** At the Message screen, tap the empty text field and use the on-screen keypad to type in a message.
- When you are done with your message, tap Send.For more information, refer to "Creating and Sending Messages" on page 101.

Deleting a Call from the Call Log

- Touch and hold the call you want to delete from the Call log.
- Tap Delete.The call is deleted from the Call log.

Adding a Call to the Reject List

- 2. Touch and hold the call you want to add to the Reject List.
- Tap Add to reject list.
 Future calls from this number will be rejected and sent to your voicemail.

Call Duration

- From the Home screen, tap 📞
- 2. Tap Logs 👼 .
- 3. Press 🔳 to display the Call log sub-menu.
- 4. Tap Call duration.
- 5. The following times are displayed for Voice and Data:
 - Last call: shows the length of time for the last call.
 - Dialed calls: shows the total length of time for all calls made.
 - . Received calls: shows the total length of time for all calls received.
 - All calls: shows the total length of time for all calls made and received.
- **6.** You may reset these times to zero by pressing then tapping **Reset**.

Options During a Call

Your phone provides a number of control functions that you can use during a call.

Adjusting the Call Volume

During a call, to adjust the earpiece volume, use the **Volume** keys on the left side of the phone.

Press the Up volume key to increase the volume level and press the Down volume key to decrease the volume level.

From the Home screen, you can also adjust the ringer volume using these same keys.

In-Call Options

During an active call there are several functions available by tapping a corresponding on-screen button.

- Hold: place the current active call on hold.
- Add call: displays the dialer so you can call another person.
- Keypad: displays the on-screen keypad, where you can enter number using DTMF (Dual Tone Multi-Frequency).
- End call: terminates the call.
- Speaker: routes the phone's audio through either the speaker or through the earpiece.

- Tap Speaker to route the audio through the speaker. (You can adjust
 the speaker volume using the volume keys.) A green line will appear
 under the Speaker button.
- Tap Speaker again to use the phone's earpiece (see "Using the Speakerphone During an Active Call" on page 57) The green line will turn grey when Speaker is not activated.
- Mute/Unmute turn the onboard microphone either on or off.
 - Tap Mute during a call to mute the microphone. A green line will appear under the Mute button.
 - Tap Mute again to unmute the microphone. The green line will turn grey when Mute is not activated.
- Headset connects to a Bluetooth headset.
 - Tap Headset during a call to activate a Bluetooth headset. A green line will appear under the Headset button.
 - Tap Headset again to de-activate the Bluetooth headset. The green line will turn grey when the Headset is not activated.
- Press for more options:
- Contacts: allows you to go to your Contact list.
- Memo: allows you to jot down a memo during a call.
- Noise Suppression On/Off: allows you to turn on the Noise Suppression feature when you are in a noisy area. Turn it Off when not needed to conserve battery power.

Placing a Call on Hold

You can place the current call on hold at any point during a conversation. You can also make another call while you have a call in progress if your network supports this service.

- While on a call, tap Hold II. This action places the current caller on hold (which is displayed on-screen as a greyed-out box).
- 2. You can later reactivate this call by tapping Unhold.

To make a new call while you have a call in progress

- 1. Tap Hold III
- 2. Tap Add call to display the dialer.
- Enter the new number and tap
 Once connected, the active call will appear in a large box
 in the middle of your screen and the call on hold will
 appear in a small box in the upper right corner of your
 screen.

Switching Between Calls

When you have an active call and a call on hold, you may switch between the two calls, changing the one on hold to active and placing the other on hold.

- 1. Tap Swap Swap
 - The current call (caller #2) is placed on hold and the previous call on hold (caller #1) is then reactivated so that you can continue conversing with that person. The active call will appear in a green box.
- 2. Tap 🔝 to end the currently active call.

To end a specific call

- Tap Swap until the call you want to end appears in a green box.
- Tap to end the specific call.
- Tap to end the remaining call.

To answer a call while you have a call in progress

- 1. Tap and slide to the right to answer another call.
- 2. Tap an option from the on-screen menu:
 - Put xxx on hold to place the previous caller on hold while you answer the new incoming call.
 - End xxx to end the previous call and answer the new call.

Note: The new caller appears at the top of the list. The previous caller is placed on hold and appears at the bottom of the list.

Tap Swap to switch between the two calls. This
places the new caller on hold and activates the previous
call.

Important! The currently active call is displayed with a green background.

- 4. Tap **Swap** again to switch back.
 - Swap: Places the current call on hold and then activates the previous call. The active call will appear in a green box. Tap Swap again to switch back.

To end a call on hold

- Tap to disconnect the active call.
- The call on hold will now become the active call. Tap to end the call.

3-Way Calling (Multi-Party Calling)

The 3-Way or Multi-Party feature allows you to answer a series of incoming calls and place them on hold. If this service is supported by the network, all calls can be joined together. You are notified of an incoming call by a call waiting tone.

Note: The Merge option combines all of the calls you have established with your phone (both active and on hold).

Swap places the current call on hold and then activates the previous call.

- From the Home screen, tap
- Dial the number for the first participant and tap ______.
 Tap Add call _____, enter the second phone number and
- Tap Add call , enter the second phone number and tap . The first caller is placed on hold.
- 4. Wait for the second caller to answer the incoming call and tap Merge The two calls are now joined into a multi-party call and display in the order in which they were called.

Important! A maximum of two callers can be joined to a single multi-party line. Additional callers participate in a new Multiparty session and are held in conjunction with the previous multiparty call. You can swap or place each multi-party call on hold.

Dropping One Participant

- 1. Press and then tap Manage conference call.
- Tap End to the right of the number to drop.
 The participant is disconnected and you can continue the call with the other participant.
- 3. Tap to end your conversation with the remaining caller

Using the Speakerphone During an Active Call

While in an active call, it is possible to enable the speakerphone feature.

- Tap Speaker Speaker .
 The Speaker button now appears as Speaker and the speakerphone is activated.
- Use the Volume keys (located on the left side of your phone) to adjust the volume.

To deactivate the speakerphone, tap Speaker



Switching off the Microphone (Mute)

You can temporarily switch your phone's microphone off, so that the other person cannot hear you.

Example: You wish to say something to person in the room, but do not want the person on the phone to hear you.

To mute your phone during a call

- Tap Mute _______.

 The Mute button now appears as
 - The **Mute** button now appears as _____ and Mute is activated.
- 2. Tap **Mute** to deactivate the Mute function and reactivate the microphone.

Bluetooth headset

Note: The Bluetooth feature should first be enabled and paired before initiating this type of connection.

- 1. Tap Headset Headset
- The phone will scan for your Bluetooth headset. When found, connect to the headset.

The **Headset** button now appears as Headset and the Bluetooth headset is activated.

 Tap Headset to deactivate the Bluetooth headset and reactivate the phone speaker.

Searching for a Number in Address Book

- During the active call, press then tap Contacts.
- Tap the Address Book entry.

For further details about the **Address Book** feature, see "Finding an Address Book Entry" on page 68

Call Waiting

The Call Waiting feature allows you to answer an incoming call while you have a call in progress, if this service is supported by the network, and you must first activate the Call Waiting feature:

Tap → Settings → Call → Additional settings →
 Call waiting.

You are notified of an incoming call by a call waiting tone.

Section 4: Entering Text

This section describes how to select the desired text input method when entering characters into your phone. This section also describes the predictive text entry system that reduces the amount of key strokes associated with entering text.

Your phone comes equipped with an orientation detector that can tell if the phone is being held in an upright (Portrait) or sideways (Landscape) orientation. This is useful when entering text.

Text Input Methods

There are three text input methods available:

- Samsung Keypad: Samsung's on-screen QWERTY keypad that can be used in both portrait and landscape orientation.
- Swype: a new way to enter text on touch screens. Instead of tapping each key, use your finger to trace over each letter of a word.

To change the input method, see "Select input method" on page 172

Entering Text Using the Samsung Keypad

The Samsung Keypad is an on-screen QWERTY keypad similar to the Android Keyboard with several minor differences.

- From the Home screen, tap Applications → Settings
 Language and keyboard → Select input method.
- 2. Tap the Samsung keypad option. A green circle will appear.

For information on changing Samsung Keypad settings, see "Samsung Keypad settings" on page 173.

From a screen where you can enter text, rotate your phone counterclockwise to a Landscape orientation. The on-screen QWERTY keypad will display.



Text Input Mode

Changing the Text Input Mode - Keypad

There are two main keypad layout keys that will change the onscreen keys within the QWERTY keypad.

The available Text Input modes are: Symbol and Abc.

?123

Symbol/Numeric Mode: activates the number, symbol, and emoticon keys.



ABC Mode: activates the default alphabet keys. Can also be set to Abc or abc by using the shift (key.) key.

Note: When in Abc mode, the Sym button will appear. When in Sym mode, the Abc/ABC/abc button will appear.

With Samsung keypad as your text entry method, select one of the following text mode options:

- **Abc**: to use alphabetic characters from the on-screen keyboard. In this mode, the text mode button displays **2123**.
- Symbol/Numeric: to enter numbers by pressing the numbers selecting them on the on-screen keyboard. In this mode, the text mode button displays ABC.

There are up to 3 available pages of numeric symbols available by tapping 1/3.


Using ABC Mode

- If desired, rotate your phone counterclockwise to a Landscape orientation.
- When you tap the Tap to enter message field, the following screen displays:



- 3. Tap the desired alphabetic characters.
- The screen initially opens in ABC mode. After typing the first letter, the shift key will change to and following letters will be lowercase.
- twice to switch to ABC mode. The shift key will change to in ABC mode. All following letters will be uppercase until you tap the shift key again.



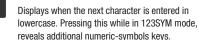

1

Initial Uppercase

Displays when the first character of each word is entered as uppercase but all subsequent characters are lowercase.

1

All Uppercase

Displays when all characters will be entered as uppercase characters.

Using Symbol/Numeric Mode

Use Symbol/Numeric Mode to add numbers, symbols, or emoticons.

- Rotate your phone counterclockwise to a Landscape orientation.
- Tap ²¹²³ at the bottom of the screen to activate the Symbol/numeric mode. The following screen displays:



- 3. Tap the desired number, symbol, or emoticon characters.
- 4. Tap the 1/3 button to access additional symbols.
- 5. Tap ABC to return to Abc mode.

Using XT9 Predictive Text

XT9 is a predictive text system that has next-letter prediction and regional error correction, which compensates for users pressing the wrong keys on QWERTY keyboards.

 In the text portion of the message screen, begin typing a word. A list of word options is displayed. Tap one of the words to replace the word that has already been typed or scroll the line of words to the left for more word choices.



 Continue typing your message. Tap Send to send the message or press for more options. For more information, refer to "Creating and Sending Messages" on page 101.

Note: You can also use XT9 mode in the portrait orientation.

Entering Text Using Swype

Swype $^{\text{TM}}$ is a text input method that allows you to enter a word by sliding your finger or stylus from letter to letter, lifting your finger between words. Swype uses error correcting algorithms and a language model to predict the next word. Swype also includes a tapping predictive text system.

Enabling and Configuring Swype

The Samsung keypad is the default text input method, so to use Swype, you must first change the default keyboard setting.

- From the Home screen, tap Applications → Settings
 Language and keyboard → Select input method.
- Tap the Swype option. A green circle should appear next to Swype.
- 3. Press \supset to return to the previous menu.

Configure Swype Settings

- Tap one of the following Swype settings to activate the setting:

Select Input Method

Allows to select the current input method. Choose from either **Samsung keypad** or **Swype**.

How to Swype

Provides an on-screen list of accessible tutorial topics related to Swype.

Personal Dictionary

Allows you to manage your own personal dictionary of user defined terms.

Use the "+" or "-" buttons to either add or remove your terms from this dictionary.

Preferences

Allows you to view or modify your Swype options and parameters.

- Audio feedback: turns on sounds generated by the Swype application.
- Vibrate on keypress: activates a vibration sensation as you enter text using the keypad.
- **Show tips**: activates helpful on-screen tips for Swype usage.
- Auto-spacing: automatically inserts a space between words.
 When you finish a word, just lift your finger or stylus and start the next word.
- Auto-capitalization: automatically capitalizes the first letter of a sentence.
- Show complete trace: displays the complete trace as you swipe across the screen.

- Word suggestion: uses a built-in word database to suggest words while entering text in Swype.
- Speed vs. accuracy: sets how quickly Swype responds to onscreen input. Move the slider between Fast Response (speed) or Error Tolerance (accuracy) and tap OK.
- Reset Swype's dictionary: deletes all words you have added to Swype's current dictionary.
- Version: provides the current software version for the Swype application.

Language Options

Language: allows you to select the current text input language.
 Default language is US English.

Swype Text Entry Tips

You can access the SwypeTips application and watch a video or tutorial on using Swype. You can also use the following Swype text entry tips.

- Create a squiggle (like an S shape) to create a double letter (such as pp in apple).
- Touch and hold a key to view the punctuation menu then make a selection.
- Move your finger or stylus over the apostrophe to enter contractions.

 Double-tap on the word you want to change to correct a misspelled word, then tap the delete key to erase one character. Touch and hold the delete key to erase an entire word.

Using the Voice to Text Feature

You can use your voice to enter text using the Voice to Text feature.

- 1. From any messaging screen, tap
- At the Speak now prompt, speak clearly and distinctly into the microphone.
- Working... is displayed while the software is converting your voice to text.
- 4. The text is displayed in the message.

Note: The feature works best when you break your message down into smaller segments.

Section 5: Contacts and Your Address Book

This section allows you to manage your daily contacts by storing their name and number in your Address Book, Address Book entries can be sorted by name, entry, or group.

Note: When storing an Address Book entry into your SIM card, note that only the name, phone number, group, and slot location are initially offered as fields (some SIM cards may allow an address as well). Although you may add additional fields to a SIM entry; if you move that same SIM card to another model phone, it is possible that only the basic information will be transferred.

Adding a New Contact

Use the following procedure to add a new contact to your Address Book

Saving a Number from the Home screen

1. From the Home screen, tap \longrightarrow Contacts \longrightarrow \longrightarrow (Create new entry).







- Tap the image icon and assign a picture to the new entry by choosing one of three options:
 - **Album** to retrieve a previously stored image from your Pictures folder and assign it to this entry. Tap an image to assign the image to the contact, then tap Save.
 - Take photo to use the camera to take a new picture and assign it to this entry.
 - Remove icon although not an option with a new entry, deletes any previously assigned image on an existing contact.
- 3. Tap the First name and Last name fields and use the onscreen keypad to enter names for each entry. For more information, refer to "Entering Text" on page 59.
- Tap next to the **Last name** field to display additional name fields.

Tap the Phone number field.

The numerical keypad is displayed.

The **Mobile** button Mobile initially displays next to the **Phone number** field. If you want to add a phone number that is not a mobile number, tap the **Mobile** button and select from **Mobile**, Home, Work, Work Fax, Home Fax, Pager, Other, Custom (add your own label), or Callback.

6. Enter the phone number.

Tap to add another Phone number field or tap tdelete a field.

- Tap the Internet call field and use the keypad to enter an internet address.
- 8. Tap the Email address field.

The keypad is displayed.

The **Work** button wark initially displays next to the **Email** address field. If you want to add an Email address that is not a Home email address, tap the **Work** button and select from Work, Home, Mobile, Other, or Custom (add your own label).

9. Enter the Email address.

Tap • to add another Email address field or tap • to delete a field



The QWERTY keypad is displayed.

The Google Talk button initially displays next to the Instant msg field. If you want to add an instant message address that is not Google Talk, tap the Google Talk button and select from Google Talk, AlM, Windows Live, Yahoo!, Skype, QQ, ICQ, Jabber, or Custom (add your own label).

11. Enter the IM address.

Tap to add another Instant msg address field or tap to delete a field.

- 12. Tap any of the following fields that you want to add to your new contact:
 - Groups: assign the contact to Family, Friends, or Co-workers.
 - Ringtone: adds a field used to assign a message tone that will sound when messages are received from this contact. Choose between Default ringtone, Select sound from My files, or Phone ringtone.

- Postal address: adds a field used to assign a physical postal address for this entry.
- Organization: adds an organization field for this entry.
- More: Tap 💙 to add the following fields:
 - Notes: adds a field that allows you to jot down notes.
 - Nickname: adds a field that can be used to enter a nickname for the entry. The Nickname is not displayed when calls are made to or received from the contact.
 - Website: adds a field for the contact's Web site URL.
 - Birthday: adds a field for the contact's birthday.
 - Anniversary: adds a field for the contact's anniversary.
- 13. Tap Save to save the new contact.

Note: By default, your contacts are automatically saved to your phone. To change where your contacts are saved to, from the main Contacts screen, press

→ More → Settings → Save new contacts to. Select Always ask, Phone, or Account.

Adding Pauses to Contact Numbers

When you call automated systems, you are often required to enter a password or account number. Instead of manually entering the numbers each time, you can store the numbers in your Contacts along with special characters called pauses and waits. A pause will stop the calling sequence for two seconds and a wait will pause the calling sequence until you enter a number or press a key.

To add a pause or a wait to a Contact:

- From the Home screen, tap
 → Contacts , and then tap the name or number to open the Contact.
- 2. Tap Edit.
- 3. Tap the phone number field.
- Touch ad hold the screen at the position where the pause or wait needs to be added.
- If not already enabled, select Samsung keypad and the text input option. The ability to add a wait or pause is only available within this text input method.
- 6. Tap ?#+ .

- 7. Tap Pause to add a three-second pause or tap Wait to add a wait, and use the keypad to enter the additional numbers. A pause will be displayed as a comma (,) and a wait will be displayed as a semi-colon (;). For more information, refer to "Manual Pause Dialing" on page 48.
- 8. Tap Save to store your changes.

Editing an Existing Contact

When editing an existing contact, you can tap a field and change or delete the information, or you can add additional fields to the contact's list of information.

- 2. Tap Edit.
- 3. Tap 🛑 to add a new field and tap 🛑 to delete a field.
- 4. Tap any of the fields to add, change, or delete information.
- 5. Tap **Save** to save the edited information.

Using Contacts

Dialing or Messaging from Address Book

Once you have stored phone numbers in the Address Book, you can dial them easily and quickly by either using their SIM card location number or by using the Search field to locate the entry. From the Address book, you can also send messages.

Finding an Address Book Entry

You can store phone numbers and their corresponding names onto your SIM card and phone's onboard memory. The two locations are physically separate but are used as a single entity, called the Address Book.

Depending on your particular SIM card, the maximum number of phone numbers the SIM card can store and how they are stored may differ.

- 1. From the Home screen, tap \longrightarrow Contacts \boxtimes .
- Within the Contacts list (sorted alphabetically), tap a letter on the right side of the display to quickly jump to the contacts beginning with that letter.



- 3. Tap the contact you wish to call or message.
- Tap the phone icon to make a phone call or tap the message icon to send a message.

For more information, refer to "Creating and Sending Messages" on page 101.

Tip: From the Contact list, sweep right over a listing to make a call. Sweep left over a listing to send a message.

Joining Contacts

Joining Contact Information

Many people now maintain multiple email accounts, social networking logins, and other similar account information. For example, a Facebook account login name might differ from a corporate email account login because they are maintained separately and for different groups of people.

This device can synchronize with multiple accounts such as Facebook, Twitter, MySpace, Corporate email, and Google. When you synchronize your phone with these accounts, each account creates a separate contact entry in the Contacts list.

If one of your contacts (Amy Smith, for example) has a regular email account that you maintain in Gmail, but also has a Facebook account under her maiden and married name, as well as a Yahoo! chat account, when you merge these accounts into your Contacts list you can join all of her entries and view the information in one record.

The next time you synchronize your phone with your accounts, any updates that contacts make to email account names, email addresses, etc. automatically update in your contacts list.

For more information about synchronizing accounts, see "Synchronizing Accounts" on page 71.

- From the Home screen, tap \longrightarrow Contacts $\boxed{\mathbb{N}}$.
- Tap a contact name (the name you want to join to another entry). Note: typically this is the same contact with a different name or account information.
- From the Details page, press
 → Join contact.
 The contact list is displayed.
- 4. Tap the second contact entry (the entry in which to join). The second contact is now joined with the first and the account information is merged into one screen.

Note: The information is still maintained in both entries, but displays in one record for easier viewing when you join the contacts.

5. Tap the joined contacts bar to view the contact information you joined. The contacts and information displays with an icon next to the contact name to indicate what type of account information is contained in the entry.

Unjoining a Contact

- 1. From the Home screen, tap \longrightarrow Contacts \square .
- Tap a contact name (the account name from which you want to unlink an entry). Note: typically this is the same contact with a different name or account information.

- . Tap the joined contacts bar.
- Tap the minus sign next to entry in which you want to unjoin. The contact is now separated and no longer displays in the merged record screen.

Marking a Contact as Default

When you use messaging type applications, the application needs to know which information is primary (default) in a contact entry list. For example, you may have three different contact records for John Smith, so the application will be looking for the "default" number or entry.

- Tap a Contact name.
- 4. To change the default contact, tap the radio button next to another entry that you want to be the default. The radio button will turn green, then tap Save.

Synchronizing Accounts

From the Accounts menu you decide if you want applications to synchronize, send, and receive data at any given time, or if you want the applications to synchronize automatically. After determining how you want the accounts to synchronize, indicate which account to synchronize with your Contacts list.

- From the main Contacts list, press

 then tap More → Accounts.
- 3. Determine which type of account information you want to synchronize with your Contact list. Selections are:
 - Background data: (applications that sync. send. and receive data any time).
 - Auto-sync: allows applications to automatically synchronize.
- Tap Sync all.

Address Book Options

You can access Address Book options while at the main Address Book page or while in the details page for a specific entry.

Options in Address Book

- 1. From the Home screen, tap \longrightarrow Contacts \square then press 🖃
- The following options display:
 - **Delete:** allows you to delete 1 or more of your contacts.
 - My profile: allows you to set up a profile for yourself. The information will be the same that you can add for a new contact. For more information, refer to "Adding a New Contact" on page 65.
 - Sync contacts: allows you to sync your contacts with your accounts.
 - Merge with Google: allows you to merge your contacts together with your Google account contacts.
 - Import/Export: allows you to move contacts to or from your memory card. You can also send a namecard via Bluetooth, Email, Gmail, or Messaging.
 - View SNS Friends: allows you to get contacts from your friends on Facebook, LinkedIn, Microsoft Exchange ActiveSvnc, or Google. Tap Add account and then follow the on-screen instructions.

- **More**: the following additional options are displayed:
 - Accounts: allows you to add and manage mobile accounts on Facebook, Twitter, or MySpace. You can also add Corporate or Google accounts. Tap Add account and then follow the on-screen instructions.
 - Speed dial setting: allows you to set up speed-dialing. For more information, refer to "Making a Call Using Speed Dial" on page 49.
 - Send email: allows you to send an email using your Google account.
 - **Send message**: allows you to send a text or picture message.
 - SIM Management: allows you to copy contacts from your phone to your SIM card or from your SIM card to your phone.
 - Display options: You can choose to only display contacts that have
 phone numbers, sort by first or last name, display contacts by first
 name first or last name first, display contacts stored on your phone,
 and/or display contacts stored to other accounts. Tap a selection and
 tap Done.
 - Settings: allows you to configure where you save new contacts to, or view your service numbers, or send contact information. Options include: Save new contacts to (Alaways ask, Phone or SIM), Service numbers, or Send contact (send either select or all Contacts entries via Bluetooth).

Options at Selected Contact Screen

- From the Home screen, tap

 → Contacts

 L
 .
- Tap a contact and at the contact's display screen, press
- The following options are displayed:
 - Edit: allows you to edit the selected contact's information.
 - Delete: allows you to delete the contact from your Address Book.
 - Join contact: allows you to join contacts with other contacts (only displays when contact is saved to SIM).
 - Mark as default: when you have multiple contacts linked together, you can mark one of them as default (only displays when contact is saved to the phone). For more information, refer to "Marking a Contact as Default" on page 70.
 - Send namecard via: allows you to send the contact's information via Bluetooth, Email, Gmail, Messaging, or Wi-Fi Direct.
 - More: displays the following additional options:
 - Add to reject list: allows you to add this contact to your reject list. If they call, the call will be sent directly to voice mail.
 - Print namecard: allows you to print the contact's namecard to a compatible Samsung printer using Wi-Fi.

Groups

Adding an Entry to a Group

- 1. From the Home screen, tap \longrightarrow Contacts \square .
- Press and hold the contact name that you want to add to a group.
- Tap Add to group.
- Tap a group entry.The contact is added to the group.

Removing an Entry From a Group

- From the Home screen, tap → Contacts → Groups ...
- 2. Tap a group entry.
- 3. Press → Remove member.
- Tap all of the contacts you want to remove from this group.A green checkmark will appear next to their name.
- Tap Remove.

The contacts are now removed from the group.

Creating a New Group

- Tap the Group name field and use the on-screen keypad to enter a new group name. For more information, refer to "Entering Text" on page 59.
- Tap Ringtone to choose an audio file for assignment to this new group. Choose from Default ringtone, Select sound from My files, or Phone ringtone.
- Tap Add member to add contacts to the new group.
- 5. Tap Save to store the new Group category.

Editing a Caller Group

To edit a Group entry, there must be at least one member as part of the selected group.

- 2. Tap a group entry.
- Press → Edit group.
- 4. Make modifications to the **Group Name** or **Ringtone** fields.
- 5. Tap Add member to add more contacts to this group.
- **6.** Tap **Save** to save your changes.

Address Book Favorites

Once you have stored phone numbers in the Address Book, you can add them to your Favorites list.

To view your Favorites list:

Adding Favorites to your Address Book

- Within the Contacts list, touch and hold a contact that you want to add to your favorites list.
- 3. Tap Add to favorites on the displayed list.
- A gold star will appear next to the contact in the Address Book.

Removing Favorites from your Address Book

- . From the Home screen, tap \bigoplus \rightarrow Contacts $\boxed{\square}$.
- Within the Contacts list, touch and hold a contact that you want to remove from your favorites list. Contacts in your Favorites list will have a gold star.
- 3. Tap Remove from favorites on the displayed list.
- The gold star will no longer appear next to the contact in the Address Book.

Managing Address Book Entries

You can copy, delete, and view the memory status for the Phone and SIM entries on your phone.

Copying an Entry to the SIM Card

Note: When storing an Address Book entry into the SIM card, note that only the name, phone number, group, and slot location are initially offered as fields (some SIM cards may allow an address as well).

Important! To save additional information for a particular contact, such as other phone numbers, or e-mail, it is important to add new fields to that Contact information. It is also important to note that if you move the SIM card to another phone that does not support additional fields on the SIM card, this additional information may not be available.

- From the Home screen, tap → Contacts → → → More → SIM Management.
- 2. Tap Copy Contacts to SIM.

The phone then displays a list of your current phone contacts.

- Tap the contacts to place a checkmark adjacent to those entries you wish to have copied to the SIM card.
 - Repeat this step for all individual entries you wish copied to the SIM
 or tap Select all to place a checkmark alongside all entries.
- **4.** Tap **Copy**.
- At the Copy Successful display, tap OK.The selected numbers are copied to the SIM card.

Copying an Entry to the Phone

- From the Home screen, tap → Contacts → → More → SIM Management.
- 2. Tap Copy Contacts from SIM.

The phone then displays a list of your current contacts stored on your SIM card.

- Tap the contacts to place a checkmark adjacent to those entries you wish to have copied to your phone.
 - Repeat this step for all individual entries you wish copied to your phone or tap Select all to place a checkmark alongside all entries.
- Tap Copy.
- At the Copy Successful display, tap OK.The selected numbers are copied to your phone.

Deleting Address Book Entries

You can delete Phone or SIM entries from your phone's memory.

- From the Home screen, tap \longrightarrow Contacts \square .
- Within the Contacts list, touch and hold a contact that you want to delete.
- Tap Delete on the displayed list.
- At the Delete prompt, tap OK to delete the contact or Cancel to exit.

Using the Service Dialing Numbers

You can view the list of Service Dialing Numbers (SDN) assigned by your service provider. These numbers may include emergency numbers, customer service numbers, and directory inquiries.

- From the Home screen, tap → Contacts → → More → Settings.
- Tap Service numbers.
- **3.** Scroll through the available numbers (if available).
- 4. Tap an entry to make a call.

Note: This menu is available only when your SIM card supports Service Dialing Numbers.

Section 6: Multimedia

This section explains how to use the multimedia features of your phone, including Music player, Video Player, Gallery, Camera, and Camcorder.

Music

The Music Player is an application that can play music files. The music player supports files with extensions AAC, AAC+, eAAC+, MP3, WMA, 3GP, MP4, and M4A. Launching the Music Player allows you to navigate through your music library, play songs, and create playlists (music files bigger than 300 KB are displayed).

Playing Music

- Read the Music Player tips and tap Done when you are finished. Tap the Do not show again field if you don't want to see the tips again.
- Tap a library category at the top of the screen (All, Playlists, Albums, or Artists) to view the available music files
- Scroll through the list of songs and tap an entry to begin playback.

- 5. The following Music Player controls are available:
 - Pause the song.
 - Start the song after being paused.
 - Press and hold to rewind the song. Tap to go to previous song.
 - Press and hold to fast-forward the song. Tap to go to next song.
 - Volume control.
 - Repeat one: repeats the currently playing song.
 - Repeat all: replays the current list when the list ends.
 - A Play All: plays the current song list once.
- Shuffle On: the current list of songs are randomly shuffled for playback.
- Shuffle Off: songs play in order and are not shuffled.
- Allows you to listen to music using 5.1 Virtual Surround Sound.
- Displays your list of songs.

Note: The 5.1 channel sound effect works in earphone mode only.

Playing Background Music

You can play either a single song or a playlist and then choose to launch a separate application or screen. The music continues to play in the background and is easily accessible via the Notification bar area at the top of the screen.

- 2. Launch a selected song or playlist.
- 3. Press 📤 Home to display the Home screen.
- 4. Access the controls from the Notification bar.



Note: The playback controls also appears within the Lock screen.

Music Player Options

To access additional options:





- Add to quick list: adds the current music file to the Quick list.
- Via Bluetooth: scans for devices and pairs with a Bluetooth headset.
- Share music via: allows you to share your music by using AllShare, Bluetooth, Email, Gmail, Messaging, or Wi-Fi.
- Add to playlist: allows you to add the current music file to a selected playlist.
- **Settings**: allows you to change your music player settings.
- Details: allows you to view media info such as Title, Biography, Discography, and other information.

Music Player Settings

The Music player Settings menu allows you to set preferences for the music player such as whether you want the music to play in the background, sound effects, and how the music menu displays.

- From the Home screen, tap \longrightarrow Music \bigcirc .



- Press

 → Settings.
- Select one of the following settings:
 - Equalizer: set a type of equalization. Selections are: Auto, Normal, Pop, Rock, Jazz, Dance, Classic, Live, or Custom.
 - **Sound effect**: configure the music effects. Selections are: Normal. Wide, Concert hall, Music clarity, Bass enhancement, or Externalisation
 - Music menu: this menu allows you to select which categories you want to display. Choices are: Albums, Artists, Genres, Folders, Composers, Years, Most played, Recently played, or Recently added. Tap each item that you want to display in the Music menu.
 - Visualization: when activated the music player displays an animated display.

Using Playlists

Playlists are used to assign songs to a list of preferred media which can then be grouped into a list for later playback. These Playlists can be created via either the handset's Music player options menu or from within a 3rd party music application (such as Windows Media Player) and then downloaded to the handset.

Creating a Playlist

- From the Home screen, tap
 → Music
 →.



- Tap the Playlists tab.
- Press

 → Create.
- Type a name for this playlist in the field and tap **Save**.

Adding Music to a Playlist





- Tap the **Playlists** tab.
- Tap the playlist name in which to add music.
- Tap Add music.
- Tap a music file, or tap **Select all** to add all the music tracks to this playlist then tap Add.

Removing Music from a Playlist

From the Home screen, tap \longrightarrow Music \bigcirc .





- Tap the Playlists tab.
- Tap the playlist name in which to delete music.
- Press

 → Remove.
- Tap the checkbox to the right of each track you want to remove from this playlist, or tap Select all to remove all the music tracks from this playlist, then tap Remove.

Editing a Playlist

Besides adding and removing music files in a playlist, you can also rename the playlist.

- From the Home screen, tap \longrightarrow Music \bigcirc .
- Tap Playlists.
- Press

 → Edit.
- Tap a playlist name to edit.
- Tap the **Name** field for the selected playlist, enter a new name for the playlist then tap Save.

For information on downloading music for your phone, see "Play Store" on page 143.

Play Music (Google Music)

Also known as Google Music, allows you to browse, shop, and playback songs purchased from the Play Store. The music you choose is automatically stored in your Google Music library and instantly ready to play or download.

The Play Music application contains a music player that plays music and other audio files that you copy from your computer.

- The Play Music app searches both your online library and your device's internal storage for music and playlists: this can take from a few seconds to several minutes. depending on the amount of new music added since you last opened the application. It then displays a carousel view of your new and recent music, organized by album.
- Swipe left or right to browse through your new and available music. Music, albums, and artists are grouped into categories.
- Tap an on-screen album to open it and begin playback.

Return to the Library screen from most other screens in the Music application by tapping the Music application (Music notification icon) at the top-left of the Application bar.

Changing Library View

To can change the way you view the contents of your library:

- From the Home screen, tap → Play Music
- While in a category entry, tap
 - or -

Tap the tab name near the top-left of the Application bar to back up to the main Music App menu.

Available tabs include: **RECENT. ARTISTS. ALBUMS. SONGS.** PLAYLISTS, or GENRES.

Note: The contents of your library display in a scrolling grid or list view, depending on the view.

Searching for Music in Your Library

- From the Home screen, tap → Play Music 📊
- (Search) to search through your available songs. - or -
 - Press Q
- Type the name of an artist, album, song, or playlist. Matching songs are displayed in a list below the search box.
- Tap a matching song to play it, tap a matching album. artist or playlist to view a list of its' songs.

Changing Music Settings

- From the Home screen, tap
 → Play Music



- Press and then tap Shuffle all.
 - Shuffle all: Play all songs in a random order.

Listening to Music

You can listen to music by using your device's built-in speakers. through a wired headset, or through a wireless Bluetooth stereo headset.

Press the volume keys on the side of the device to activate on-screen volume control, then touch and drag on the scale to set volume.

Plaving Music

From the Home screen, tap \longrightarrow Play Music \bigcirc .



Tap a song in your library to listen to it.

- or -

While viewing a list of songs, tap next to a song and tap Plav.

- or -

While viewing a list of albums, artists, playlists, or genres. the label area under an item and tap Play.

The Now playing screen opens and the song you touched or the first song in the album or playlist starts to play. The tracks in the current list play in order until you reach the

end of the list (unless you choose a repeat option). Otherwise, playback stops only if you stop it, even when you switch applications.

Note: If you navigate away from the Now playing screen in the Music application, the Now Playing bar appears at the bottom of the screen.

Displaying the Now Playing Screen

If you navigate away from the **Now playing** screen, to return to the Now playing screen from other Music screens:

Tap the name of the current song in the Now Playing bar. – or –

(Music notification icon) in the System bar, and in the Status Details opens, tap the song title. You can also pause and resume playback and skip to the next or previous song in the panel.

Tab Options

There are various options available from the various tabs:

- I. From the Home screen, tap $\bigoplus \rightarrow$ Play Music \bigcap .
- Select one of the following tabs and tap to access an available option.
 - **RECENT:** to display the most recently played songs and albums
 - ARTISTS: Play, Add to playlist, or Shop for artist.
 - ALBUMS: Play, Add to playlist, More by artist, Shop for artist, or Search
 - SONGS: Play, Add to playlist, Delete, Shop for artist, Delete, or Search.
 - PLAYLIST: Play, Rename, or Edit.
 - GENRES: Play, Add to playlist, More by artist, Shop for artist, or Search.

Options While Playing a Song

When you play a song, the **Now playing** screen displays. There are various options and controls available while a song is playing:

- . From the Home screen, tap 册 → Play Music 😱 .
- 2. Tap an album or song.
- During playback, press to display the following options:
 - Settings: Allows you to view information such as Open source licenses, Help, and Music version.
- Tap → Add to playlist to add the song to a playlist.
 or -

From the bottom of the playback window, tap

Add to playlist to add the song to a playlist.

- 5. Tap the ARTIST name to view songs related to this artist.
- Tap the ALBUM name to view or play other songs on the album.

The **Now playing** screen contains several buttons that you can tap to control the playback of songs, albums, and playlists:



Tap to go back to the previous song. Touch and hold to scan backward through the current song.



Tap to resume playback



Tap to pause playback.



Tap to advance to the next song. Touch and hold to scan forward through the current song.



When Shuffle mode is enabled via **Show Options**, songs play in random order. When disabled (as shown), songs play in the order they appear in List view. Also visible when is tapped.



When Shuffle mode is enabled via **Show Options**, songs play in random order. When enabled, songs play in random order. Also visible when is tapped.



Tap to repeat the current song, repeat all songs, or disable repeat mode. Also visible when is tapped.

Creating a Playlist

- From the Home screen, tap $\boxplus \rightarrow$ Play Music \bigcirc .
- Tap an album or song list and play a song.
- 3. Tap adjacent to the song name and select Add to playlist.
- Tap New playlist → Playlist name field to enter a name for the playlist.
- 5. Tap **0K** to save the new playlist.

Adding Songs to Playlists

- From the Home screen, tap \longrightarrow Play Music \bigcirc .
- 2. Tap an album or song list and play a song.
- Tap adjacent to the song name and select Add to playlist.
- Select the desired target playlist.

Playing a Playlist

From the Home screen, tap \longrightarrow Play Music \bigcirc .

Select the PLAYLISTS tab.

next to a playlist title and tap Play.

Deleting a Playlist

Display the **PLAYLISTS** library view.

next to a playlist title and tap Delete.

Videos

The Videos application plays video files stored on your microSD card.

Tap
→ Videos
.

All videos that you have on your memory card will be displayed. Tap the video that you want to play.

The video will begin to play.

The following video controls are available:

Ш Pause the video.

Start the video after being paused.

Press and hold to rewind the video. Tap to go to previous video.

Press and hold to fast-forward the video. Tap to go to next video.

Volume control.

Original size view. The video will be played in its original size.

Full-screen in ratio view. The video is enlarged as much as possible without becoming distorted.

Full-screen view. The entire screen is used. 53 which may cause some minor distortion.

5.1ch Allows you to listen to music using 5.1 Virtual Surround Sound.

Note: The screen view icons are a three-way toggle. The icon that is displayed, is the mode that will appear after the icon is tapped.

Note: The 5.1 channel sound effect works in earphone mode only.

For more information on downloading videos for your phone, see "Play Store" on page 143.

DivX Overview

This device is able to playback DivX videos. DivX Certified[®] to play DivX[®] video up to HD 720p, including premium content. If you try to play DivX VOD content not authorized for your device, the message "Authorization Error" will be displayed and your content will not play. Learn more at www.divx.com/vod.

Your device must first be registered to playback protected or purchased DivX content. DRM-free or unprotected content does not required DivX VOD registration.

Locating Your VOD Registration Number

- From the Home screen, tap → Settings →
 About phone → Legal information → License settings →
 DivX® VOD > Register.
- 2. Write down your Registration code.
- Tap **0K**.

Register Your DivX Device for VOD Playback of Purchased Movies

To play purchased DivX movies on your device, you will first need to complete a one-time registration using both your device and your computer.

- Write down the DivX registration code that appears on-screen. Copy this 8 or 10-digit number down.
- Verify you have the latest DivX software running on your computer. Download the free player (for your computer) from www.divx.com.
- Open the DivX Player on your computer and from within the VOD menu, select Register a DivX Certified Device...
- You are prompted to log in or create a DivX account if your account information has not already been saved in DivX Player.



- 5. Follow the instructions in DivX Player to enter the registration code from step 2 and create a device nickname (ex: "Pat or Pat's Device").
- Select a location on your computer to download the DivX registration video

with the same title as your device nickname (ex: Pat.divx).

- Follow the on-screen instructions to download the file and initiate the transfer process. You will need to place this video file onto your device and play it back.
- Connect your device to the computer via USB and transfer this video. For more information, refer to "Removing and Installing the Memory Card" on page 6.



 From the Registration screen (Transfer), click Transfer Video now and select the location of the microSD card or USB (the device) as the target destination for the registration video (created in step 6) and click Start.

Locate the created file, copy and paste it into the new drive letter corresponding to your device's storage location.

10. From the Home screen, tap \longrightarrow My files $\stackrel{\frown}{=}$.

- or -

- Locate your registration DivX video file and tap the file to play it. Once you play the registration file on your device, your registration is complete.
- Return to the DivX VOD Manager screen (from within your computer's DivX Player) and confirm both your computer and your new device appears in the list of registered DivX devices.

Important! There is no special registration or configuration necessary to playback DRM-free DivX movies.
Registration of your device is only required for playback of protected DivX material.

Video Maker

Video Maker allows you to custom-make your own videos. You can add themes, music, pictures, and other videos to you video.

- 2. Follow the on-screen instructions.

Gallery

The Gallery is where you view photos and play back videos. For photos, you can also perform basic editing tasks, view a slideshow, set photos as wallpaper or contact image, and share as a picture message.

- Tap → Gallery .
 - All of the Albums that hold your pictures and videos will be displayed with folder name and number of files.
- Tap an Album and thumbnails of the contents will be displayed.

Note: If your device displays that the memory is full when you access Gallery, delete some of the files by using My files or other file management applications and try again. For more information, refer to "My Files" on page 139.

Viewing Pictures

1. Tap a thumbnail to view the picture.

Note: If no control icons are displayed on the screen in addition to the picture, tap anywhere on the screen to display them.

- The following options are available:
 - Send via: allows you to send the picture via Bluetooth, Email, Gmail, Messaging, or Wi-Fi Direct.
 - **Delete**: allows you to delete -Directthe picture. Tap **Confirm deletions** and the picture will be deleted.
- 3. Press for additional options:
 - Share via: allows you to share the picture via AllShare, Google+, or Picasa.
 - **Set as**: allows you to set the picture as a Contact icon, Home screen wallpaper, or Lock screen wallpaper.
 - More: displays additional options for editing and printing.

Viewing Videos

Note: If no control icons are displayed on the screen in addition to the picture, tap anywhere on the screen to display them.

- Touch and hold a video to select it. A checkmark will appear on the thumbnail.
- 2. The following options are available:
 - Send via: allows you to share the video via Bluetooth, Email, Gmail, Messaging, or Wi-Fi.
 - Delete: allows you to delete the video. Tap Confirm deletions and the video will be deleted.
 - More: displays the following additional options:
 - Share via: allows you to share a video via YouTube.
 - Play via: allows you to play a video via AllShare.
 - Rename: allows you to rename a video.
 - Details: provides details about the picture such as Title, Type, Date taken, name of the Album it is in, Location, Latitude and Longitude (GPS coordinates), Size. Resolution. Duration. and File location.
- 3. Tap a thumbnail to play the video.

For video player controls, see "Videos" on page 84

Camera

This section explains how to use the camera on your phone. You can take photographs and shoot video by using the built-in camera functionality. Your 8 megapixel camera produces photos in JPEG format.

Important! Do not take photos of people without their permission.

Do not take photos in places where cameras are not allowed.

Do not take photos in places where you may interfere with another person's privacy.

Using the Camera

Taking Photos

Taking pictures with your device's built-in camera is as simple as choosing a subject, pointing the camera, then pressing the camera key.

Note: When taking a photo in direct sunlight or in bright conditions, shadows may appear on the photo.

From the main Home screen, tap Camera to activate the camera mode.


- Using the phone's main display screen as a viewfinder, adjust the image by aiming the camera at the subject.
- Before you take a picture, use the Up and Down Volume keys to zoom in or out. You can magnify the picture up to x4 (400 percent).
- If desired, before taking the photo, you can tap on-screen icons to access various camera options and settings.

- You can also tap the screen to move the focus to the area you touch.
- 6. Press the Camera key () until the shutter sounds. (The picture is automatically stored within your designated storage location. If no microSD is installed, all pictures are stored on the Phone.) For more information, refer to "Camera Options" on page 90.

Note: The number of JPEG pictures remaining on the selected media appears in the upper-right of the screen. This is an approximate number of total pictures that can be taken at the current image size.

Note: To enable the GPS icon, from the Home screen tap Settings

→ Location and security and tap Use GPS satellites to create
a checkmark.

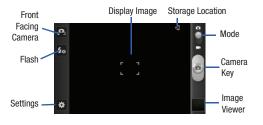

7. While viewing a picture, after you have taken it, tap to zoom in or to zoom out.

- or -

Tap each side of the picture and swipe outward or inward to zoom in or out.

You can magnify the picture up to x4.

8. Press **t** to return to the viewfinder.

Camera Options

Options are represented by icons across both sides of the screen.

Note: The options disappear after a few seconds. Tap the screen to make them reappear.



Camera / Camcorder Mode: allows you to take a photo in various modes. Once you change the mode, the corresponding indicator appears at the top left of the display. Slide the button up for Camera, or down for Camcorder.



Self portrait: allows you to set the front camera so you can take pictures of yourself or video chat.



Flash: allows you to set the flash options to Off, On, or Auto flash.



Settings:

Edit shortcuts: allows you to set shortcut icons for the settings that you use the most.

Self portrait: allows you to set the front camera so you can take pictures of yourself or video chat.

Flash: allows you to set the flash options to Off, On, or Auto flash.

Shooting mode: allows you to set the shooting mode. Options are:

- Single shot: takes a single photo and view it before returning to the shooting mode.
- Smile shot: the camera focuses on the face of your subject. Once the camera detects the person's smile, it takes the picture.
- Beauty: adjusts the contrast to smooth facial features.
- Panorama: takes a landscape photo by taking an initial photo and then adding additional images to itself. The guide box lets you view the area where the second part of the panoramic picture should fall within.



Settings (continued):

- Action shot: detects action and creates a panorama of the moving object.
- Cartoon: gives your photo a cartoon look.

Scene mode: allows you to set the Scene to help take the best pictures possible. Options include None, Portrait, Landscape, Night, Sports, Party/Indoor, Beach/Snow, Sunset, Dawn, Fall colour, Firework, Text, Candlelight, and Backlight. Helpful tips are shown for each scene mode at the bottom of the display screen.

Exposure value: allows you to adjust the brightness level by moving the slider.

Focus mode: allows you to set this option to Auto focus, Macro, or Face detection. Use Macro mode to take close-up pictures. Face detection causes the camera to automatically recognize if there is a face in the shot. It then optimizes the focus and exposure the face. Use Auto focus for all others.

Timer: allows you to set a timer for how long to wait before taking a picture. Options include: Off, 2 sec, 5 sec, and 10 sec.



Settings (continued):

Effects: allows you to change the color tone or apply special effects to the photo. Options include: None, Negative, Grayscale, and Sepia.

Resolution: allows you to set the image size to either: 8M (3264x2448), W6.5M (3264x1968), 3.2M (2048x1536), W2.4M (2048x1232), W0.4M (800x480), or 0.3M (640x480).

White balance: allows you to set this option to one of the following choices: Auto, Daylight, Cloudy, Incandescent, or Fluorescent.

ISO: ISO determines how sensitive the light meter is on your digital camera. Choose from Auto, 100, 200, 400, or 800. Use a lower ISO number to make your camera less sensitive to light, a higher ISO number to take photos with less light, or Auto to let the camera automatically adjust the ISO for each of your shots

Metering: allows you to set how the camera measures or meters the light source: Centre-weighted, Spot, or Matrix.

Outdoor visibility: allows you to take better pictures when outdoors.



Settings (continued):

Anti-Shake: reduces image blur due to the movement of the subject of the photo or hand movement.

Auto contrast: provides a clear image even under backlight circumstances where intensity of illumination can vary excessively.

Blink detection: detects the blinking of human eyes and gives you a warning.

Guidelines: allows you to turn the guidelines On or Off. **Image quality**: allows you to set the image quality to:

Superfine, Fine, or Normal.

GPS tag: allows you to turn GPS On or Off (also known as Geotagging). The location of where the picture is taken is attached to the picture. (Only available in Camera mode.)

Shutter sound: allows you to set the Shutter sound to On or Off.

Storage: allows you to configure the default storage location for images or videos as either Phone or Memory card (if inserted).


Reset: allows you to reset all camera or camcorder settings to the default values.



Image viewer: allows you to access the Image viewer and the various viewing options for a selected picture. Image viewer options are described in the following section. The last picture you took, will be displayed as a thumbnail in the Image viewer icon.

Viewer Options

After you take a photo or shoot a video, you can access various options from the Pictures and Videos Image Viewer.

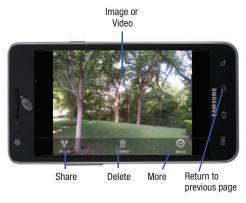

Available options are:

- Share: offers several ways to share your picture or video. Options are:
 AllShare, Bluetooth, Email, Gmail, Google+, Messaging, Photo editor,
 Picasa, Wi-Fi Direct, and YouTube (for video).
- Delete: allows you to delete the current picture. Tap OK to delete or Cancel.
- More: allows you to do the following:
- Play: allows you to either play the current video.
- Set as: allows you to assign the current image as either your current Wallpaper or as a Contact icon to display for a specific entry within your Address Book.
- Rename: allows you to rename a picture.
- Return to previous page (

): takes you back to the previously active camera page where you can take another photo or shoot a new video.

Accessing Pictures

When you take a picture, the file is saved in the Camera folder. You can view your pictures immediately or view them anytime in the Camera folder.

- From the Home screen, tap → My files → DCIM → Camera.
- 2. Tap a photo file to open it in the Image viewer.

Sweep the screen to the left to see the next picture or to the right to see the previous picture.

Before you select a picture, press in the Camera folder to see the following options:

- Share: lets you share selected pictures with AllShare, Bluetooth, Email, Gmail, Google+, Messaging, Photo editor, Picasa, Wi-Fi Direct, or YouTube (for video).
- Create folder: create a new sub-folder in the current folder. Can be on either the Phone or Memory Card.
- Delete: allows you to delete selected pictures. Tap the checkmark, to turn it green, next to any file or folder you want to delete, then tap Delete.
- View by: allows you to view the contents of the current folder as a list, as a list and details, or as thumbnails.
- List by: allows you to view the contents of the current folder sorted by Time, Type, Name, or Size.

- More: provides you with the following additional options:
 - Move: allows you to move one or more pictures to a different folder.
 - Copy: allows you to copy one or more pictures to a different folder.
 - Rename: allows you to rename one or more picture files.
 - Settings: lets you set several general folder options:
 - Show hidden files: causes files and folders that would normally be hidden to be displayed.
 - Show file extension: causes file extensions to be displayed. For example, jpg.
 - **Set Home directory**: allows you to choose and set the Home directory.

Selecting and Using the Pictures

From the Image viewer, you have access to both macro functions (zoom, crop, and rotate) and menu options. For more information, refer to "Viewer Options" on page 93.

Editing a Photo

You can edit your photos using the Photo Editor application on your phone. For more information, refer to "Photo Editor" on page 99.

Assigning an Image to an Address Book Entry

- From the Home screen, tap → My files → D
 Camera → <image>.
- 2. Press and tap More → Set as → Contact icon. Tap a contact entry.
- Touch and drag the orange crop box anywhere on the picture.
- 4. Tap Save.

For more information, refer to "Contacts and Your Address Book" on page 65.

Assigning an Image as a Wallpaper

- From the Home screen, tap → My files → DCIM → Camera → <image>.
- Press and tap More → Set as → Home screen wallpaper.
 - or -
 - Press and tap More → Set as → Lock screen wallpaper.
- Touch and drag the orange crop box anywhere on the picture.
- Tap Save to assign the wallpaper image. Tap Cancel to stop without updating the wallpaper image.

Using the Camcorder

In addition to taking photos, the camera also doubles as a camcorder that also allows you to record, view, and send videos.

Note: The camera may not be able to properly record videos to a memory card with a slow transfer speed.

Shooting Video

Tip: When shooting video in direct sunlight or in bright conditions, it is recommended that you provide your subject with sufficient light by having the light source behind you.

- From the main Home screen, tap Camera to activate the camera mode.
- Tap and slide the Camera mode button down to Camcorder Mode.
- Using the phone's main display screen as a viewfinder, adjust the image by aiming the camcorder at the subject.
- Tap the Video key () to begin shooting video. The red light will blink while recording.
- 5. Tap the Video key () again to stop the recording and save the video file to your Camera folder.

- Once the file has been saved, tap the image viewer, then tap b to play your video for review.
- 7. Press \leq to return to the viewer.

Camcorder Options

Options are represented by icons across both sides of the screen.

Note: The options disappear after a few seconds. Tap the screen to make them reappear.



Camera / Camcorder Mode: allows you to take a photo in various modes. Once you change the mode, the corresponding indicator appears at the top left of the display. Slide the button up for Camera, or down for Camcorder.



Recording mode: allows you to set the recording mode to: Normal, which is limited only by available space on the destination location, Limit for MMS, which is limited by MMS size restrictions, and Self recording which activates the front-facing camera so you can video yourself.



Flash: allows you to set the flash options to Off or On. When you set the flash to On, it stays on continually while you are taking a video.



Settings:

Edit shortcuts: allows you to set shortcut icons for the settings that you use the most.

Flash: allows you to set the flash options to Off or On. When you set the flash to On, it stays on continually while you are taking a video.

Recording mode: allows you to set the recording mode to: Normal, which is limited only by available space on the destination location, Limit for MMS, which is limited by MMS size restrictions, and Self recording which activates the front-facing camera so you can video yourself.

Exposure value: allows you to adjust the brightness level by moving the slider.

Timer: allows you to set a timer for how long to wait before taking a video. Options include: Off, 2 sec, 5 sec, and 10 sec.



Settings (continued):

Effects: allows you to change the color tone or apply special effects to the photo. Options include: None, Negative, Grayscale, and Sepia.

Resolution: allows you to set the image size to either: 1920x1080, 1280x720, 720x480, 640x480, 320x240, or 176x144.

White balance: allows you to set this option to one of the following choices: Auto, Daylight, Cloudy, Incandescent, or Fluorescent.

Outdoor visibility: allows you to take better pictures when outdoors.

Video quality: allows you to set the image quality to: Superfine, Fine, or Normal.

Guidelines: allows you to turn the guidelines On or Off.

Storage: allows you to configure the default storage location for images or videos as either Phone or Memory card (if inserted).

Reset: allows you to reset all camera or camcorder settings to the default values.



Image viewer: allows you to access the Image viewer and the various viewing options for a selected video. Image viewer options are described in the following section. The last video you took, will be displayed as a thumbnail in the Image viewer icon.

Camcorder Options after a Video is Taken

After you shoot a video, you can access various options from the Pictures and Videos Image Viewer. The following options are available:

- Share: offers several ways to share your video. Options are: AllShare, Bluetooth, Email, Gmail, Messaging, Wi-Fi Direct, and YouTube.
- Delete: allows you to delete the current video. Tap OK to delete or Cancel.
- More: allows you to access the following additional options:
 - Play: allows you to play the video
 - Rename: allows you to rename the video.

Accessing Videos

When you shoot a video, the file is saved in the Camera folder. You can view your videos immediately or view them anytime in the Camera folder.

- From the Home screen, tap → My files → DCIM → Camera.
- Tap a video file to open it in the viewer and initiate playback.
- Before you select a video to play, from within the on-screen listing of files, press a to see the following options:

 Share: lets you share selected pictures with AllShare, Bluetooth,

- Email, Gmail, Google+, Messaging, Photo editor, Picasa, Wi-Fi Direct, or YouTube.
- Create folder: create a new sub-folder in the current folder. Can be on either the Phone or Memory Card.
- Delete: allows you to delete selected videos. Tap the checkmark, to turn
 it green, next to any file or folder you want to delete, then tap Delete.
- View by: allows you to view the contents of the current folder as a list, as a list and details, or as thumbnails.
- List by: allows you to view the contents of the current folder sorted by Time, Type, Name, or Size.

- More: provides you with the following additional options:
- Move: allows you to move one or more videos to a different folder.
- Copy: allows you to copy one or more videos to a different folder.
- Rename: allows you to rename one or more video files.
- Settings: lets you set several general folder options:
 - Show hidden files: causes files and folders that would normally be hidden to be displayed.
 - Show file extension: causes file extensions to be displayed. For example, 3gp.
 - **Set Home directory**: allows you to choose and set the Home directory.

Once you have selected a video to play, press 🗖 to display the following options:

- Details: displays file information such as file name, format, resolution, and file size.
- Via Bluetooth: scans for a Bluetooth device on which to play the video
- Subtitles: allows you to view subtitles if they are present in the video.
 While viewing a video, you can also adjust the screen view.
 Screen view allows you to select Original Size, Full-Screen, or Full-Screen in Ratio to view your video.

Note: The screen view icons are a three-way toggle. The icon that is displayed, is the mode that will appear after the icon is tapped.

- Original Size: () the video will be played in its original size.
- Full-Screen in Ratio View: () the video is enlarged as much as possible without becoming distorted.
- Full-Screen View: () the entire screen is used, which may cause some minor distortion.
- Pause/Resume: tap ∏ to pause the video being played. Tap > to resume playing.
- Previous/Next: tap | to jump to the previously played video or tap to jump to the next video file in the Camera folder.
- Exit: to return to the videos list, tap the 5 icon in the top right corner of the screen.

Photo Editor

The Photo Editor application provides basic editing functions for pictures that you take on your phone. Along with basic image tuning like brightness, contrast, and color it also provides a wide variety of effects used for editing the picture.

- Tap **Select picture** to edit a picture in your Gallery.
 - or -

Tap **Capture** picture to take a picture with the camera.

- Tap the picture and it is loaded into the Photo Editor.
- Use the following Photo Editor controls to edit your picture:



Selection Size: allows you to set the size of the selection tool to Small, Medium, or Large.



Selection: use the selection tool to mark an area for cropping, rotating, etc.



Crop: allows you to crop (cut-out) an area of a photo.



Rotate: allows you to rotate a photo in all 4 directions. You can also mirror image a photo.



Move: use the move feature to move a photo around when you are zoomed in and the entire photo is not showing on the screen.



Tools: allows you to Copy and Paste to different images. You can also use Warping and Fill.



Effects: allows you to add various effects to your photo.



Color: allows you to adjust the Saturation, Contrast, Brightness of a photo. You can also make it Greyscale.



Next: move to next photo project.



Previous: move to previous photo project.

- 5. Press to access the following options:
 - **New**: starts a new Photo Editor project. Be sure and save the photo you are working on before starting a new project.
 - Save: saves your photo to your gallery.
 - Share: allows you to share your photo via AllShare, Bluetooth, Email, Gmail, Google+, Messaging, Picasa, or Wi-Fi Direct.

Section 7: Messaging

This section describes how to send and receive different types of messages. It also includes the features and functionality associated with messaging.

Types of Messages

Your phone provides the following message types:

- Text Messages
- Multimedia (Picture, Video, and Audio) Messages
- Email and Gmail Messages
- Google Talk

The Short Message Service (SMS) lets you send and receive text messages to and from other mobile phones or email addresses. To use this feature, you may need to subscribe to your service provider's message service.

The Multimedia Messaging Service (MMS) lets you send and receive multimedia messages (such as picture, video, and audio messages) to and from other mobile phones or email addresses. To use this feature, you may need to subscribe to your service provider's multimedia message service.

Important! When creating a message, adding an image, a sound file, or a video clip to a text message changes the message from a text message to a multimedia message.

Messaging icons are displayed at the top of the screen and indicate when messages are received and their type. For more information, refer to "Indicator Icons" on page 20.

Creating and Sending Messages

From the main Home screen, tap Messaging → →
 New message ✓.

 Tap on the Enter recipient field to manually enter a recipient or tap to select a recipient from your Contacts If adding a recipient from your Contacts, tap the contact to place a checkmark then tap Add.

The contact will be placed in the recipient field.

Note: For the Group option, if the number of recipients is less than 10, all members in the group will be added. You will need to delete any unnecessary members in the list by selecting the trash can icon and deleting unwanted entries.

Note: Enter additional recipients by separating each entry with a semicolon (;) then using the previous procedure.

- Tap the Tap to enter message field and use the on-screen keypad to enter a message. For more information, refer to "Entering Text" on page 59.
- Add more recipients by tapping the recipient field.
- Review your message and tap **Send**.

Note: If you exit a message before you send it, it will be automatically saved as a draft.

Message Options

Options before composing a message



- 1. From the main Home screen, tap Messaging
- Before composing a message, press to reveal additional messaging options:
 - . Search: allows you to search through all of your messages for a certain word or string of words. Enter a search string in the Messaging Search window and tap <a>
 \bigsi
 .
 - Settings: allows you to access Messaging settings. For more information, refer to "Messaging Settings" on page 106.
 - Text templates: displays your available text message reply templates. For more information, refer to "Text Templates" on page 107.
 - Delete threads: allows you to delete any message thread. Select the messages to delete and a green checkmark will appear next to the message. Tap **Delete**.

Options while composing a message

- 1. While composing a message, press to reveal additional messaging options.
 - Insert smiley: allows you to add emoticons, such as a happy face to your message.
 - Add text: allows you to copy text from your contacts, calendar, or from a memo to add to your message. This is a convenient feature for adding names, phone numbers, events, etc. to your message.
 For more information, refer to "Adding Additional Text" on page 104.
 - Add slide: allows you to add a new page to a message.

Adding attachments to a message

To add an attachment to your message tap and select one of the following options:

- Pictures: allows you to tap an existing image from your Pictures list to add it to your message.
- Capture picture: allows you to temporarily exit the message, take a
 photo with phone's camera, and then add it to your message by
 tapping Save.
- Videos: allows you to choose an existing video from the Videos list, then add it to your message.

- Capture video: allows you to temporarily exit the message, record a video clip using the phone's camera, and then add it to your message by tapping Save.
- Audio: allows you to choose an existing audio file from the Audio list, then add it to your message by tapping the circle to the right of the audio so that it turns green, then tapping OK.
- Record audio: allows you to temporarily exit the message and record an audio clip using the phone's microphone. It is then automatically attached to the message.
- Location: allows you to attach a thumbnail of a map showing your location.
- Contacts: allows you to tap on an existing Address Book entry, then add it to your message by tapping Add.
- Calendar: allows you to tap on an existing Calendar event, then add it to your message by tapping Add.
- Memo: allows you to tap on an existing Memo, then add it to your message by tapping Attach.
- Task: allows you to tap on an existing Task list, then add it to your message by tapping Attach.

Adding Additional Text

You can copy text such as names, phone numbers, and events from your Contacts, Calendar or a Memo.

- 2. At the Add text screen, select one of the following:
 - Location: allows you to add an address and the link to the location on Google Maps.
 - Contacts: allows you to add the name and phone number of any of your contacts to your message.
 - Memo: allows you to add an entire memo to your message.
 - Task: allows you to add a task to your message.
 - Calendar: allows you to add the name, date, and time of a calendar event to your message.
 - Text templates: allows you to add an axisting text template.
- Tap the information you want to send. This will place a checkmark next to the item.
- Tap Add unless you are adding text from Location.The text is added to your message.

Viewing New Received Messages

— or —

- When you receive a new message, the new message icon will appear at the top of your screen.
- 2. Open the Notification Bar and select the message. For more information, refer to "Notification Bar" on page 23.

From the main Home screen, tap **Messaging** then tap the new message to view it.

The selected message appears in the display.

- To play a multimedia message, tap .
 - ullet To pause playback of the multimedia message, tap ${f II}$.
- To scroll through the message (if additional text pages have been added), touch the screen and in a single motion, scroll up or down the page.

Message Threads

Sent and received text and picture messages are grouped into message threads. Threaded messages allow you to see all the messages exchanged (similar to a chat program) and displays a contact on the screen. Message threads are listed in the order in which they were received, with the latest message displayed at the top.

To open a threaded message follow these steps:

- From the main Home screen, tap Messaging .
 Tap the message thread you want to view.
- 2. Touch and hold the message thread to display the following options:
 - View contact: displays the contact's information. This option only displays if the sender is in your Contacts list.
 - Add to Contacts: displays the Contacts information screen. This
 option only displays if the sender is not in your Contacts list.
 - Delete thread: displays a confirmation dialog box that when pressed, deletes the entire thread.

Deleting Messages

Deleting a single message thread

- . From the main Home screen, tap Messaging 🖳.
- 2. Touch and hold a message, then tap Delete thread.
- At the Delete prompt, tap Yes to delete or No to cancel.

Deleting multiple message threads

- . From the main Home screen, tap Messaging 🖳.
- Press → Delete threads.
- Tap each message you want to delete. A checkmark will appear beside each message you select.
- 4. Tap Delete.
- 5. At the **Delete** prompt, tap **OK** to delete or **Cancel** to cancel.

Message Search

You can search through your messages by using the Message Search feature.

- From the main Home screen, tap Messaging \(\square\).
- 3. Use the on-screen keypad to enter a word or phrase to search for, then tap \(\bigcirc \).
- All messages that contain the search string you entered are displayed.

Messaging Settings

To configure the settings for text messages, multimedia messages, Voice mails, and Push messages:

1. From the main Home screen, tap Messaging \longrightarrow \longrightarrow → Settings.





- 2. The following Messaging settings are available:
 - Message font size: allows you to set the size of your message text to Normal, Small, or Tiny.
 - Split view: allows you to enable split view when you have the phone in landscape orientation.
 - Delete old messages: deletes old messages when the limit is reached, rather than having them overwritten.
 - Text message limit: allows you to set a limit on how many text messages can be in one conversation.
 - Multimedia message limit: allows you to set a limit on how many multimedia messages can be in one conversation.
 - Manage SIM card messages: allows you to manage the messages that you have stored on your SIM card.
 - Message Center: allows you to enter the number of your Message Center where your messages reside while the system is attempting to deliver them.

- Input mode: allows you to set the input mode for your text messages. Choose between GSM Alphabet, Unicode, or Automatic.
- Auto-retrieve: allows the message system to retrieve messages automatically.
- Creation mode: allows you to select the creation mode, Free, Restricted, or Warning.
 - Restricted: you can only create and submit messages with content belonging to the Core MM Content Domain.
 - Warning: the phone will warn you via pop up messages that you are creating a multimedia message which does not fit the Core MM Content Domain
 - Free: you may add any content to the message.
- Push messages: allows you to receive push messages from the network.
- CB activation: allows you to receive Cell Broadcast (CB) messages.
- Channel configuration: allows you to set up the channel that you will receive CB messages on.
- Language: allows you to select all of the languages that you want to receive CB messages in.
- . Notifications: allows you to see message notifications on your status bar.

- Select ringtone: allows you to set the ringtone for your message notifications.
- Emergency alerts: allows you to receive wireless emergency alerts from the Commercial Mobile Alerting System (CMAS). For more information, refer to "Emergency Alerts" on page 107.

Text Templates

This screen displays your available text message reply templates. This is a readily accessible list of both default and user-defined text snippets that can be used to quickly reply to incoming messages.

- 1. From the main Home screen, tap **Messaging** —.
- From the Messaging list, press and then tap Text templates.
- Tap a message to immediately insert it into your current message conversation.

To create your own text template:

- From the Messaging list, press and then tap Text templates.
- Tap (Create template).
- 4. Enter a new text string and tap Save.

Emergency Alerts

This device is designed to receive wireless emergency alerts from the Commercial Mobile Alerting System (CMAS) which may also be known as the Personal Localized Alerting Network (PLAN). If your wireless provider has chosen to participate in CMAS/PLAN, alerts are available while in the provider's coverage area. If you travel outside your provider's coverage area, wireless emergency alerts may not be available. For more information, please contact your wireless provider.

Emergency Alerts allows customers to receive geographicallytargeted messages. Alert messages are provided by the US Department of Homeland Security and will alert customers of imminent threats to their safety within their area. There is no charge for receiving an Emergency Alert message.

There are three types of Emergency Alerts:

- Alerts issued by the President
- Alerts involving imminent threats to safety of life (Extreme and Severe)
- AMBER Alerts (missing child alert)

Customers may choose not to receive Imminent Threats (Extreme and Severe) and AMBER Alerts. Alerts issued by the President can not be disabled. To disable Imminent Threats and AMBER Alerts, follow the instructions below:

From the main Home screen, tap Messaging



- Press

 → Settings.
- Scroll to the bottom and tap **Emergency alerts**.
- All alerts are enabled by default (checkmark showing).
 - You can enable/disable those alert categories you wish to receive. Choose from: Imminent Extreme alert, Imminent Severe alert, AMBER alert

Note: Presidential alerts can not be disabled.

Emergency Alert Configuration

This device is designed to receive wireless emergency alerts from the Commercial Mobile Alerting System (CMAS); which may also be known as the Personal Localized Alerting Network (PLAN). If your wireless provider has chosen to participate in CMAS/PLAN, alerts are available while in the provider's coverage area. If you travel outside your provider's coverage area, wireless emergency alerts may not be available. For more information, please contact your wireless provider.

Emergency Alerts allows customers to receive geographicallytargeted messages. Alert messages are provided by the US Department of Homeland Security and will alert customers of imminent threats to their safety within their area. There is no charge for receiving an Emergency Alert message.

There are three types of Emergency Alerts:

- · Alerts issued by the President
- Alerts involving imminent threats to safety of life
- · AMBER Alerts (missing child alert)

Customers may choose not to receive Extreme Alerts, Severe Alerts, and AMBER Alerts.

Important! Alerts issued by the President can not be disabled.

To disable Extreme, Severe, and AMBER Alerts:

(checkmark showing).

- 1. From the main Home screen, tap Messaging
- From the main Messaging screen, press

 → Settings → Emergency alerts. All alerts are enabled by default
 - Tap on an alert option to disable the alert and remove the
- checkmark.

Using Email

Email (or Internet Email) enables you to review and create email using several email services. You can also receive text message alerts when you receive an important email. Your phone's Email application lets you access and manage multiple email accounts simultaneously in one convenient location.

There are currently three main types of email accounts on your phone: Gmail, Internet-based email (Gmail, Yahoo, etc..), and Microsoft Exchange (Corporate email or Outlook®).

To send and receive email messages through an ISP (Internet Service Provider) account, or if you wish to use your device to access your corporate email through a VPN (Virtual Private Network), you will first need to set up an IMAP or POP account.

- IMAP (Internet Message Access Protocol) This protocol is frequently used in large networks and commercial settings. IMAP4 is the current standard.
- POP3 (Post Office Protocol) This protocol is supported by most ISPs (Internet service providers) and common among consumer applications. POP3 is the current standard.
- Microsoft Exchange ActiveSync This protocol is frequently used with a large corporate email server system and provides access to email. contact, and calendar synchronization.

Creating an Email Account

- From the Home screen, tap Email .
 Your accounts screen displays with an Email setup screen displayed.
- 2. Enter you email address in the Email address field.
- Enter your password in the Password field.
- If you want to use this email with Social Hub, tap Set as premium account to create a checkmark.
- If you want to see your password as it is being typed, tap Show password to create a checkmark.
- Tap Next.
- 7. Enter an account name for this email account (optional).
- 8. Tap Done.

Synchronizing a Corporate Email Account

Use the following procedure to configure your phone to synchronize with a corporate email account.

- From the Home screen, tap Email .
 Your accounts screen displays with an Email setup screen displayed.
- 2. Enter you email address in the Email address field.
- 3. Enter your password in the Password field.

- If you want to use this email with Social Hub, tap Set as premium account to create a checkmark.
- If you want to see your password as it is being typed, tap Show password to create a checkmark.
- Scroll down and tap Manual setup.
- 7. Tap the Microsoft Exchange ActiveSync field.
- Enter all the Exchange server information, Domain, Username and Password, then tap Next.
- At the prompt tap **OK**.
 The Account options screen is displayed.
- Enter the desired information in the different fields, then tap Next.
- **11.** Enter an Account name for this account (Optional). Wait for the Inbox to synchronize before use.
- **12.** Tap **Done**.
- Press → More → Account Settings to change the account settings.

Creating Additional Email Accounts

To create additional email accounts after setting up your first account:

- From the Home screen, tap Email .
 Your Email screen displays showing your emails from the active account
- Tap the box in the upper left corner of your screen that displays the optional name you assigned to your first email account, for example, Work, Gmail, etc.Your Email account screen is displayed.

Switching Between Email Accounts

- From the Home screen, tap Email .
 Your Email screen displays showing your emails from the active account.
- Tap the box in the upper left corner of your screen that displays the optional name you assigned to your first email account, for example, Work, Gmail, etc.Your Email account screen is displayed.

- In the Accounts section, tap the Email account you would like to switch to.
- 4. The new Email account is displayed.

Using Gmail

Gmail is Google's web-based email. When you first setup the phone, Gmail is configured. Depending on the synchronization settings, Gmail is automatically synchronized with your Gmail account.

Signing into Your Gmail

Note: You must sign in to your Gmail account in order to access Gmail.

- 2. Press Next to set up a Google account or to Sign in.
- Tap Create to create a new Google account and follow the on-screen instructions.
 - or -

Tap Sign in if you have an existing Google account.

- After entering your user name and password, press (Back) to hide the on-screen keyboard.
- Tap Sign in and follow the remaining on-screen instructions.

Refreshing Gmail

■ Press ⇒ Refresh to send and receive new emails and synchronize your email with the Gmail account.

Creating a Gmail Message

- Enter the recipients Email address in the To field. Separate multiple recipient email addresses with a comma.
- Tap and select Add Cc/Bcc to add a carbon or blind copy.
- Enter the subject of this message in the Subject field.
- Tap the Compose Mail field and begin composing your message.
- 6. Tap 📇 to send.

Viewing a Gmail Message

- 1. From the Gmail Inbox, tap a message to view it.
- 2. The following options are available:
 - Archive: archives the selected Email.
 - Delete: deletes the Email.
 - Next: displays the next Email in your inbox.
 - **Previous**: displays the previous Email in your inbox.
- 3. Press 🖃 to select one of the following additional options:
 - Change labels: changes the label on the email or conversation.
 - Mark unread: unread messages or threads with unread messages display in boldface text in the Inbox.
 - Go to inbox: returns you to your Gmail Inbox.
 - Mute: mutes the conversation (Email thread).
 - Add/Remove star: click a message's star to add or remove the star (just like clicking flags in Outlook).
 - More:
 - Report spam: reports the Email message as spam.
 - Settings: displays Email settings that you can modify.
 - Help: displays the Google.com webpage so you can search the web for help.
 - Select text: allows you to copy text to your clipboard.

Google Talk

Google Talk is a free Windows and web-based application for instant messaging offered by Google. Conversation logs are automatically saved to a Chats area in your Gmail account. This allows you to search a chat log and store them in your Gmail accounts.

- 1. From the Home screen, tap \longrightarrow Talk $\stackrel{\text{talk}}{\longleftarrow}$.
- 2. Press Next to set up a Google account or to Sign in.
- 3. Tap Create to create a new Google account.
 - or -

Tap Sign in if you have an existing Google account.

- After entering your user name and password, press the Down Navigation key.
- Tap Sign in.
- Begin using Google Talk.

Note: The Network confirms your login and processes. This could take up to 5 minutes to complete.

Note: If you have already signed into an IM account, it is displayed on the Talk application screen.

Google +

Google+ makes messaging and sharing with your friends a lot easier. You can set up Circles of friends, visit the Stream to get updates from your Circles, use Messenger for fast messaging with everyone in your Circles, or use Instant Upload to automatically upload videos and photos to your own private album on Google+.

- Sign on to your Google account. For more information, refer to "Creating a New Google Account" on page 12.
- 2. From the Home screen, tap
 → Google+

 .
- Select the account you want to use to sign in to Google+.
 or –

Tap Create a new account to create another account.

- 4. Follow the on-screen instructions to use Google+.
- **5.** Visit www.google.com/mobile/+/ for more information.

Messenger

Messenger allows you to bring groups of friends together into a simple group conversation. When you get a new conversation in Messenger, Google+ sends an update to your phone.

 Sign on to your Google account. For more information, refer to "Creating a New Google Account" on page 12.

- - From the Google+ application, select Messenger.
- 3. Select the account you want to use to sign in to Google+.
 - Tap Create a new account to create another account.
- Follow any on-screen setup instructions.

- or -

- **5.** At the **Messenger** screen, tap to start a new message.
- In the upper text field, enter a name, email address, or circle.
- 7. In the bottom message field, enter a message then tap

 .
- From the Messenger screen, tap Learn more for more detailed information.

Section 8: Connections

This section describes the various connections your phone can make including accessing the Internet with your Browser, Wi-Fi. Bluetooth, and Connecting your PC.

Browser

The Browser is your access to the mobile web. This section explains how to navigate the Browser and introduces you to the basic features.

Accessing the Mobile Web

From the Home screen, tap **Web** .



Navigating with the Browser

- To select an item, tap an entry.
- To scroll through a website, sweep the screen with your finger in an up or down motion.
- Sweep the screen left to right to move laterally across a web page.
- To return to the previous page, press 🗢



Zooming in and out of the Browser

There are several ways to Zoom in and out on your browser. After tapping on a link or article, use one of these methods:

- Tilting: Tap and hold the screen at two points then tilt the device back and forth to reduce or enlarge the screen. You must first enable motion in the Settings section. For more information, refer to "Motion" on page 170.
- **Double tap**: Quickly tap the screen twice on the web page to zoom in or out.
- Pinching: Sweep in opposite directions at the same time to zoom in or out (use a pinching-in or pinching-out motion).

Browser Options

- 1. From the home page, press 🖃 to access the following options:
 - **New window**: displays a new window so you can browse multiple URLs. For more information, refer to "Adding and Deleting Windows" on page 115.
 - Windows: displays a list of the windows you have open.
 - Browse brightness: allows you to adjust the brightness of your display.

- Refresh: reloads the current page.
- Forward: forwards the browser to another web page.
- More: displays the following additional options:
- Add bookmark: allows you to add a URL to your bookmark list.
- Add shortcut to Home: allows you to set your homepage as a shortcut on your display.
- Find on page: allows you to search in the current page.
- Page info: displays information about the selected page.
- Share page: allows you to share the page using Gmail or as a message.
- **Downloads**: displays the download history.
- Settings: allows you to modify your web settings. For more information, refer to "Browser Settings" on page 118.
- Print: allows you to print the screen or web page on a compatible Samsung printer using Wi-Fi.

Enter a URL

You can access a website quickly by entering the URL. Websites are optimized for viewing on your phone.

To enter a URL and go to a particular website:

- 1. Tap the URL field at the top of your screen.
- Enter the URL using the on-screen keypad. The website displays.

Search the Internet

To perform an internet search using keywords:

- From the Google homepage, tap the Web Search field.
- Enter the keyword(s) to search using the on-screen keypad and tap Go.
 - or -

ap 🔍 and select a topic to search for.

- 3. A list of search results displays.
- Tap a link to view the website.

Adding and Deleting Windows

You can have up to eight Internet windows open at one time.

To add a new window:

- 2. Tap New window. A new browser window is opened.
- Press
 → Windows to see a list of all open windows.
- 4. Tap a window listing to open up that Internet window.
- Tap at the top right corner of the web page thumbnail to delete the window.

Using Bookmarks

While navigating a website, you can bookmark a site to quickly and easily access it at a future time. The URLs (website addresses) of the bookmarked sites are displayed in the Bookmarks page. From the Bookmarks page you can also view your Most visited websites and view your History.

- **2.** Press to display the following options:
 - Bookmark last-viewed page: Creates a new bookmark for the last webpage that you viewed.
 - List/Thumbnail view: You can select Thumbnail view (default) to see a thumbnail of the webpage with the name listed, or you can select List view to see a list of the bookmarks with Name and URL listed.
 - Create folder: Creates a new bookmark folder.
 - Change order: Allows you to move pages around on the Bookmarks page. Touch and hold a bookmark icon, then move it to the desired location.
 - Move to folder: Allows you to move a page to a folder.
 - **Delete**: Allows you to delete a selected bookmark.

- Tap a bookmark to view the webpage.
 - or –

Touch and hold a bookmark for the following options:

- **Open**: Opens the webpage of the selected bookmark.
- Open in new window: Opens the webpage in a new window.
- Edit bookmark: Allows you to edit the name or URL of the bookmark. For more information, refer to "Editing Bookmarks" on page 117.
- Add shortcut to Home: Adds a shortcut to the bookmarked webpage to your phone's Home screen.
- Share link: Allows you to share a URL address via Bluetooth, Email, Gmail, Google+, Messaging, or Wi-Fi Direct.
- Copy link URL: Allows you to copy the URL address to use in a message.
- Delete bookmark: Allows you to delete a bookmark. For more information, refer to "Deleting Bookmarks" on page 117.
- **Set as homepage**: Sets the bookmark to your new homepage.

Adding Bookmarks

- From any webpage, tap
 → Bookmark lastviewed page.
- 2. Use the on-screen keypad to enter the name of the bookmark and the URL.
- Tap 0K.
- Saved to bookmarks will appear at the bottom of the page.

Editing Bookmarks

- From the Bookmarks page, tap and hold the bookmark you want to edit.
- 2. Tap Edit bookmark.
- Use the on-screen keypad to edit the name of the bookmark or the URL.
- Tap 0K.

Deleting Bookmarks

- From the Bookmarks page, tap and hold the bookmark you want to delete.
- Tap Delete bookmark.
- 3. At the Delete confirmation window, tap **0K**.

Emptying the Cookies

A cookie is a small file which is placed on your phone by a website during navigation. In addition to containing some site-specific information, it can also contain some personal information (such as a username and password) which can pose a security risk if not properly managed. You can clear these cookies from your phone at any time.

- From the Home webpage, press
 → More → Settings
 → Clear all cookie data.
- At the Clear prompt, tap OK to delete the cookies or tap Cancel to exit.

Using your History

The History list provides you with a list of the most recently visited websites. These entries can be used to return to previously unmarked web pages.

- 2. Tap any entry to display the webpage.
- 3. Press
 → Clear history to delete the History list.

Using Most Visited

The Most visited list provides you with a list of the most visited websites that you have bookmarked. These entries can be used to return to previously unmarked web pages.

- From the Home webpage, tap
 A list of your most visited webpages is displayed with
 Name and URL address. The webpages that have been
 visited the most will appear at the top.
- Tap any entry to display the webpage.

Browser Settings

To make adjustments in your browser settings:

- **2.** The following options are available:
 - Default zoom: Adjusts the zoom feature. Set to Far, Medium, or Close.
 - Open pages in overview: Shows an overview of newly opened web pages.
 - Text encoding: Adjusts the current text encoding.
 - Block pop-up windows: Prevents popup advertisement or windows from appearing onscreen. Remove the checkmark to disable this function.

- Load images: Allows web page images to be loaded along with the other text components of a loaded website.
- Auto-fit pages: Allows web pages to be resized to fit as much of the screen as possible.
- Landscape view only: Displays the browser in only the horizontal position.
- Enable JavaScript: Enables javascript for the current Web page.
 Without this feature, some pages may not display properly. Remove the checkmark to disable this function.
- Enable plug-ins: Allows the download of plug-ins such as Adobe Flash.
- Open in background: New pages are launched in a separate page and displayed behind the current one. Remove the checkmark to disable this function.
- **Set home page**: Sets the current home page for the Web browser.
- Default storage: Allows you to set your default storage to Phone or Memory Card.
- Clear cache: Deletes all currently cached data. Tap OK to complete the process.
- Clear history: Clears the browser navigation history. Tap OK to complete the process.

- Accept cookies: Allows sites, that require cookies, to save and read cookies from your device.
- Clear all cookie data: Deletes all current browser cookie files.
- Remember form data: Allows the device to store data from any previously filled out forms. Remove the checkmark to disable this function.
- Clear form data: Deletes any stored data from previously filled out forms. Tap OK to complete the process.
- Enable location: Allows websites to request access to your location
- Clear location access: Clears location access for all websites. Tap
 OK to complete the process.
- Remember passwords: Stores usernames and passwords for visited sites. Remove the checkmark to disable this function.
- Clear passwords: Deletes any previously stored usernames or passwords. Tap OK to complete the process.
- Show security warnings: Notifies you if there is a security issue with the current website. Remove the checkmark to disable this function.
- Select search engine: allows you to set your default search engine to Google, Yahoo!, or Bing.
- · Website settings: View advanced settings for individual websites.

 Reset to default: Clears all browser data and resets all settings to default.

Wi-Fi

About Wi-Fi

Wi-Fi (short for "wireless fidelity" and sometimes referred to as Wi-Fi) is a term used for certain types of Wireless Local Area Networks (WLAN). These device types use an 802.11 wireless specification to transmit and receive wireless data. Wi-Fi communication requires access to an existing and accessible Wireless Access Point (WAP). These WAPs can either be Open (unsecured) as within most Hot Spots, or Secured (requiring knowledge of the Router name and password).

Turning Wi-Fi On

By default, your device's Wi-Fi feature is turned off. Turning Wi-Fi on makes your device able to discover and connect to compatible in-range WAPs.

- From the Home screen, tap
 → Settings → Wireless
 and network → Wi-Fi settings.
- Tap the Wi-Fi field to activate the feature. A green checkmark indicates that Wi-Fi is active. The device will scan for available in-range wireless networks and display them under Wi-Fi networks on the same screen.

Connect to a Wi-Fi Network

From the Home screen, tap
 → Settings → Wireless and network → Wi-Fi settings.

The network names and security settings (Open network or Secured with WEP) of detected Wi-Fi networks are displayed in the Wi-Fi networks section.

2. Tap the network you want to connect to.

Note: When you select an open network, you will be automatically connected to the network.

- 3. Enter a wireless password if necessary.
- 4. Tap Connect.

Manually add your new network connection

- Tap Add Wi-Fi network.
- Enter the Network SSID. This is the name of your Wireless Access Point.
- Tap the Security field and select a security option. This must match the current security setting on your target WAP.
- If secured, you will also need to enter your WAP's password.

Tap Save to store the new information and connect to your target WAP.

Note: The next time your device connects to a previously accessed or secured wireless network, you are not prompted to enter the WAP key again, unless you reset your device back to its factory default settings.

Turning Wi-Fi Off

- From the Home screen, tap
 → Settings → Wireless and network → Wi-Fi settings.
- Tap the Wi-Fi field to deactivate the feature. The green checkmark will be removed.

Note: Use of wireless data connections such as Wi-Fi and Bluetooth can cause an added drain to your battery and reduce your use times.

Manually Scan for a Wi-Fi Network

- From the Home screen, tap
 → Settings → Wireless and network → Wi-Fi settings.
- Press
 → Scan.

Wi-Fi Status Indicators

The following icons show your Wi-Fi connection status at a glance:



Displays when Wi-Fi is connected, active, and communicating with a Wireless Access Point (WAP).



Displays when Wi-Fi is active but there is a communication issue with the target Wireless Access Point (WAP).



Displays when connected to another device using Wi-Fi Direct. For more information, refer to "Wi-Fi Direct" on page 121.

Wi-Fi Advanced Settings

The Wi-Fi settings - Advanced menu allows you to set up many of your device's Wi-Fi service, including:

- Setting your Wi-Fi sleep policy
- Viewing your device's MAC Address
- . Configuring use of either a DHCP or Static IP

To access the Bluetooth Settings menu:

- From the Home screen, tap
 → Settings → Wireless and network → Wi-Fi settings.
- Press → Advanced.

For more information, refer to "Network Notification" on page 152.

Wi-Fi Direct

Wi-Fi Direct allows device-to-device connections so you can transfer large amounts of data over a Wi-Fi connection.

Note: See your service plan for applicable charges for Wi-Fi Direct.

- From the Home screen, tap → Settings → Wireless and network → Wi-Fi Direct settings.
- If you are currently connected to a Wi-Fi network, a prompt will display Current network will be disconnected. Tap OK to continue.
- Tap Wi-Fi Direct. A check mark is displayed indicating that Wi-Fi Direct is active.
- Repeat steps 1 3 on the other device you want to connect with.
- On your phone, at the Search for devices prompt, tap OK. Tap the Do not show again checkbox if you want to skip this step in the future.

The device scans for other Wi-Fi Direct devices.

Important! The target Wi-Fi device must also have the Wi-Fi Direct feature enabled before initiating this connection.

- Once the device you want to connect to is displayed, tap on it.
- Tap Connect.
- **8.** The other device has 2 minutes to tap **0K** for the connection to be made.
- Once connected, the other device will show as Connected in your list of Wi-Fi Direct devices and the icon will display at the top of your screen.
- Tap Configure Wi-Fi Direct to change your Device name and Password if desired.
- 11. The Status field will display the Wi-Fi Direct status.

Sharing Information with Connected Device

To share Videos, Photos, or other information with the connected device:

- View the information that you want to share. For example, if you want to share a photo, find the photo in your camera viewer or My files folder, then tap the Share, Share via, or Send via option.
- 2. Tap the Wi-Fi option.

- Tap the connected device name. For example, AndroidP2PXXXX.
- The other device will receive a prompt to receive the information and must tap **OK**.
- The file is transferred and the other device will receive a screen notification that a Wi-Fi file has been received. The file can be found in My Files in the ShareViaWifi folder.

Note: Depending on the other device model, the prompts and shared folder information may differ.

Bluetooth

About Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless devices. The Bluetooth communication range is usually up to approximately 30 feet.

Turning Bluetooth On and Off

To turn Bluetooth on:

- From the Home screen, tap
 → Settings → Wireless and network → Bluetooth settings.
- Tap the Bluetooth field to activate the feature (checkmark indicates active). When active, appears within the Status area.

To turn Bluetooth off:

- From the Home screen, tap
 → Settings → Wireless
 and network → Bluetooth settings.
- Tap the Bluetooth field to deactivate the feature. The green checkmark will be removed.

Bluetooth Status Indicators

The following icons show your Bluetooth connection status at a glance:



Displays when Bluetooth is active.



Displays when Bluetooth is connected (paired) and communicating.



Displays when Bluetooth is on but is not connected to a Bluetooth device

Bluetooth Settings

The Bluetooth settings menu allows you to set up many of the characteristics of your device's Bluetooth service, including:

- Entering or changing the name your device uses for Bluetooth communication and description
- Setting your device's visibility (or "discoverability") for other Bluetooth devices
- Displaying your device's Bluetooth address

To access the Bluetooth Settings menu:

- From the Home screen, tap
 → Settings → Wireless
 and network → Bluetooth settings.
- Verify your Bluetooth is active.

Tap the Device name, Visible, Visible time-out, and Search for devices fields to set the options.

To change your Bluetooth name:

- Verify your Bluetooth is active.
- 2. From the Bluetooth settings page, tap **Device name**.
- Enter a new name.
- 4. Tap **0K** to complete the rename process.

To make your device visible:

- 1. Verify your Bluetooth is active.
- 2. From the Bluetooth settings page, tap Visible.
 - Making your device visible allows it to be detected by other devices for pairing and communication.

Note: Your device visibility is based on the time set within the Visible time-out field (2 Minutes, 5 Minutes, 1 Hour, or Never). This value appears as a countdown within this Visible time-out field.

To scan for Bluetooth devices:

- 1. Verify your Bluetooth is active.
- From the Bluetooth settings page, tap Search for devices to search for visible external Bluetooth-compatible devices such as headsets, devices, printers, and computers.

Pairing Bluetooth Devices

The Bluetooth pairing process allows you to establish trusted connections between your device and another Bluetooth device. When you pair devices, they share a passkey, allowing for fast, secure connections while bypassing the discovery and authentication process.

To pair your device with another Bluetooth device:

- Verify your Bluetooth is active.
- Tap Search for devices. Your device will display a list of discovered in-range Bluetooth devices.
- 3. Tap a device from the list to initiate pairing.
- 1. Enter the passkey or PIN code, if needed, and tap OK.
- 5. The external device will then have to also accept the connection and enter your device's PIN code.
 Once successfully paired to an external device, appears within the Status area.

Note: Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth compatible devices. Note: Pairing between two Bluetooth devices is a one-time process. Once a pairing has been created, the devices will continue to recognize their partnership and exchange information without having to re-enter a passcode again.

Disconnecting a paired device

Disconnecting a paired device breaks the connection between the device and your phone, but retains the knowledge of the pairing. At a later point when you wish to reconnect the device, there is no need to setup the connection information again.

- 1. Verify your Bluetooth is active.
- From the Bluetooth settings page, tap the previously paired device (from the bottom of the page).
- 3. Tap **0K** to confirm disconnection.

- or -

From the Bluetooth settings page, touch and hold the name of the previously paired device, and select **Disconnect**.

Note: Disconnections are manually done but often occur automatically if the paired device goes out of range of your phone or it is powered off.

Deleting a paired device (unpair)

Deleting a device from your list removes its "connection record" and upon reconnection would require that you re-enter all the previous pairing information.

- Verify your Bluetooth is active.
- From the Bluetooth settings page, touch and hold the name of the previously paired device (from the bottom of the page). This opens the connected device's menu options.
- 3. Tap Unpair to delete the paired device.

Sending Contacts via Bluetooth

Depending on your paired devices' settings and capabilities, you may be able to send pictures, Contact information, or other items using a Bluetooth connection.

Note: Prior to using this feature, Bluetooth must first be enabled, and the recipient's device must be visible.

- 1. Verify your Bluetooth is active.
- From the Home screen, tap
 → Contacts
- Press → Import/Export → Send namecard via.

- Tap each contact that you would like to send via Bluetooth.
 A green checkmark will appear next to each entry you select.
- Tap Send.
- Tap Bluetooth.
- 7. Select the paired device to send the contacts to.

Note: The external Bluetooth device must be visible and communicating for the pairing to be successful.

 A Bluetooth share notification will appear in your notifications list.

PC Connections

You can connect your device to a PC using an optional PC data cable using various USB connection modes. When you connect the device to a PC, you can synchronize files with Windows Media Player, transfer data to and from your device directly.

Connecting as a Mass Storage Device

You can connect your device to a PC as a removable disk and access the file directory. If you insert a memory card in the device, you can also access the files directory from the memory card by using the device as a memory card reader.

Note: The file directory of the memory card displays as a removable disk, separate from the internal memory.

- Insert a memory card into the device to transfer files from or to the memory card to your PC.
- From the Home screen, tap → Settings → Wireless and network → USB utilities.
- 3. On your phone, tap Connect storage to PC.
- Connect the multifunction jack on your device to a PC using an optional PC data cable.
- 5. A pop-up window displays on the PC when connected.
- Tap Connect USB storage. Your phone will appear on your PC as a removable disk.
- 7. Open the folder to view files.
- 8. Copy files between your PC and your memory card.

Section 9: Applications

This section contains a description of each application that is available in the Applications Menu, its function, and how to navigate through that particular application. If the application is already described in another section of this user manual, then a cross reference to that particular section is provided.

Tip: To open applications quickly, add the icons of frequently-used applications to one of the Home screens. For details, see "Customizing Your Home Screen" on page 38

You can also add an application icon as a Primary Shortcut that will display on all Home screens. If you add an application as a primary shortcut, the application icon will not be displayed in the Applications menu. For more information, refer to "Adding and Removing Primary Shortcuts" on page 39.

AllShare

AllShare allows your phone to stream photos, music and videos from its memory to other Digital Living Network Alliance (DLNA) certified devices. Your phone can also play digital content streamed from other DLNA certified devices.

Note: To view more information about DLNA certified products visit http://www.dlna.org/home.

- Connect to a Wi-Fi network. For more information, refer to "Connect to a Wi-Fi Network" on page 120.
- From the Home screen, tap
 → AllShare
 → Al
- To share media, tap Videos, Photos, or Music and tap on the media that you would like to share.
- At the Select device screen, any devices that you can share with are displayed.
- 5. Tap on a device to share media.
- Tap the Remote device tab at the top of the screen.All devices that you can receive media from are displayed.

- Tap a device name. Media that you can receive from the other device is listed.
- 8. Tap an item that you want to stream to your phone.
- 9. Press
 → Settings to configure the following settings:
 - Device name: defaults to your phone. Use the keypad to enter a new Media server if desired, and tap Save.
 - Share videos/photos/music: allows you to restrict what is shared from your phone. Tap the items you want to share.
 - Upload from other devices: allows you set the phone to select how uploads from other devices are started. Tap Always accept, Always ask, or Always reject.
 - Default memory: allows you to have media saved to your Phone or Memory card. Tap an option.
 - Subtitles: allows you to see subtitles on shared media.

Depending on the setting you changed, a pop-up screen may display to restart AllShare. Tap **Yes** to continue.

Calculator

With this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions; addition, subtraction, multiplication, and division. The Calculator also keeps a history of recent calculations.


- 1. From the Home screen, tap \longrightarrow Calculator $\stackrel{+}{\times}$.
- 2. Enter the first number using the on-screen numeric keys.
- Enter the operation for your calculation by tapping the corresponding on-screen arithmetic function key.
- 4. Enter the second number.
- **5.** To view the result, tap equals (=).
- 6. To view calculator history, tap located at the top of the calculator buttons. A history of your past calculations is displayed. Tap again to display the calculator keypad.
- 7. To clear the calculator history, press \implies Clear history.
- To change the text size, press
 → Text size. Tap Small,
 Medium, or Large.

Calendar

With the Calendar feature, you can consult the calendar by day, week, or month, create events, and set an alarm to act as a reminder, if necessary.

To access the Calendar:

- The following options are available:
 - Month: the calendar displays the selected month with today's date highlighted. At the bottom of the calendar, scheduled events display in the order that they occur.
 - Week: the calendar displays the selected week with today's time and date highlighted.
 - Day: the calendar displays the selected day with any events highlighted.
 - List: the Event List displays all events that you have added for all dates in the order that they appear.

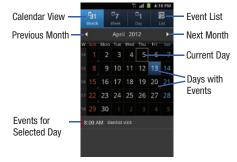

Calendar Options

- From any Calendar view, press to display the following options:
 - Create: allows you to create a new event for any day or time period.
 - Go to: allows you to go to any date on your calendar.
 - Today: takes you to today's date, if you are not already there.
 - Search: allows you to search through your calendar for a particular word or words.
 - Delete: displays the event list, where you can select events to delete.

- Settings: displays the following calendar settings:
 - Calendars: displays all calendars they you have created.
 - Default view: allows you to set the default view to Month, Week, Day, or List.
 - Day view: allows you to set the Day view to display with times listed or as a list of events. Select Time grid or Event List.
 - First day of week: allows you to set the first day of the week to Sunday or Monday. This will affect how the Month view calendar is displayed.
 - Hide declined events: will not display events you have received from others if you have declined them.
 - Hide birthdays from Contacts: will not display the birthdays of your contacts.
 - Lock time zone: allows you to lock the event times and dates to the time zone that you select.
 - Select time zone: allows you to set the time zone to which event times and dates will be locked
 - Set alerts and notifications: allows you to turn on audio alerts, set
 Status bar notification, or turn alerts off.
 - Vibrate: allows you to set the Event notification tone to vibrate Always,
 Only in Silent mode or Never.
 - Select ringtone: allows you to set the ringtone for the Event notification tone.

 Calendar sync: allows you to sync your calendar with other accounts such as email or social accounts.

Event List

The Event List displays all events that you have added for all dates in the order that they appear.

- 1. From the Calendar, tap the List icon.
- 2. Tap any event to display it.
- **3.** Press to display the following options:
 - Edit: allows you the change the Event name, date, time, location, participants, alarm, alarm details, and description. Tap Save.
 - . Delete: allows you to delete any event. Tap OK at the prompt.
 - Send via: allows you to send event information via Bluetooth, Email, Messaging, or Wi-Fi.

Camera

Use your 8.0 megapixel camera feature to produce photos in a JPEG format. Your phone also functions as a Camcorder to take videos.

For more information, refer to "Camera" on page 88.

Clock

The Clock application allows you to access alarms, view the World Clock, set a stopwatch, and use a timer.

Alarm

This feature allows you to set an alarm to ring at a specific time.

- From the Home screen, tap → Clock → Alarm → Create alarm. The following options display:
 - Time: tap the (+) or (-) to set the new time for the event, at which time an alarm will sound.
 - Alarm repeat: use this option to set the repeating status for the alarm by tapping one of the following options:
 - Weekly: sets the alarm to sound once every week on the day and time that is set.
 - Daily: sets the alarm to sound all seven days of the week.
 - Every weekday (Mon-Fri): sets the alarm to sound on all five weekdays.
 - One-time event: sets the alarm to sound only once.
 - Alarm type: sets the way in which the alarm sounds when activated (Melody, Vibration, Vibration and melody, and Briefing).
 - Alarm volume: drag the slider to adjust the alarm's volume.
 - Alarm tone: sets the sound file which is played when the alarm is activated. Select Sounds or Go to My files.

- **Snooze**: use this option to set a Duration (3, 5, 10, 15, or 30 Minutes) and Snooze repeat (1, 2, 3, 5, or 10 Times).
- Smart alarm: tracks body movements and calculates the best time for sounding the alarm. Place the phone somewhere on your bed then the phone's movement sensor (also known as accelerometer) is sensitive enough to work from any part of the bed. Set the Duration and the Tone
- Name: allows you to use a specific name for the alarm. The name will appear on the display when the alarm activates.
- 2. Tap Save to store the alarm details.

Turning Off an Alarm

To stop an alarm when it sounds, touch and sweep the icon in any direction.

Setting the Snooze Feature

To activate the Snooze feature after an alarm sounds, touch and sweep the icon in any direction. Snooze must first be set in the alarm settings. For more information, refer to "Alarm" on page 131.

Deleting Alarms

To delete an alarm:

- From the Home screen, tap → Clock → Alarm → Delete.
- Tap the alarm or alarms you wish to delete. A green checkmark will appear next to each selection.
- Tap Delete.

World Clock

World Clock allows you to view the time of day or night in other parts of the world. World Clock displays time in hundreds of different cities, within all 24 time zones around the world.

- From the Home screen, tap
 → Clock
 → World clock. The clock for your time zone is displayed.
- Tap Add city to add another city to the World Clock.
- Scroll through the list of cities to find the city you want to add, or tap the Search bar and use the keypad to enter a city to search for.
- Tap the city you want to add. The clock for that city will display.
- To set Daylight Savings time, press and hold a city, then tap **DST settings**.
- 6. Select Automatic. Off. 1 hour. or 2 hours.

If Daylight Savings Time is selected, the sun symbol on the World Clock listing will appear orange.

Deleting a World Clock Entry

- 2. Tap the city clocks you wish to delete.
- Tap Delete.

Stopwatch

You can use this option to measure intervals of time.

- From the Home screen, tap
 → Clock
 → Stopwatch.
- Tap Start to start the stopwatch and tap Lap to mark a unit of time per lap.
- Tap Stop to stop the stopwatch.
- Tap Restart to continue or tap Reset to erase all times recorded.

Timer

You can use this option to set a countdown timer. Use a timer to count down to an event based on a preset time length (hours, minutes, and seconds).

- From the Home screen, tap → Clock → Timer.
 The min field is highlighted and set to 1 minute. Her the
- The min field is highlighted and set to 1 minute. Use the keypad to set the number of minutes you want.
- Tap the hr field to set hours if desired. As you tap different fields, they will become highlighted.
- 4. Tap the sec field to set seconds.
- Tap Start to begin the timer and tap Stop to pause the timer.
- After stopping, tap Restart to continue or tap Reset to set the timer back to the original setting.

Contacts

You can manage your daily contacts by storing their name and number in your Address Book. Address Book entries can be sorted by name, entry, or group.

Downloads

The Downloads application allows you to manage all of your downloads from the Play Store and the Browser.

- From the Home screen, tap
 → Downloads
 All of your downloads are listed.
- Tap the Internet Downloads tab to see all of the downloads you have made from the Browser.
- Tap the Other Downloads tab to see all other downloads.
- Tap
 → Sort by size to see your downloads sorted in size order.
- Tap
 → Sort by time to see your downloads sorted in time order.

Email

Email enables you to review and create email using various email services. You can also receive text message alerts when you receive an important email. For more information, refer to "Using Email" on page 109.

Gallery

The Gallery is where you view photos and play back videos. For photos, you can also perform basic editing tasks, view a slideshow, set photos as wallpaper or contact image, and share as a picture message. For more information, refer to "Gallery" on page 87.

Gmail

Gmail is a web-based email service. Gmail is configured when you first set up your phone. Depending on your synchronization settings, Gmail can automatically synchronize with your Gmail account on the web. For more information, refer to "Using Gmail" on page 111.

Google+

Google+ makes messaging and sharing with your friends a lot easier.

From the Home screen, tap → Google+ ...

For more information, refer to "Google +" on page 113.

Latitude

With Google Latitude, you can see the location of all of your friends on a map or on a list. You can also share or hide your location.

You must first set up your phone to use wireless networks to help pinpoint your location. Also, Latitude works best when Wi-Fi is enabled.

- From the Home screen, tap
 → Settings
 → Location and security.
- Tap Use wireless networks. A green checkmark indicates the feature is enabled.
- 3. Press → Wireless and network → Wi-Fi settings.

- 4. Tap Wi-Fi to turn Wi-Fi on.
- Log on to your Google account. For more information, refer to "Creating a New Google Account" on page 12.
- 7.
 8. If not already logged in, tap → Join Laitutde.
- Your location is displayed on the map, accurate to 30 meters.

Sharing your Location with Friends

- 1. From the Latitude map screen, tap to display your Latitude friends. At first, only your name is displayed.
- Press → Add friends.
- 3. Tap Select from Contacts or Add via email address.
- Tap a contact or enter an email address and tap Add friends.
- At the Send sharing requests prompt, tap Yes.

Your friend will receive an email or text message with your location marked on a map. They will also receive instructions on how to view your location from the web or use Latitude on their phone or tablet provided it is available. Once they acknowledge your request, their location will display on your phone. They can share their location from their computer, phone, or tablet. For more information, go to https://www.google.com/latitude.

6. To view the map, press
→ Map view.

Latitude Options

- From the map display, press to display the following options:
 - Search: allows you to search for a place of interest.
 - Directions: displays navigation directions to a location from a starting point.
 - Clear Map: allows you to remove all markings and layers from the map.
 - More: provides access to additional features such as: Map, Places, Navigation, Check in, Latitude, Location history, and My Places.
 - **Settings**: allows you to select the following additional options:
 - Cache Settings: allows you to set options to pre-fetch map tiles when not using Wi-Fi and to clear the cache that holds the map tiles.

- Location reporting: allows you to configure the location reporting parameters.
- Labs: this is a testing ground for experimental features that aren't ready for primetime. They may change, break or disappear at any time.
 Click on a Lab to enable or disable it.
- Terms, Privacy & Notices: displays the Terms and Conditions, Privacy Policy, o r Legal Notices information. Select the desired information from the pop-up menu.
- About: displays general information about Google maps such as Version, Platform, Locale, Total data sent, Total data received, Free memory, etc.
- Help: displays the Google Mobile Help web page where you can receive help on Google Maps.

Maps

Depending on your location, you can view basic, custom, and satellite maps and local business information, including locations, contact information, and driving directions. You can also post public messages about a location and track your friends.

Important! Before using Google Maps you must have an active data (3G) connection. The Maps application does not cover every country or city.

Enabling a Location Source

Before you use Google Maps and find your location or search for places of interest, you must enable a location source. To enable the location source you must enable the wireless network, or enable the GPS satellites.

- From the Home screen, tap
 → Settings
 → → Location and security.
- Tap **Use wireless networks** to enable GPS to determine location based on nearby cell towers.
- Tap Use GPS satellites to enable the GPS satellite.
- Tap **Use sensor aiding** to enhance positioning and save power using sensors.

Tip: When using Google Maps you can turn on Enable GPS satellites. Selecting GPS satellites allows you to locate places of interest at the street-level. However, this also requires a clear view of the sky and uses more battery power.

To receive better GPS signals, avoid using your device in the following conditions:

- inside a building or between buildings
- in a tunnel or underground passage
- in poor weather

- around high-voltage or electromagnetic fields
- in a vehicle with tinted windows

Using Maps

- From the Home screen, tap
 → Maps ... A map will display with your location in the very center.
- 2. Locate the top row of the applications to access additional options:
 - Search Maps: allows you to search for a place of interest.
 - · Layers: allows you to switch map views:
 - Traffic: (available only in selected areas) Real-time traffic conditions are displayed over roads as color-coded lines. Each color represents how fast the traffic is moving.
 - Satellite: Maps uses the same satellite data as Google Earth. Satellite images are not real-time. Google Earth acquires the best imagery available, most of which is approximately one to three years old.
 - Terrain: combines a topographical view of the area's terrain with the current map location.
 - Transit Lines: displays the overlapping transit lines on your map.
 - Latitude: allows you to see your friend's locations and share your location with them
 - My Maps: displays a list of your preferred maps.
 - Bicycling: displays the overlapping cycling trails on your map.

- Wikipedia: displays any Wikipedia markers and info on your map.
- My Location: when touched, the location displays on the map with a blinking blue dot.
- 3. Press to display the following options:
 - Search: allows you to search for a place of interest.
 - Directions: displays navigation directions to a location from a starting point.
 - Clear Map: allows you to remove all markings and layers from the map.
 - More: provides access to additional features such as: Map, Places, Navigation, Latitude, Location history, and My Places.
 - Settings: allows you to select the following additional options:
 - Cache Settings: allows you to set options to pre-fetch map tiles when not using Wi-Fi and to clear the cache that holds the map tiles.
 - Location reporting: allows you to configure the location reporting parameters.
 - Labs: this is a testing ground for experimental features that aren't ready for primetime. They may change, break or disappear at any time. Click on a Lab to enable or disable it.
 - Terms, Privacy & Notices: displays the Terms and Conditions, Privacy Policy, or Legal Notices information. Select the desired information from the pop-up menu.

- About: displays general information about Google maps such as Version, Platform, Locale, Total data sent, Total data received, Free memory, etc.
- Help: displays the Google Mobile Help web page where you can receive help on Google Maps.

Memo

This feature allows you to create a memo and send it via Bluetooth, Email, Messaging, or Wi-Fi.

- 1. From the Home screen, tap \longrightarrow Memo \square .
- **2.** To create a new memo, tap **Create memo**.

- or -

Press **□** → Create.

- Type your Memo using the keypad and tap Save.The memo will display in the memo list.
- To send a Memo, touch and hold the Memo in the Memo list
- Tap Send.
- 6. Tap Bluetooth, Email, Messaging, or Wi-Fi.

Note: Email will appear as an option only after you have setup your Email account. For more information, refer to "Using Email" on page 109.

- Enter the recipient information and tap Send. For more information, refer to "Message Options" on page 102.
- To modify a Memo, tap the pencil icon in the top right corner of the Memo. Edit the Memo then tap Save.
- You can change the color or your Memo by simply tapping a color sample at the bottom of the display.
- 10. From the Memo list, press to display the following options:
 - Create: allows you to create a new memo.
 - Delete: allows you to delete one or all of your memos.
 - Search: allows you to search your memos for a particular word or words.
 - Send: allows you to send one or several of your memos at one time. You can send via Bluetooth, Email, Messaging, or Wi-Fi.
 - Sort by: allows you to sort by Date or Color.
 - More: the following additional options are available:
 - SNS log in: allows you to log into your Facebook, Twitter, or LinkedIn accounts.
 - Sync memo: allows you to sync your memos Google Docs or send individual memos.
 - PIN lock: allows you to set a PIN lock so that a PIN must be entered before reading a memo.

Messenger

Messenger allows you to bring groups of friends together into a simple group conversation. When you get a new conversation in Messenger, Google+ sends an update to your phone.

■ From the Home screen, tap → Messenger □

For more information, refer to "Messenger" on page 113.

Mini Diary

The Mini Diary allows you to keep a diary of your daily activities and also attach pictures. You can publish your diary entries to Facebook and MySpace.

- 1. From the Home screen, tap

 → Mini diary
- **2.** Tap **Create diary** to start a new diary entry.
- 3. Tap the Tap to add photo field to add a photo.
- To take a new picture, tap Camera. To add a photo from your Gallery, tap Gallery.
- Tap the Tap to add text field to add text to your diary then tap Done.
- Tap the Add location field to add your location then tap Done.
- 7. Tap Save.
- 8. The dairy entry will be added to your Mini Diary with today's date.

- 9. While in a diary entry that has been previously saved, press to display the following options:
 - Create: allows you to create a new diary entry.
 - Delete: allows you to delete a diary entry.
 - Edit: allows you to change your information or the photo.
 - Change photo: allows you to change your photo if you have already added one. This option only displays if a photo has been added.
 - Delete photo: allows you to delete your photo. This option only displays if a photo has been added.
 - More:
 - **Publish**: allows you to publish your diary to Facebook.
 - Send via: allows you to send your Diary entry by Email or Messaging.
- 10. At the Mini Diary screen, press to display the following options:
 - Search: allows you to search your diaries for a particular word or words.
 - List by: allows you to sort by Date or Location.
 - . Delete all: allows you to delete all diary entries.
 - Settings: allows you to select Auto update which will update your Selected city based on GPS.

Music

Music allows you to play music files that you have stored on your phone and memory card. You can also create playlists. For more information, refer to "Music" on page 76.

My Files

My files allows you to manage your sounds, images, videos, bluetooth files, Android files, and other memory card data in one convenient location.

- . From the Home screen, tap
 → My files
 —.
- 2. The following folders display:
 - DCIM: this is the default location for pictures and videos taken by the device. Tap DCIM → Camera to view the picture or video files.
 For more information, refer to "Accessing Pictures" on page 94. Also, see "Accessing Videos" on page 98
 - Android: the Android folder stores files that are used in Android applications.
 - external_sd: this folder displays all of the files that you have on your memory card.
 - Bluetooth: this folder stores files sent via a Bluetooth device.

Note: Different folders may appear depending on how your phone is configured.

Navigation

Navigation is an internet-connected turn-by-turn, GPS navigation system with voice guidance.

Caution! Traffic data is not real-time and directions may be wrong, dangerous, prohibited, or involve ferries.

Important! To receive better GPS signals, avoid using your device in the following conditions:

- inside a building or between buildings
- in a tunnel or underground passage
- in poor weather
- around high-voltage or electromagnetic fields
- in a vehicle with tinted windows

Launching Navigation

- From the Home screen, tap \longrightarrow Navigation \blacktriangle .
- Read the on-screen disclaimer and tap Accept.
- . Choose from the following on-screen options:

 - Speak Destination: allows you to use the voice recognition feature to search for matching locations in your area.
 - Type Destination: allows you to manually enter a destination address (via the on-screen keypad).
 - Contacts: allows you to receive turn-by-turn directions to the address stored for a selected Contacts entry.
 - Starred Places: allows you to obtain directions to locations that have been starred within Google maps (maps.google.com).
 - or –

Press and tap **Route options** to configure your Route options such as: **Avoid highways** or **Avoid tolls**.

Navigation Options

Once on the map screen, you can access the following features:

- Destination: returns you to the previous Navigation options screen.
- Search by voice: Speak your destination instead of typing.
- Layers: allows you to switch map views:
 - Traffic view: (available only in selected areas) Real-time traffic conditions are displayed over roads as color-coded lines. Each color represents how fast the traffic is moving.
 - Satellite: Maps uses the same satellite data as Google Earth.
 Satellite images are not real-time. Google Earth acquires the best imagery available, most of which is approximately one to three years old.
 - Parking: displays parking information relative to your current location.
 - Gas stations: displays gas station location relative to your current location.
 - ATMs & banks: displays ATM and Bank locations relative to your current location.
 - Restaurants: displays restaurant and eatery locations relative to your current location.

The map displays with your location in the center. Press 🗐 for the following options:

- Search: manually search for a destination address, place, name of business, or even a type of business.
- Set destination: returns you to the navigation options screen where you can access a destination by either Speaking, Typing, or selecting from a Contacts entry or Starred places.
- Layers: allows you to switch map views. See previous description.
- Mute: allows you to mute the audio readout and directional information.
- Exit navigation: terminates the application.
- More: provides additional application information such as: Settings and Help.

Obtaining Driving Directions

Your phone's built-in GPS hardware allows you to get real-time driving directions to selected locations or establishments based on your current location.

Using a Physical Address

- From the Home screen, tap \longrightarrow Navigation \blacktriangle .
- Tap either Speak Destination or Type Destination.
- If typing in the address, enter the address, City, and State using the keypad. As you type, possible addresses will be displayed. Tap on one when you see the address you want. The route will be displayed.
- If speaking the address, the Voice guidance screen is displayed. For voice-guided navigation you need to install text-to-speech support from the Play Store. Tap Install to install the application or tap Skip to exit.

Note: You will need to be signed on to your Google account before downloading applications from the Play Store. For more information, refer to "Creating a New Google Account" on page 12.

5. As you drive the route display will be updated and you will receive voice-quided navigation directions.

Photo Editor

The Photo Editor application provides basic editing functions for pictures that you take on your phone. Along with basic image tuning like brightness, contrast, and color it also provides a wide variety of effects used for editing the picture.

For more information, refer to "Photo Editor" on page 99.

Places

Google Places displays company logos on a layer of Google Maps. When viewing an area you can guickly locate a business or person, find out more information about the business, see coupons, public responses, and more.

From the Home screen, tap
 → Places
 Places
 ...





- Tap Q (Search) and then use the Search Maps field to manually enter a desired place or choose from among the various categories. Matches are filtered by those closest to your current location.
- Locate and tap one of the listed places (Restaurants, Cafes, Bars, Attractions, [user added searches], or IN THIS AREA) A list of places within this category displays.
- Tap the Maps icon to launch the related maps feature.

5. Press and then tap Add a search. The functions adds additional search shortcuts to the places screen.

Play Books

With Play Books (formerly known as "Google Books"), you can find more than 3 million free e-books and hundreds of thousands more to buy in the eBookstore.

- 1. From the Home screen, tap
 → Play Books
- Log on to your Google account. For more information, refer to "Creating a New Google Account" on page 12.
- 3. Follow the on-screen instructions for using this application.

Play Music

Also known as Google Music, allows you to browse, shop, and playback songs purchased from the Android Market. The music you choose is automatically stored in your Google Music library and instantly ready to play or download.





For more information, refer to "Play Music (Google Music)" on page 79.

Play Store

This application provides access to downloadable applications and games to install on your phone. The Play Store also allows you to provide feedback and comments about an application, or flag an application that might be incompatible with your phone.

Before using the Play Store, you must have a Google Account, For more information, refer to "Using Gmail" on page 111.

This application might be updated after your initial setup and connection. Please note that this document describes this application as it appears by default. If prompted, follow the on-screen instructions to update the related application icon and features.





Note: The main Home screen initially contains the Play Store icon. If you delete it, or if you want to access Messaging from another Home screen, you must tap Applications \ \ \ \rightarrow Play Store.

- If not already logged in with your Google account, tap Next.
- Tap Sign in and enter your Google account information.
- Tap Accept to agree to the Play Store terms of service.

Downloading a New Google Application

To download a new application, you will need to use your Google account to sign in to the Play Store. The home page provides several ways to find applications. The home page features applications and includes a list of item applications by category, a list of games, a link to search, and a link to My apps.

This application might be updated after your initial setup and connection. Please note that this document describes this application as it appears by default. If prompted, follow the on-screen instructions to update the related application icon and features.

- From the Home screen, tap \longrightarrow Play Store \bigcirc .
- If not already logged in with your Google account, tap Next.
- Tap Sign in and enter your Google account information.
- Tap **Accept** to agree to the Play Store terms of service.
- Browse through the categories, find an application you're interested in, and tap the name.
- Read the application descriptions.

Important! If the selected application requires access to data or control of a function on your phone, the Play Store displays the information the application will access.

> Tap **OK** if you agree to the conditions of the application. Once you tap **OK** on this screen you are responsible for using this application on the phone and the amount of data it uses. Use this feature with caution.

7. Tap Install.

Note: Use caution with applications which request access to any personal data, functions, or significant amounts of data usage times.

- If prompted, follow the on-screen instructions to pay for the application.
- Check the progress of the current download by opening the Notifications panel.
- 10. After the item is downloaded and installed on your phone, the content download icon appears in the notification area of the status bar.

On the Play Store screen, press and then tap
 My Apps, tap the installed application in the list, and then tap Open.

Tip: The newly downloaded applications display in the applications list and are shown in alphabetical order if the View Type is set to Alphabetical grid or Alphabetical list, or at the end of the list if View type is set to Customizable grid.

Note: A data plan is required to use this feature. Charges may apply. Please contact your service provider for further details.

Quickoffice

The Quickoffice application allows you to create and save Microsoft Word and Excel documents. You can also view existing Powerpoint presentations and PDFs.

- Enter your Email information into the E-mail Address field and tap Register Now.

- or -

Tap Register Later.

- The following Quickoffice applications are available:
 - Quickword: allows you to create and save Word documents on your phone, you can also access Word documents from your SD card and your Recent Documents folder.
 - Quicksheet: allows you to create and save Excel spreadsheet documents.
 - Quickpoint: allows you to view existing Powerpoint documents from your SD card and your Recent Documents folder.
 - QuickPDF: allows you to view existing PDF documents from your SD card and your Recent Documents folder.
- Select an option and follow the on-screen instructions.

Search

Also known as "Google Search" is a web-based search engine that uses text-based queries to search for content on web pages.

- - or -

Tap to use Google Voice Search. For more information, refer to "Voice Search" on page 149.

Settings

This widget navigates to the sound and phone settings for your phone. It includes such settings as: display, security, memory, and any extra settings associated with your phone. For more information, refer to "Changing Your Settings" on page 152.

Social Hub

With Social Hub, you can now easily and intuitively satisfy all of your relevant communication needs from one integrated user experience. E-mails, instant messaging, social network contents, and calendar contents from all major service providers are available.

To access Social Hub:

- From the Home screen, tap
 → Social Hub
 Interpretation of the available features.
- 2. Tap Setup now to setup your Social Hub account.
- Tap on an account type that you would like to setup. Choose from either email accounts, SNS accounts, or other IM accounts.
- If you choose an SNS account, read the SNS disclaimer, tap the I accept all the terms above checkbox, then tap Agree to continue.
- Tap Next.
- Follow the on-screen instructions for adding an account.

- From the Social Hub main screen, tap the Feeds or Messages tabs to see information pertaining to your account.
- To add another account, press
 → Add account.
- 9. To refresh your status, press

 → Status update.

Talk

Google Talk is a free Windows and web-based application for instant messaging offered by Google. Conversation logs are automatically saved to a Chats area in your Gmail account. This allows you to search a chat log and store them in your Gmail accounts. For more information, refer to "Google Talk" on page 112.

Task

With the Task application you can create a task list of things you need to do and add

- 2. Tap Create task to start a new task entry.
- Tap the Name field and enter a task name using the keypad.
- Tap the Due date field and enter a due date name using the keypad. If there is no date that the task is due, tap the No due date checkbox.

- If desired, enter Task, Priority, Reminder, and Notes then tap Save.
- 6. At the Task list screen, press to display the following options:
 - Create: allows you to create a new task.
 - Delete: allows you to delete one or all of your tasks.
 - Search: allows you to search your tasks for a particular word or words.
 - List by: allows you to sort by Due date, Status, or Priority.
 - Sync task: allows you to sync your tasks to any of your accounts.
- From the Task list screen, tap a task once you have completed it and a checkmark appears next to the task.
 The task name is also grayed out so that you can still read it.

Task Manager

The Task Manager application provides information about the processes and programs running on your phone, as well as the memory status. It can also be used to terminate processes and applications.

To access the Task Manager:

- From the Home screen, tap \longrightarrow Task Manager \bigcirc .
- The Task Manager options are located at the top of the screen. The following options are available: • Active applications: displays all of the applications that are
 - presently running on your phone. Tap Exit to end an application, or tap Exit all to end all running applications.
 - Downloaded: displays the size of your downloaded application programs.
 - RAM: displays the Random Access Memory (RAM) and allows you to clear different levels of RAM.
 - **Storage**: displays a summary of the phone's storage.
 - Help: displays information on how to extend battery life.

Video Maker

Video Maker allows you to custom-make your own videos. You can add themes, music, pictures, and other videos to you video. For more information, refer to "Video Maker" on page 87.

Videos

The Video Player application plays video files stored on your memory card. For more information, refer to "Videos" on page 84.

Voice Command

With the Voice Command application you can use your voice to perform operations that you would normally have to do by hand such as dialing a phone number, texting a message, playing music. etc.





- 2. Read the Samsung Disclaimer then tap Confirm to continue.
- 3. Read the Vlingo Terms of Service then tap Agree to continue.
- 4. Read the information on the How to Use Samsung voice screen, then tap Confirm.
- Tap Finish.
- At the Voice talk screen, tap on an icon for assistance in using Voice command or tap Tap & Speak to speak what you would like to do.
- Follow the on-screen instructions.

Voice Recorder

The Voice Recorder allows you to record an audio file up to one minute long and then immediately share it using AllShare, Messaging, Gmail, or via Bluetooth, Recording time will vary based on the available memory within the phone.

- From the Home screen, tap → Voice Recorder
- To start recording, tap and speak into the microphone.
- 3. During the recording process you can either tap Stop to stop and save the recording or Pause temporarily halt the recording. After pausing, tap to resume recording. Once the audio recording has stopped, the message is automatically saved. Tap to cancel the recording without saving.
- to display a list of all your voice recordings. Tap a voice recording to play it.
- 5. Press to display the following options:
 - Share: allows you to share your recording using Messaging. Wi-Fi Direct. Bluetooth. Gmail. and Email.
 - **Delete**: allows you to delete 1 or more voice recordings. Tap the recordings to delete and tap **Delete**.
 - Rename: allows you to rename your recordings.

- **Settings**: the following settings are available:
 - Storage: allows you to choose where your recordings will be saved. Select between Phone or memory card.
 - Default name: allows you to choose the name prefix for your recordings. For example, if your Default name is Voice, your recordings would be named Voice 001. Voice 002. Voice 003. etc.
 - Recording quality: allows you to set the recording quality to High or Normal.
 - Limit for MMS: allows you to select On or Off. If you Limit for MMS by selecting On, you will be assured that the recording can be sent in a message.

Voice Search

The Voice Search feature is a voice-activated application that allows you to tell the phone what to search for and then the phone activates a Google search based on what you said.

- 1. From the Home screen, tap → Voice Search



- or -

From the main Home screen, tap 🔳 on the right side of the Google Search bar.

- The **Speak Now** screen will display. Speak clearly into the microphone.
- The Working screen will display as it searches for you.

- Results will display on the screen. Tap a link to view the information.
 - or -

The **No matches found** screen will display if Voice Search was not able to find a match. Tap **Speak again** or **Cancel**.

Voice Talk

With the Voice Talk application you can use your voice to perform operations that you would normally have to do by hand such as dialing a phone number, texting a message, playing music, etc.

- 1. From the Home screen, tap

 → Voice talk
- Read the Samsung Disclaimer then tap Confirm to continue.
- Read the Vlingo Terms of Service then tap Agree to continue.
- Read the information on the How to use Samsung voice screen, then tap Next.
- Read the information on the Wake up Voice talk screen, then tap Next.
- Read the information on the What can I say? screen, then tap Done.

- At the Voice talk screen, tap on an icon for assistance in using Voice command or tap Tap & Speak to speak what you would like to do.
- 8. Follow the on-screen instructions.

YouTube

YouTube[™] is a video sharing website on which users can upload and share videos. The site is used to display a wide variety of user-generated video content, including movie clips, TV clips, and music videos, as well as video content such as video blogging, informational shorts and other original videos.

Note: YouTube is a data-intensive feature. It is recommended that you upgrade to an unlimited data plan to avoid additional data charges.

- From the Home screen, tap \longrightarrow YouTube $\stackrel{\text{\tiny LL}}{\longrightarrow}$.
- Tap the search field \(\) to search for specific videos, scroll down to browse through the main page thumbnails, or scroll to the bottom to explore additional options.
- To view a video, tap an available preview thumbnail or tap the title link.

To configure YouTube Settings:

- Press and then tap Settings and configure the following parameters:
 - High quality on mobile, when enabled, allows you to start all videos in high quality mode while you are connected to a mobile network
 - Caption font size allows you to set the font size used by on-screen captions. Choose from: Small, Medium, Large, or Extra Large.
 - Uploads allows you to specify network preferences for uploads.
 Choose from: Only when on WiFi or On any network.
 - Clear search history allows you to clear any previous YouTube searches from appearing within the search box.
 - SafeSearch filtering allows you to configure block settings for videos containing restricted content. This option blocks these videos from appearing within your search results. Choose from: Don't filter, Moderate, or Strict blocking.
 - Help provides answers to most YouTube questions.
 - Feedback allows you to provide user feedback to YouTube.
 - · Google Mobile Terms of Service
 - · YouTube Terms of Service
 - Google Mobile Privacy Policy
 - YouTube Privacy Policy
 - Open source licenses displays license details for open source software.

 Application version displays the software version for the current YouTube application.

To watch a high quality video:

■ Press and then tap Settings → High quality on mobile.

Section 10: Changing Your Settings

This section explains the sound and phone settings for your phone. It includes such settings as: display, security, memory, and any extra settings associated with your phone.

Wireless and Network

Flight mode

Flight mode allows you to use many of your phone's features, such as Camera, Games, and more, when you are in an airplane or in any other area where making or receiving calls or data is prohibited.

Important! When your phone is in Airplane Mode, it cannot send or receive any calls or access online information or applications.

- Tap Flight mode. A check mark displayed next to the feature indicates Flight mode is active. The Flight mode icon is displayed at the top of your screen.

Activating Wi-Fi

- From the Home screen, tap
 → Settings → Wireless and network → Wi-Fi settings.
- Tap Wi-Fi. A check mark displayed indicates Wi-Fi is active. For more information, refer to "Wi-Fi" on page 119.

Network Notification

By default, when Wi-Fi is on, you receive notifications in the Status bar anytime your phone detects an available Wi-Fi network. You can deactivate this feature if you do not want to receive notifications.

- From the Home screen, tap
 → Settings → Wireless and network → Wi-Fi settings.
- Tap Network notification. A check mark displayed next to the feature indicates Network notification is active.
- Tap Network notification again to remove the checkmark and deactivate this feature.

WPS Button Connection

The WPS (Wi-Fi Protected Setup) button is a standard for easy and secure wireless network set up and connections. To use WPS, the connecting device must support WPS and be compatible with Wi-Fi Protected Access (WPA) security. WPS can automatically set up a random network name and WPA wireless security for wireless Wi-Fi phones, routers, access points, computers, adapters, and other electronic devices.

WPS allows you to push buttons instead of entering a network name and wireless security PIN.

- From the Home screen, tap
 → Settings → Wireless and network → Wi-Fi settings.
- 2. Tap WPS button connection.
- Press the WPS button on your Wi-Fi access point within 2 minutes.

Auto connect

The Auto connect option allows you to be automatically connected to an AT&T Wi-Fi Hotspot as soon as your phone detects it.

- From the Home screen, tap
 → Settings → Wireless and network → Wi-Fi settings.
- Tap Auto connect to create a check mark. Auto connect is enabled.

Manually Adding a Wi-Fi Network

- From the Home screen, tap
 → Settings → Wireless
 and network → Wi-Fi settings.
- Tap Wi-Fi to turn it on.
- Tap Add Wi-Fi network.
- Enter the SSID (Service Set Identifier) and Security settings then tap Save.

Note: An SSID is a unique key which identifies a wireless LAN. Its purpose is to stop other wireless equipment from accessing your LAN — whether accidentally or intentionally. To communicate, wireless devices must be configured with the same SSID.

Activating Wi-Fi Direct

Wi-Fi Direct allows device-to-device connections so you can transfer large amounts of data over a Wi-Fi connection.

- From the Home screen, tap → Settings → Wireless and network → Wi-Fi Direct settings.
- Tap Wi-Fi Direct. A check mark displayed indicates Wi-Fi Direct is active. For more information, refer to "Wi-Fi Direct" on page 121.

Bluetooth settings

The Bluetooth settings menu allows you to set up many of the characteristics of your device's Bluetooth service, including:

 Entering or changing the name your device uses for Bluetooth communication and description

Activating Bluetooth

■ From the Home screen, tap → Settings → Wireless and network → Bluetooth settings and tap Bluetooth to turn it on.

Note: Bluetooth must be enabled prior to use.

Activating the Device Name

- Activate Bluetooth. For more information, refer to "Turning Bluetooth On and Off" on page 123.
- From the Home screen, tap → Settings → Wireless and network → Bluetooth settings and tap Device name.
 The assigned device name displays.
- Press to erase the current device name and enter a new name for this device using the keyboard.
- 4. Press OK to confirm your setting.

Activating Visibility

From the Home screen, tap → Settings → Wireless and network → Bluetooth settings and tap Visible.

The device is now activated for discovery other devices for a period of time determined by the value set within the Visible time-out menu.

Visible time-out

Visible time-out option allows you to make your device visible for a certain time limit and become invisible. This option can only be accessed when your device is set to Visible.

- From the Home screen, tap → Settings → Wireless and network → Bluetooth settings and tap Visible time-out.
- 2. Tap 2 Minutes, 5 Minutes, 1 Hour, or Never.

Search for Devices

This option allows you to scan for active Bluetooth devices so you can pair with them.

- From the Home screen, tap → Settings → Wireless and network → Bluetooth settings and tap Search for devices.
 - Your phone begins scanning and lists any discovered devices in the Bluetooth devices section.
- 2. Tap a device name to pair with the device.

Important! Some Bluetooth devices are secured and require a PIN number to confirm and pair with them.

Enter a PIN to pair with the device, if one is required, and tap OK.

USB utilities

This option allows you to copy files between your PC and the memory card in your phone.

- From the Home screen, tap → Settings → Wireless and network → USB utilities.
- 2. Tap Connect storage to PC.
- 3. Connect your phone to your PC using a USB cable.
- 4. From your PC, open the folder to view your files.
- 5. Copy files between your PC and the memory card.

VPN settings

The VPN settings menu allows you to set up and manage Virtual Private Networks (VPNs).

Important! Before you can use a VPN you must establish and configure one.

Adding a VPN

Before you add a VPN you must determine which VPN protocol to use: PPTP (Point-to-Point Tunneling Protocol), L2TP (Layer 2 Tunneling Protocol), L2TP/IPSec PSK (Pre-shared key based L2TP/IPSec), or L2TP/IPSec CRT (Certificate based L2TP/IPSec).

- From the Home screen, tap
 → Settings → Wireless and network → VPN settings.
- Tap Add VPN.

To establish a PPTP (Point-to-Point Tunneling Protocol):

- 1. Tap Add PPTP VPN.
- Tap VPN name, add a name for this connection using the keypad, then tap OK.
- Tap Set VPN server, add a name using the keypad, then tap OK.
- Tap Enable Encryption to make a checkmark (if desired).

Tap DNS search domains, add a name for DNS search using the keypad, then tap OK.

To establish a L2TP (Layer 2 Tunneling Protocol):

- Tap Add L2TP VPN.
- Tap VPN name, add a name for this connection using the keypad, then tap OK.
- Tap Set VPN server, add a name using the keypad, then tap OK.
- 4. Tap Enable L2TP Secret to make a checkmark (if desired).
- Tap Set L2TP Secret and enter a password (if desired), then tap OK.
- Tap DNS search domains, add a name for DNS search using the keypad, then tap OK.

To establish a L2TP/IPSec PSK (Pre-shared key based L2TP/IPSec):

- Tap Add L2TP/IPSec PSK VPN.
- Tap VPN name, add a name for this connection using the keypad, then tap OK.
- Tap Set VPN server, add a name using the keypad, then tap OK.
- 4. Tap Set IPsec pre-shared key, enter a key and tap OK.
- 5. Tap Enable L2TP Secret to make a checkmark (if desired).

- Tap Set L2TP Secret and enter a password (if desired), then tap OK.
- Tap DNS search domains, add a name for DNS search using the keypad, then tap OK.

To establish a L2TP/IPSec CRT (Certificate based L2TP/IPSec):

- . Tap Add L2TP/IPSec CRT VPN.
- Tap VPN name, add a name for this connection using the keypad, then tap OK.
- Tap Set VPN server, add a name using the keypad, then tap OK.
- 4. Tap Enable L2TP Secret to make a checkmark (if desired).
- Tap Set L2TP Secret and enter a password (if desired), then tap OK.
- Tap Set user certificate, then tap OK.
- Tap Set CA certificate, then tap OK.
- Tap DNS search domains, add a name for DNS search using the keypad, then tap OK.

Mobile networks

Before you use applications such as Google Maps and find your location or search for places of interest, you must enable the Mobile networks options.

From the Home screen, tap → Settings → Wireless and network → Mobile networks.

The following options display:

Use Packet Data

To activate the data network, this option must be selected. It is set on by default.

- From the Home screen, tap → Settings → Wireless and network → Mobile networks.
- Tap Use packet data to create a checkmark and activate the feature.

Data Roaming

Data roaming allows you to connect to your service provider's partner networks and access data services when you are out of your service providers area of coverage.

- From the Home screen, tap
 → Settings → Wireless and network → Mobile networks.
- Tap Data roaming to create a checkmark and activate the feature.

Access Point Names

To use Wi-Fi you need access to a wireless access point (hotspot).

■ From the Home screen, tap → Settings → Wireless and network → Mobile networks → Access Point Names.
A list of the Access Point names display. The active access point displays a green, filled circle to the right of the name.

Network Operators

Using this feature you can view the current network connection. You can also scan and select a network operator manually, or set the network selection to Automatic.

- From the Home screen, tap → Settings → Wireless and network → Mobile networks.
- Tap Network operators.

The current network connection displays at the bottom of the list.

Important! You must deactivate data service prior to searching for an available network.

Note: Connecting to 2G networks slows the data transfer speed and time.

Default setup options

Your phone default is set to Automatic (to automatically search for an available network. You can set this option to Manual to select a network each time you connect.

- From the Home screen, tap
 → Settings → Wireless and network → Mobile networks.
- Tap Network operators.
- Tap Default setup.
- Tap Manual to locate and connect to a network manually, or tap Automatic to allow the device to automatically select a network.

Call Settings

To access the Call settings menu:

- 1. From the Home screen, tap \longrightarrow Settings \rightarrow Call.
- Tap one of the following options:

Call rejection

- Tap Call rejection → Auto reject mode to enable your phone to reject calls.
- 2. Select Off, All numbers, or Only black list.
- Tap Auto reject list.
- Tap to manually add numbers to the Reject list.
- Tap Unknown, to create a checkmark and automatically reject all unknown calls.

Set reject messages

- 1. From the Call Settings menu, tap Set reject messages.
- Tap to manually add a reject message.
 - or -

Tap one of the pre-written messages to be displayed when you want the call to be rejected.

Tap Save.

Call alert

- From the Call Settings menu, tap Call alert.
- Tap Outgoing call vibration to enable your phone to vibrate when the called party answers the phone.
- Tap Call status tones to set the sound settings during a call then tap OK.
- Tap Alerts on call to set the alert type.

Call answering/ending

- 1. From the Call Settings menu, tap Call answering/ending.
- 2. The following options are available:
 - Answering key: Tap this option to be able to accept incoming calls by pressing the Home key.
 - Automatic answering: Tap this option if you are using a headset and want the call to be automatically answered. Select the time interval before the call is automatically answered.
 - The power key ends calls: This option will allow you to end a call by pressing the power key without turning off the screen.

Turn on proximity sensor

From the Call Settings menu, tap Turn on proximity sensor.
When you answer a call, the screen will be turned off to save power.

Call forwarding

- From the Call Settings menu, tap Call forwarding → Voice call.
- 2. Tap one of the following options:
 - Always forward: allows you to forward all voice calls.
 - Forward when busy allows you to forward voice calls to a
 designated number instead of your voice mail number if you are on
 another phone call.
 - Forward when unanswered: allows you to forward voice calls to a
 designated number instead of your voicemail number when there is
 no answer on your phone. You can also select the amount of time
 that the phone delays before forwarding.
 - Forward when unreachable: allows you to forward voice calls to a
 designated number instead of your voicemail number when you are
 not in an area covered by your service provider or when your phone
 is switched off

TTY Mode

This menu is used to activate or deactivate Hearing Aid Compatibility for this device.

- From the Call Settings menu, tap TTY mode.
- Tap Full TTY. A green checkmark will appear. Tap TTY mode off to turn it off.

Additional settings

- From the Call Settings menu, tap Additional settings.
- 2. Tap one of the following options:
 - Caller ID: allows you to choose how your Caller ID will be displayed.
 Select Network Default, Hide number, or Show number.
 - **Call waiting**: the network service informs you when someone is trying to reach you during another call. Tap to activate.
 - Auto redial: automatically redials the last number if the call was either cut off or was unable to connect. Tap to activate.
 - Noise suppression: Your phone is equipped with an advanced voice processing chip that delivers clear mobile calls by suppressing background noise, intermittent sounds (like a siren or nearby conversation), and echoes, allowing you to hear and be heard nearly anywhere. Tap to activate.
 - Fixed Dialing Numbers: allows you to restrict outgoing calls to a limited set of phone numbers.

Using Fixed Dialing Numbers

Enabling FDN

- From the Call Settings menu, tap Additional settings → Fixed Dialing Numbers.
- 2. Tap Enable FDN.
- At the prompt, enter your PIN2 code and tap **0K**.
 FDN is enabled.
- To enable FDN after it has been disabled, tap Disable FDN, enter your PIN2 code and tap OK.

Important! Not all SIM cards use a PIN2 code. If your SIM card does not, this menu does not display.

The PIN2 code is provided by your carrier. Entering an incorrect PIN2 code could cause the phone to lock. Contact customer service for assistance.

Changing the PIN2 Code

- From the Call Settings menu, tap Additional settings → Fixed Dialing Numbers.
- Tap Change PIN2.
- At the prompt, enter your old PIN2 code.
- 4. At the prompt, enter a new PIN2 code.

5. Confirm your PIN2 code.

Managing the FDN List

When this feature is enabled, you can make calls only to phone numbers stored in the FDN list on the SIM card.

Note: Before you can manage an FDN list a list must be created.

- From the Call Settings menu, tap Additional settings → Fixed Dialing Numbers.
- 2. Tap FDN list.
- 3. A list of all existing FDN numbers will be displayed.

Voicemail Service

- From the Call Settings menu, tap Voicemail Service.
 Voicemail service provided by your carrier is the default.
- 2. Tap My carrier to remove the carrier Voicemail service.

Voicemail

You can view or modify your voicemail number from this menu.

- 1. From the Call Settings menu, tap Voicemail.
- Tap the Voicemail number field, backspace to erase the digits, and enter a new voicemail number using the keypad, then tap OK.
- Tap **0K**.

Sound Settings

From this menu you can control the sounds on the phone.

■ From the Home screen, tap → Settings → Sound.
The following options display:

Silent mode

Silent mode is convenient when you wish to stop the phone from making noise, in a theater for example. In Silent Mode the speaker is muted and the phone only vibrates to notify you of incoming calls, or other functions that normally have a defined tone or sound as an alert.

- 1. From the Home screen, tap \rightarrow Settings \rightarrow Sound.
- Tap Silent mode.

– or –

From the Home screen, press the **Lock** key until **Phone options** displays.

Tap Silent mode to activate or deactivate this mode (the current mode displays).

Vibration

Vibration mode allows your phone to vibrate instead of a producing a tone.

- From the Home screen, tap
 → Settings → Sound →
 Vibration.
- Tap Always, Never, Only in Silent mode, or Only when not in silent mode

Volume

The Volume option allows you to change the volume for all phone sounds in one easy location.

- From the Home screen, tap
 → Settings → Sound →
 Volume.
- Touch and drag the slider to adjust the sound volume for Incoming calls, Media, System, and Notification.
- 3. Tap 0K.

Phone ringtone

This option allows you to set the ringtone.

- 1. From the Home screen, tap \longrightarrow Settings \rightarrow Sound.
- Tap Phone ringtone.
- 3. Tap a ringtone and tap OK.

Notification ringtone

This option allows you to set the ringtone that will sound for notifications and alarms.

- 1. From the Home screen, tap \longrightarrow Settings \rightarrow Sound.
- 2. Tap Notification ringtone.
- Tap a ringtone and tap OK.

Audible Tone Settings

The Audible touch tones and Audible selection options are used when you use the dialing pad, make a screen selection, or lock your screen. Each time you press a key, make a selection, or lock your phone, the selected tone sounds.

- 1. From the Home screen, tap \longrightarrow Settings \rightarrow Sound.
- In the Feedback section, tap Audible touch tones, Audible selection, or Screen lock sounds. A check mark displayed next to these features indicates active status.

Haptic feedback and Vibration intensity

Instead of sounding a tone, the Haptic feedback option vibrates when you press soft keys on certain screens. You can also set the intensity of the vibration using the Vibration intensity setting.

- 1. From the Home screen, tap \longrightarrow Settings \rightarrow Sound.
- Tap Haptic feedback. A check mark displayed next to the feature indicates Haptic feedback is active.

Tap Vibration intensity then touch and drag the slider to adjust the vibration intensity, then tap OK.

Display Settings

In this menu, you can change various settings for the display such as the font, orientation, pop-up notifications, puzzle lock feature, animation, brightness, screen timeout, power saving mode, and tv out settings.

- From the Home screen, tap → Settings → Display.
 The following options display:
 - Screen display: allows you to set the Font style, the home screen and lock screen wallpapers, and the clock position for the lock screen
 - Brightness: configures the LCD Brightness levels. Tap Automatic brightness to allow the phone to self-adjust and tap OK.
 - Auto-rotate screen: allows you to switch the display orientation automatically when you rotate the phone.
 - Animation: determines whether some or all of the window elements animate. Selections are: No animation, Some animations, and All animations
 - Screen timeout: adjusts the delay time before the screen automatically turns off. Selections are: 15 seconds, 30 seconds, 1 minute, 2 minutes, and 10 minutes.

- Touch key light duration: allows you to set the time that the touch keys located on the bottom of your phone are lit.
- Auto adjust screen power: allows you to save power because the phone analyzes the displayed screen image and adjusts the LCD brightness.
- **Gyro sensor calibration**: allows you to calibrate the gyro sensors. Place your device on a level surface and tap **Calibrate**.

Horizontal Calibration

Calibrate your phone by using the built-in accelerometer.

- From the Home screen, tap → Settings → Display → Gyro sensor calibration.
- Place the device on a level surface and tap Calibrate. The phone adjusts the level of the accelerometer. During the calibration process a green circle appears on-screen and the center circle adjusts to the center position.

Power Saving Mode

Power Saving Mode allows you to manage your phone to conserve power.

- From the Home screen, tap
 → Settings → Power saving mode.
- **2.** The following options are available:
 - Use Power saving mode: allows you to automatically switch to Power saving mode when the battery is low.
 - Power saving mode on at: allows you to set the battery power level when Power saving mode will be enabled.
 - Turn off Wi-Fi: automatically turns off Wi-Fi when you are not connected with Mobile AP.
 - Turn off Bluetooth: automatically turns off Bluetooth when it is not in use.
 - Turn off GPS: automatically turns off GPS when it is not in use.
 - Turn off Sync: automatically turns off Sync when the phone is not synchronizing with the server.
 - **Brightness**: allows you to manually adjust the brightness of the screen. Tap this option to enable the next Brightness option.
 - Brightness: allows you to set the Brightness percentage of the screen.

- Screen timeout: allows you to set the time before the screen times out and goes into lock mode.
- Power saving tips: describes various ways to conserve battery power.

Location and Security

The Location and Security settings allow you to set up how the phone will determine your location and the security settings for your phone.

Use Wireless Networks

Before you use applications such as Google Maps and find your location or search for places of interest, you must enable the Use wireless networks option or enable the GPS satellites.

- From the Home screen, tap
 → Settings → Location
 and security.
- Tap Use wireless networks to enable location information using the wireless network.

Use GPS satellites

This option allows you to locate locations accurately to street level. To conserve power, deselect this option when not in use.

- From the Home screen, tap
 → Settings → Location
 and security.
- 2. Tap Use GPS satellites to enable the GPS satellite.

Use sensor aiding

This options enhances the positioning capabilities of your phone and conserves power using sensors.

- From the Home screen, tap
 → Settings → Location
 and security.
- 2. Tap Use sensor aiding to enable the positioning sensors.

Set up screen lock

Creating a screen unlock pattern increases security on the phone.

- From the Home screen, tap
 → Settings → Location
 and security.
- Tap Set up screen lock and select one of the following options:
 - None: disables screen unlock security.
 - Pattern: requires that you draw a pattern on the screen to unlock it.
 Follow the onscreen instructions.
 - PIN: requires that you enter a numeric PIN number to unlock the screen. Enter a PIN number, confirm it, then tap OK.
 - Password: requires that you enter a password to unlock the screen. Enter a password, confirm it, then tap OK. Password must contain at least one letter

Note: Once you have set the screen lock option, the **Set screen lock** option changes to **Change screen lock**.

Set up SIM card lock

Prevent another user from using your SIM card to make unauthorized calls or from accessing information stored on your SIM card by protecting the information using a PIN code.

When enabled, your phone will ask for a PIN number each time you use the phone. Using this option you can also change your SIM PIN number.

- From the Home screen, tap
 → Settings → Location
 and security.
- Tap Set up SIM card lock.
- 3. Tap Lock SIM card, enter your SIM PIN code, then tap OK.

Note: You must activate Lock SIM card before you can change your SIM PIN code.

- 4. Tap Change SIM PIN.
- 5. Enter your old SIM PIN code and tap **OK**.
- 6. Enter your new SIM PIN code and tap OK.
- 7. Re-type your new SIM PIN code and tap **OK**.

Visible passwords

When you create a phone password you can also configure the phone to display the password as you type it instead of using an asterisk (*).

- From the Home screen, tap
 → Settings → Location
 and security.
- Tap Visible passwords to create a checkmark and activate this feature.

Set up/Change password

Use this option to set up your password when one is first required or change your current password.

- From the Home screen, tap
 → Settings → Location
 and security → Set up/Change password.
- 2. Enter a new password and tap Confirm.
- 3. Enter the new password again and tap Confirm.

Select device administrators

The Device Administration feature allows you to select one or more administration applications that control your device for security purposes (for example, if your phone is lost of stolen). These applications enforce remote or local device security policies.

Some of the features a device administration application might control are:

- Setting the number of failed password attempts before the device is restored to factory settings.
- Automatically locking the device.
- Restoring factory settings on the device.

Note: If a device uses multiple enabled administration applications, the strictest policy is enforced.

- From the Home screen, tap
 → Settings → Location
 and security.
- 2. Tap Select device administrators.
- Select a device administrator and follow the prompts. If no device administrators are listed, you can download them from the Play Store.

Credential storage

This option allows certain applications to access secure certificates and other credentials. Certificates and credentials can be installed to the SD card and password protected.

- From the Home screen, tap
 → Settings → Location
 and security.
- Tap Use secure credentials to activate this feature. A check mark displayed next to the feature indicates secure credentials is active.
- Tap Install from USB storage to install encrypted certificates from USB storage.
- Tap Set password to set or change the credential storage password.
- Tap Clear storage to clear the storage (SD card or phone memory) of all contents and reset the credentials password.

Applications

This device can be used for Android development. You can write applications in the SDK and install them on this device, then run the applications using the hardware, system, and network. This feature allows you to configure the device for development.

Warning! Android Dev Phone 1 devices are not intended for nondeveloper end-users. Because the device can be configured with system software not provided by or supported by Google or any other company, end-users operate these devices at their own risk.

Unknown sources

This feature allows you to download and install non-Play Store applications.

- From the Home screen, tap
 → Settings →
 Applications.
- 2. Tap Unknown sources.

A check mark is displayed to indicate it is active.

Manage Applications

This feature allows you to manage installed applications. You can view and control currently running services, or use the device for application development. Using the Samsung Apps option the device notifies you when you are using Wi-Fi or Packet data for Samsung applications.

You can also view the amount of memory or resources used as well as the remaining memory and resources for each of the applications on your phone and clear the data, cache, or defaults.

From the Home screen, tap → Settings Applications → Manage applications.

Clearing application cache and data

Important! You must have downloaded applications installed to use this feature.

- From the Home screen, tap → Settings → Applications → Manage applications.
- 2. Tap an application in which to clear the cache or data.
- 3. Tap Clear data or Clear Cache.

Uninstalling third-party applications

Important! You must have downloaded applications installed to use this feature.

- From the Home screen, tap
 → Settings →
 Applications → Manage applications.
- 2. Tap the application you want to uninstall and tap Uninstall.
- 3. At the prompt, tap **OK** to uninstall the application.
- At the Uninstall finished prompt, tap OK.

Running services

The Running services option allows you to view and control currently running services such as Daily Briefing, DataService, Google Talk, SNS (messaging), Swype, and more.

To stop a service from running on your phone:

- From the Home screen, tap → Settings → Applications → Running Services.
- Tap a service.
- 3. Tap **Stop** to stop the service from running on your phone.

Memory usage

The Memory usage option allows you to view the memory usage for your applications.

- From the Home screen, tap → Settings → Applications → Memory usage.
- Tap the Downloaded tab to see the memory usage for Downloaded applications.
- Tap the All tab displays the Memory usage for the different applications that are present on your phone.
- Tap the On SD card tab to see the memory usage for applications that are stored on your SD card.
- Tap the Running tab to see the memory usage for applications that are presently running.

Battery usage

The Battery usage option allows you to view the battery usage of the applications and features on your phone.

- From the Home screen, tap
 → Settings →
 Applications → Battery usage.
- Press
 → Refresh to refresh the display.

Development

■ From the Home screen, tap → Settings → Applications → Development.

Important! These features are used for development purposes only.

USB debugging

This feature is used for development purposes only.

Allow mock locations

This feature is used for development purposes only.

If you are a developer who is testing a GPS applications using this device, you can tell the device that the phone is at different GPS locations. In other words, the phone is allowed to "mock" the coordinates.

Accounts and Synchronization

- Sign in to your Google account.
- From the Home screen, tap
 → Settings → Accounts
 and sync.
- 3. From the General sync settings section, tap one of the following options:
 - Background data: allows your phone to use data in the background.
 - Auto-sync: automatically synchronizes your data with the phone.
- From the Manage accounts section, tap on an open account to set the account settings or tap on Add account to add a new account.

Motion

The Motion settings allow you to set up various Motion activation services.

- From the Home screen, tap
 → Settings → Motion.
- Tap Motion activation to activate the feature. A checkmark is displayed.
- The following options are available:
 - Turn over: allows you to mute incoming calls and sounds by turning your phone over. Tap to activate.

- Tilt: allows you to use the Tilt feature to reduce or enlarge the screen when in Gallery or Browser. Tap Tilt, then set the sensitivity using the slider. A checkmark appears in the Use motion box. Tap to deactivate Tilt.
- Panning: allows you to use the Panning feature to move icons from one page to another in Home and Application edit mode. Tap Tilt, then set the sensitivity using the slider. A checkmark appears in the Use motion box. Tap to deactivate Panning.
- Double tap: automatically prepares your phone for voice commands in Voice talk. Tap to activate.
- Scroll down to the Tutorial section and tap a selection to see a demonstration of how it works.

Privacy

Location settings, backup configurations, or reset the phone to erase all personal data.

Back up my data

By setting this option, the Google server will back up all of your settings and data.

- Tap Back up my data.A green checkmark will appear.

Automatic restore

By setting this option, when you reinstall an application, all of your backed up settings and data will be restored.

- Tap Automatic restore.

A green checkmark will appear.

Factory data reset

From this menu you can reset your phone and sound settings to the factory default settings.

- From the Home screen, tap
 → Settings → Privacy.
- 2. Tap Factory data reset, then tap Reset phone.
- At the confirmation screen, tap Erase everything. The phone resets to the factory default settings automatically and when finished, displays the Home screen.

Warning! Performing a Factory data reset will erase all data from your phone and internal SD card, including your Google account, system and application data and settings, and downloaded applications. It will not erase current system software, bundled applications, and external SD card files such as music and photos.

Storage

From this menu you can view the memory allocation for the memory card and USB as well as mount or unmount the SD card. For more information about mounting or unmounting the SD card, see "Memory Card" on page 44

To view the memory allocation for your external SD card:

- From the Home screen, tap → Settings →
 Storage. The available memory displays under the Total
 space and Available space headings for both SD card and
 USB Storage.
- Tap Format USB storage to erase all data on the phone's USB storage such as music and photos.

Language and keyboard

This setting allows you to configure the language in which to display the menus. You can also set onscreen keyboard options.

■ From the Home screen, tap → Settings → Language and keyboard.

Select language

To set the language that the menus display on the phone:

- From the Home screen, tap
 → Settings → Language
 and keyboard → Select language.
- 2. Tap on a language from the list.

Select input method

There are three input methods available: Swype, Android keyboard, and Samsung keypad. Samsung keypad is the default text input method.

- From the Home screen, tap → Settings → Language and keyboard → Select input method.
- Select either Samsung keypad, or Swype and follow the instructions below.

Configure Swype Settings

- Tap one of the following Swype settings to activate the setting:

Select Input Method

Allows to select the current input method. Choose from either **Samsung keypad** or **Swype**.

How to Swype

Provides an on-screen list of accessible tutorial topics related to Swype.

Personal Dictionary

Allows you to manage your own personal dictionary of user defined terms

Use the "+" or "-" buttons to either add or remove your terms from this dictionary.

Preferences

Allows you to view or modify your Swype options and parameters.

- Audio feedback: turns on sounds generated by the Swype application.
- Vibrate on keypress: activates a vibration sensation as you enter text using the keypad.
- Show tips: activates helpful on-screen tips for Swype usage.
- Auto-spacing: automatically inserts a space between words.
 When you finish a word, just lift your finger or stylus and start the next word.
- Auto-capitalization: automatically capitalizes the first letter of a sentence.
- Show complete trace: displays the complete trace as you swipe across the screen
- Word suggestion: uses a built-in word database to suggest words while entering text in Swype.
- Speed vs. accuracy: sets how quickly Swype responds to onscreen input. Move the slider between Fast Response (speed) or Error Tolerance (accuracy) and tap OK.

- Reset Swype's dictionary: deletes all words you have added to Swype's current dictionary.
- Version: provides the current software version for the Swype application.

Language Options

Language: allows you to select the current text input language.
 Default language is US English.

Samsung Keypad settings

From this menu you can set Samsung keypad options.

- From the Home screen, tap → Settings → Language and keyboard → Samsung keypad.
- 2. Tap the Portrait keypad types field and select a text input method:
 - · Qwerty Keypad
 - 3x4 Keypad
- 3. Tap the Input languages field and tap one of the languages.
- To use XT9 Predictive text method, tap XT9. For more information, refer to "Entering Text Using the Samsung Keypad" on page 59.
- If you are using XT9 Predictive text method, tap XT9 advanced settings. For more information, refer to "XT9 Advanced Settings" on page 174.

- Tap the Keypad sweeping field to be able to sweep the keypad and change from ABC to?123 mode. For more information, refer to "Text Input Methods" on page 59.
- Tap the Character preview field to display small pop-up windows to verify the character you entered.
- Tap the Auto-capitalization field to enable automatic capitalization.
- Tap Voice input to activate the Voice input feature. Voice input is an experimental feature using Google's networked speech recognition application.
- 10. Tap Auto-full stop to activate the Auto-full stop feature. When you double space in a message, a period and space is added and the keyboard is placed into Uppercase mode so you can start the new sentence with a capital letter.
- Tap Tutorial for a short tutorial on using the Samsung keypad.

XT9 Advanced Settings

The following XT9 Advanced settings are only available if the XT9 field has been selected.

- Tap the Word completion field to enable word completion. Your phone will predict how to complete the word you have started.
- Tap the Word completion point field to set how many letters should be entered before a prediction is made.
- 4. Tap the Spell correction field. This option corrects typographical errors by selecting from a list of possible words that reflect the characters of the keys you tapped as well as the characters of nearby keys.
- Tap the Next word prediction field to enable word prediction for the next word.
- Tap the Auto-append field to automatically add predictions to the word you are typing.
- Tap the Auto-substitution field to automatically replace words that you are typing. This option will help for accidental misspellings.

- Tap the Regional correction field. This option sets the device to automatically correct mistyped words according to normal spelling for your region.
- Tap the Recapture field. This option sets the device to redisplay the word suggestion list when you select the wrong word from the list.
- 10. To add a new word to the T9 dictionary: Tap the XT9 my words field, then press Add. Enter the new word in the Register to XT9 my words field, then tap Done.
- To add words to substitute (for example youve becomes you've) tap XT9 auto-substitution.
- 12. A list of substitutions is displayed. If you don't see the substitution you want, press → Add, and then input the Shortcut word and Substitution word. Tap Done.

Voice Input and Output

This feature allows the device to provide a verbal readout of onscreen data such as messages and incoming caller information.

- From the Home screen, tap
 → Settings → Voice input and output.
- Tap Voice recognition to and tap on the Voice recognition format that you want. Select Samsung powered by Vlingo or Google.
- 3. Tap Voice recognition settings to access the following options:
 - Language: selects an input language and associated dialect recognition (if available).
 - SafeSearch: allows you to filter explicit images when performing voice searches. You can set to Off. Moderate. or Strict.
 - Block offensive words: allows you to block recognition of known offensive words or language. (A green check mark indicates the feature is active).
 - Personalized recognition: allows you to improve speech recognition and accuracy by allowing Google to associate your recordings with your Google Account.

 Google Account dashboard: allows you to manage your collected data via your Google account.

Configuring Text-to-speech

This feature allows the phone to provide a verbal readout of on-screen data such as messages and incoming caller information. This action is called TTS (Text To Speech).

- From the Home screen, tap
 → Settings → Voice input
 and output → Text-to-speech settings.
- Configure the available options to alter the settings associated with this feature:
 - Listen to an example: plays a short example of what the text-tospeech feature sounds like on your device when activated.
 - **Driving mode**: allows incoming calls and new notifications to be read out automatically.
 - Driving mode settings: allows you to choose exactly what information is read out automatically.
 - Always use my settings: accepts an override of application settings with personal configurations for this text-to-speech settings screen. If enabled, your device defaults to using the text-to-speech feature.
 - Default engine: displays the default engine used for voice recognition.

- Install voice data: confirms the installation of necessary data required for voice synthesis.
- Speech rate: adjusts the rate at which onscreen text is spoken by the device. Choose from: Very slow, Slow, Normal, Fast, and Very fast.
- Language: assigns the language used for verbal readout. Choose from German (Germany), English (United Kingdom), English (United States), Spanish (Spain), French (France), or Italian (Italy).
- **Samsung TTS**: allows you to modify settings for the Samsung TTS default engine.
- Pico TTS: allows you to modify settings for the Pico TTS default engine.

Accessibility Settings

This service is able to collect all the text you type, including personal data credit card numbers except passwords. It may also log your user interface interactions. It comes from the applications such as TalkBack.

From the Home screen, tap
 → Settings →
 Accessibility.

Note: Initially, it might be necessary to download accessibility applications from the Play Store.

- Download a suitable screen reader from Play Store. For more information, refer to "Play Store" on page 143.
- Return to the Accessibility menu and tap Accessibility to create a checkmark and activate the feature.
- Tap the services for which you want data to log. A checkmark will appear.
- If an Attention prompt appears, tap OK to continue or Cancel to exit.
- Tap The power key ends calls option to create a checkmark if you want to press the power key to end calls. This will not turn off the screen.

Dock Settings

This menu allows you to configure the audio output settings when the device is mounted to a compatible docking station.

- From the Home screen, tap
 → Settings → Dock settings.
- Tap Audio output mode to use the external dock speakers when the phone is docked.

Date and Time

This menu allows you to change the current time and date displayed.

- From the Home screen, tap
 → Settings → Date and time.
- Tap Automatic to allow the network set the date and time.

Important! Deactivate Automatic to manually set the rest of the options.

- Tap Set date and use the plus or minus icons to set the Month, Day, and Year then tap Set.
- **4.** Tap **Select time zone**, then tap a time zone.
- Tap Set time and use the plus or minus icons, set Hour, and Minute. Tap PM or AM, then tap Set.
- Optional: Tap Use 24-hour format. If this is not selected the phone automatically uses a 12-hour format.
- Tap Select date format and tap the date format type.

About Phone

This menu contains legal information, system tutorial information, and other phone information such as the model number, firmware version, baseband version, kernal version, and software build number.

To access phone information:

- From the Home screen, tap → Settings → About phone. The following information displays:
 - Status: displays the battery status, the level of the battery (percentage), the phone number for this device, the network connection, signal strength, mobile network type, service state, roaming status, mobile network state, IMEI number, IMEI SV, WI-FI MAC address. Bluefooth address. and Up time.
 - Battery usage: displays the applications or services (in percentages) that are using battery power.
 - Legal information: This option displays information about Open source licenses, License settings, as well as Google legal information. This information clearly provides copyright and distribution legal information and facts as well as Google Terms of Service, Terms of Service for Android-powered Phones, and much more pertinent information as a reference.

 Read the information and terms, then press
 to return to the

Read the information and terms, then press to return to the Settings menu.

Tip: To find your device's DivX[®] registration code and information about registering your device to play DivX protected video, tap License information \rightarrow License settings \rightarrow DivX® VOD.

- Model number: displays the phone's model number.
- Android version: displays the android version loaded on this handset
- Baseband version: displays the baseband version loaded on this handset.
- Kernel version: displays the kernel version loaded on this handset.
- Build number: displays the software, build number.

Note: Baseband, kernal and build numbers are usually used for updates to the handset or support.

Software Update

The Software Update feature enables you to use your phone to connect to the network and upload any new phone software directly to your phone. The phone automatically updates with the latest available software when you access this option.

1. From the Home screen, tap \longrightarrow Settings \rightarrow Software update → Updates.

- or -

Tap if it appears in the Status bar area, tap it to be taken to the Software updated screen.

- Read the Software update information screen and tap Confirm.
- Select an available option:

Note: You configure the device's software update parameters.

- OK: Tap this option to connect to the remote server, detect if there is an available update, the begin the download over your existing data connection
 - Software updates can include bug fixes, enhancements to services, to the device or currently installed software.

- Wi-Fi settings: Enable this option to only download available updates via an active Wi-Fi connection. If disabled, the device will begin available downloads via its' T-Mobile connection.
- Cancel: Tap this option to cancel the operation.

Section 11: Health and Safety Information

This section outlines the safety precautions associated with using your phone. The terms "mobile device" or "cell phone" are used in this section to refer to your phone. Read this information before using your mobile device.

Exposure to Radio Frequency (RF) Signals

The U.S. Food and Drug Administration (FDA) has published information for consumers relating to Radio Frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

Do cell phones pose a health hazard?

Many people are concerned that cell phone radiation will cause cancer or other serious health hazards. The weight of scientific evidence has not linked cell phones with any health problems.

Cell phones emit low levels of Radio Frequency (RF) energy. Over

the past 15 years, scientists have conducted hundreds of studies looking at the biological effects of the radio frequency energy emitted by cell phones. While some researchers have reported biological changes associated with RF energy, these studies have failed to be replicated. The majority of studies published have failed to show an association between exposure to radio frequency from a cell phone and health problems.

The low levels of RF cell phones emit while in use are in the microwave frequency range. They also emit RF at substantially reduced time intervals when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects.

The biological effects of radio frequency energy should not be confused with the effects from other types of electromagnetic energy.

Very high levels of electromagnetic energy, such as is found in X-rays and gamma rays, can ionize biological tissues. Ionization is a process where electrons are stripped away from their normal locations in atoms and molecules. It can permanently damage biological tissues including DNA, the genetic material.

The energy levels associated with radio frequency energy, including both radio waves and microwaves, are not great enough to cause ionization of atoms and molecules. Therefore, RF energy is a type of non-ionizing radiation. Other types of non-ionizing radiation include visible light, infrared radiation (heat), and other forms of electromagnetic radiation with relatively low frequencies.

While RF energy does not ionize particles, large amounts can increase body temperatures and cause tissue damage. Two areas of the body, the eyes and the testes, are particularly vulnerable to RF heating because there is relatively little blood flow in them to carry away excess heat.

Research Results to Date: Is there a connection between RF and certain health problems?

The results of most studies conducted to date say no. In addition, attempts to replicate and confirm the few studies that have shown a connection have failed.

The scientific community at large therefore believes that the weight of scientific evidence does not show an association between exposure to Radio Frequency (RF) from cell phones and adverse health outcomes. Still the scientific community has supported additional research to address gaps in knowledge. Some of these studies are described below.

Interphone Study

Interphone is a large international study designed to determine whether cell phones increase the risk of head and neck cancer. A report published in the International Journal of Epidemiology (June, 2010) compared cell phone usage for more than 5,000 people with brain tumors (glioma and meningioma) and a similar number of healthy controls.

Results of this study did NOT show that cell phones caused brain cancer. In this study, most people had no increased risk of brain cancer from using cell phones. For people with the heaviest use of cell phones (an average of more than ½ hour per day, every day, for over 10 years) the study suggested a slight increase in brain cancer. However, the authors determined that biases and errors prevented any conclusions being drawn from this data. Additional information about Interphone can be found at http://www.iarc.fr/en/media-centre/pr/2010/pdfs/pr200_E.pdf.

Interphone is the largest cell phone study to date, but it did not answer all questions about cell phone safety. Additional research is being conducted around the world, and the FDA continues to monitor developments in this field.

International Cohort Study on Mobile Phone Users (COSMOS)

The COSMOS study aims to conduct long-term health monitoring of a large group of people to determine if there are any health issues linked to long-term exposure to radio frequency energy from cell phone use. The COSMOS study will follow approximately 300,000 adult cell phone users in Europe for 20 to 30 years. Additional information about the COSMOS study can be found at

http://www.ukcosmos.org/index.html.

Risk of Brain Cancer from Exposure to Radio Frequency Fields in Childhood and Adolescence (MOBI-KIDS)

MOBI-KIDS is an international study investigating the relationship between exposure to radio frequency energy from communication technologies including cell phones and brain cancer in young people. This is an international multi-center study involving 14 European and non-European countries. Additional information about MOBI-KIDS can be found at http://www.creal.cat/programes-recerca/en_projectes-creal/view.php?ID=39.

Surveillance, Epidemiology, and End Results (SEER) Program of the National Cancer Institute

The National Cancer Institute (NCI) actively follows cancer statistics in the United States to detect any change in rates of new cases for brain cancer. If cell phones play a role in risk for brain cancer, rates should go up, because heavy cell phone use has been common for quite some time in the U.S. Between 1987 and 2005, the overall age-adjusted incidence of brain cancer did not increase. Additional information about SEER can be found at http://seer.cancer.gov/.

Cell Phone Industry Actions

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the cell phone industry to take a number of steps, including the following:

- Support-needed research on possible biological effects of RF for the type of signal emitted by cell phones;
- Design cell phones in a way that minimizes any RF exposure to the user; and
- Cooperate in providing users of cell phones with the current information on cell phone use and human health concerns.

The FDA also is working with voluntary standard-setting bodies such as the Institute of Electrical and Electronics Engineers (IEEE), the International Commission on Non-Ionizing Radiation Protection (ICNIRP), and others to assure that safety standards continue to adequately protect the public.

Reducing Exposure: Hands-Free Kits and Other Accessories

Steps to Reduce Exposure to Radio Frequency Energy

If there is a risk from being exposed to radio frequency energy (RF) from cell phones - and at this point we do not know that there is - it is probably very small. But, if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your RF exposure.

- · Reduce the amount of time spent using your cell phone;
- Use speaker mode or a headset to place more distance between your head and the cell phone.

Hands-Free Kits

Hands-free kits may include audio or Bluetooth[®] headsets and various types of body-worn accessories such as belt-clips and holsters. Combinations of these can be used to reduce RF energy absorption from cell phones.

Headsets can substantially reduce exposure because the phone is held away from the head in the user's hand or in approved body-worn accessories. Cell phones marketed in the U.S. are required to meet RF exposure compliance requirements when used against the head and against the body.

Because there are no known risks from exposure to RF emissions from cell phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used for convenience and comfort. They are also required by law in many states if you want to use your phone while driving.

Cell Phone Accessories that Claim to Shield the Head from RF Radiation

Because there are no known risks from exposure to RF emissions from cell phones, there is no reason to believe that accessories which claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone.

Studies have shown that these products generally do not work as advertised. Unlike "hands-free" kits, these so-called "shields" may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption.

Children and Cell Phones

The scientific evidence does not show a danger to any users of cell phones from RF exposure, including children and teenagers. The steps adults can take to reduce RF exposure apply to children and teenagers as well.

- Reduce the amount of time spent on the cell phone;
- Use speaker mode or a headset to place more distance between the head and the cell phone.

Some groups sponsored by other national governments have advised that children be discouraged from using cell phones at all. For example, The Stewart Report from the United Kingdom made such a recommendation in December 2000. In this report, a group of independent experts noted that no evidence exists that using a cell phone causes brain tumors or other ill effects. Their recommendation to limit cell phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations (updated 10/1/2010):

- FCC RF Safety Program: http://www.fcc.gov/oet/rfsafety/.
- Environmental Protection Agency (EPA): http://www.epa.gov/radtown/wireless-tech.html.
- Occupational Safety and Health Administration (OSHA): http://www.osha.gov/SLTC/radiofrequencyradiation/.

 (Note: This web address is case sensitive.)
- National Institute for Occupational Safety and Health (NIOSH): http://www.cdc.gov/niosh/.
- World Health Organization (WHO): http://www.who.int/peh-emf/en/.
- International Commission on Non-Ionizing Radiation Protection: http://www.icniro.de.
- Health Protection Agency: http://www.hpa.org.uk/Topics/Radiation/.
- US Food and Drug Administration:
 http://www.fda.gov/Radiation-EmittingProducts/
 RadiationEmittingProductsandProcedures/
 HomeBusinessandEntertainment/CellPhones/default.htm.

Specific Absorption Rate (SAR) Certification Information

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for Radio Frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government.

These FCC RF exposure limits are derived from the recommendations of two expert organizations: the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The RF exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg).

The FCC SAR limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum reported value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output of the phone.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the SAR limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC. For body-worn operation, this phone has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the mobile device a minimum of 1.0 cm from the body.

Use of other accessories may not ensure compliance with FCC RF exposure guidelines. The FCC has granted an Equipment Authorization for this mobile phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. The maximum SAR values for this model phone as reported in the FCC equipment authorization grant are:

WCDMA/GSM/EDGE

The highest reported SAR values are:

- Head: 0.36 W/kg
- Body-worn accessory: 0.78 W/kg
- Product Specific Use: 0.90 W/kg

WLAN

The highest reported SAR values are:

- Head: 0.19 W/kg
- Body-worn accessory: 0.12 W/kg
- Product Specific Use: 0.11 W/kg

SAR information on this and other model phones can be accessed online on the FCC's website through https://transition.fcc.gov/oet/rfsafety/sar.html. To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional SAR information can also be obtained at

 $\underline{\text{http://www.fcc.gov/encyclopedia/specific-absorption-rate-sar-cellular-telephones.}}$

FCC Part 15 Information to User

Pursuant to part 15.21 of the FCC Rules, you are cautioned that changes or modifications not expressly approved by Samsung could void your authority to operate the device.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Commercial Mobile Alerting System (CMAS)

This device is designed to receive wireless emergency alerts from the Commercial Mobile Alerting System ("CMAS"; which may also be known as the Personal Localized Alerting Network ("PLAN")). If your wireless provider has chosen to participate in CMAS/PLAN, alerts are available while in the provider's coverage area. If you travel outside your provider's coverage area, wireless emergency alerts may not be available. For more information, please contact your wireless provider.

Smart Practices While Driving On the Road - Off the Phone

The primary responsibility of every driver is the safe operation of his or her vehicle.

Responsible drivers understand that no secondary task should be performed while driving whether it be eating, drinking, talking to passengers, or talking on a mobile phone - unless the driver has assessed the driving conditions and is confident that the secondary task will not interfere with their primary responsibility.

Do not engage in any activity while driving a moving vehicle which may cause you to take your eyes off the road or become so

absorbed in the activity that your ability to concentrate on the act of driving becomes impaired. Samsung is committed to promoting responsible driving and giving drivers the tools they need to understand and address distractions.

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas. For example, only hands-free use may be permitted in certain areas.

Before answering calls, consider your circumstances. Let the call go to voicemail when driving conditions require. Remember, driving comes first, not the call!

If you consider a call necessary and appropriate, follow these tips:

- Use a hands-free device:
- · Secure your phone within easy reach;
- Place calls when you are not moving;
- Plan calls when your car will be stationary;
- Do not engage in stressful or emotional conversations;
- Let the person with whom you are speaking know that you are driving and will suspend the call if necessary;
- Do not take notes or look up phone numbers while driving;

Notice regarding legal restrictions on mounting this device in an automobile:

Laws in some states may prohibit mounting this device on or near the windshield of an automobile. In other states, the law may permit mounting this device only in specific locations in the automobile. Be sure to consult the state and local laws or ordinances where you drive before mounting this device in an automobile. Failure to comply with these restrictions could result in fines, penalties, or other damages.

Never mount this device in a manner that will obstruct the driver's clear view of the street and traffic.

Never use wireless data services such as text messaging, Web browsing, or e-mail while operating a vehicle.

Never watch videos, such as a movie or clip, or play video games while operating a vehicle.

For more information, go to http://www.ctia.org.

Battery Use and Safety

Important! Handle and store batteries properly to avoid injury or damage. Most battery issues arise from improper handling of batteries and, particularly, from the continued use of damaged batteries.

- Do not disassemble, crush, puncture, shred, or otherwise attempt to change the form of your battery. Do not put a high degree of pressure on the battery. This can cause leakage or an internal short-circuit, resulting in overheating.
- Do not let the phone or battery come in contact with liquids. Liquids can get into the phone's circuits, leading to corrosion. Even when the phone appears to be dry and appears to operate normally, the circuitry could slowly corrode and pose a safety hazard. If the phone and/or battery get wet, have them checked by your service provider or contact Samsung, even if they appear to be working properly.
- Do not place your battery in or near a heat source. Excessive
 heating can damage the phone or the battery and could cause the
 phone or the battery to explode. Do not dry a wet or damp battery with
 an appliance or heat source such as a microwave oven, hair dryer,
 iron, or radiator. Avoid leaving your phone in your car in high
 temperatures.
- Do not dispose of the phone or the battery in a fire. The phone or the battery may explode when overheated.
- Do not handle a damaged or leaking battery. Do not let leaking battery fluid come in contact with your eyes, skin or clothing. For safe disposal options, contact your nearest Samsung-authorized service center.

- Avoid dropping the cell phone. Dropping the phone or the battery, especially on a hard surface, can potentially cause damage to the phone and battery. If you suspect damage to the phone or battery, take it to a service center for inspection.
- Never use any charger or battery that is damaged in any way.
- Do not allow the battery to touch metal objects. Accidental
 short-circuiting can occur when a metallic object (coin, key, jewelry,
 clip, or pen) causes a direct connection between the + and terminals
 of the battery (metal strips on the battery), for example when you
 carry a spare battery in a pocket or bag. Short-circuiting the terminals
 may damage the battery or the object causing the short-circuiting.

Important! Use only Samsung-approved batteries, and recharge your battery only with Samsung-approved chargers which are specifically designed for your phone.

WARNING!

Use of a non-Samsung-approved battery or charger may present a risk of fire, explosion, leakage, or other hazard. Samsung's warranty does not cover damage to the phone caused by non-Samsung-approved batteries and/or chargers.

- Do not use incompatible cell phone batteries and chargers. Some
 websites and second-hand dealers not associated with reputable
 manufacturers and carriers, might be selling incompatible or even
 counterfeit batteries and chargers. Consumers should purchase
 manufacturer or carrier-recommended products and accessories. If
 unsure about whether a replacement battery or charger is compatible,
 contact the manufacturer of the battery or charger.
- Misuse or use of incompatible phones, batteries, and charging devices could result in damage to the equipment and a possible risk of fire, explosion, or leakage, leading to serious injuries, damages to your phone, or other serious hazard.

Samsung Mobile Products and Recycling

Samsung cares for the environment and encourages its customers to recycle Samsung mobile devices and genuine Samsung accessories.

Proper disposal of your mobile device and its battery is not only important for safety, it benefits the environment. Batteries must be recycled or disposed of properly.

Recycling programs for your mobile device, batteries, and accessories may not be available in your area.

We've made it easy for you to recycle your old Samsung mobile device by working with respected take-back companies in every state in the country.

Drop It Off

You can drop off your Samsung-branded mobile device and batteries for recycling at one of our numerous Samsung Recycling Direct (SM) locations. A list of these locations may be found at:

http://pages.samsung.com/us/recyclingdirect/ usactivities_environment_samsungrecyclingdirect_locations.jsp.

Samsung-branded devices and batteries will be accepted at these locations for no fee.

Consumers may also recycle their used mobile device or batteries at many retail or carrier-provided locations where mobile devices and batteries are sold. Additional information regarding specific locations may be found at: http://www.epa.gov/epawaste/partnerships/plugin/cellphone/ index.htm or at http://www.call2recycle.org/.

Mail It In

The Samsung Mobile Take-Back Program will provide Samsung customers with a free recycling mailing label. Just go to

http://www.samsung.com/us/aboutsamsung/citizenship/ usactivities_environment_samsungrecyclingdirect.html?INT=STA_r ecyle_your_phone_page and follow the instructions to print out a free pre-paid postage label and then send your old mobile device or battery to the address listed, via U.S. Mail, for recycling.

Dispose of unwanted electronics through an approved recycler.

To find the nearest recycling location, go to our website:

www.samsung.com/recyclingdirect

Or call, (877) 278-0799.

Follow local regulations regarding disposal of mobile devices and batteries

Dispose of your mobile device and batteries in accordance with local regulations. In some areas, the disposal of these items in household or business trash may be prohibited. Help us protect the environment - recycle!

Warning! Never dispose of batteries in a fire because they may explode.

UL Certified Travel Charger

The Travel Charger for this phone has met applicable UL safety requirements. Please adhere to the following safety instructions per UL guidelines:

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE.

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS.

DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

FOR CONNECTION TO A SUPPLY NOT IN NORTH AMERICA, USE AN ATTACHMENT PLUG ADAPTOR OF THE PROPER CONFIGURATION FOR THE POWER OUTLET.

THIS POWER UNIT IS INTENDED TO BE CORRECTLY ORIENTED IN A VERTICAL OR HORIZONTAL OR FLOOR MOUNT POSITION.

Display / Touch-Screen

Please note the following information when using your mobile device:

WARNING REGARDING DISPLAY

The display on your mobile device is made of glass or acrylic and could break if your mobile device is dropped or if it receives significant impact. Do not use if screen is broken or cracked as this could cause injury to you.

WARRANTY DISCLAIMER: PROPER USE OF A TOUCH-SCREEN MOBILE DEVICE

If your mobile device has a touch-screen display, please note that a touch-screen responds best to a light touch from the pad of your finger or a non-metallic stylus. Using excessive force or a metallic object when pressing on the touch-screen may damage the tempered glass surface and void the warranty. For more information, please refer to the "Standard Limited Warranty".

GPS & AGPS

Certain Samsung mobile devices can use a Global Positioning System (GPS) signal for location-based applications. A GPS uses satellites controlled by the U.S. Government that are subject to changes implemented in accordance with the Department of Defense policy and the 2008 Federal Radio navigation Plan (FRP). Changes may affect the performance of location-based technology on your mobile device.

Certain Samsung mobile devices can also use an Assisted Global Positioning System (AGPS), which obtains information from the cellular network to improve GPS performance. AGPS uses your wireless service provider's network and therefore airtime, data

charges, and/or additional charges may apply in accordance with your service plan. Contact your wireless service provider for details.

Your Location

Location-based information includes information that can be used to determine the approximate location of a mobile device. Mobile devices which are connected to a wireless network transmit location-based information. Additionally, if you use applications that require location-based information (e.g. driving directions), such applications transmit location-based information. The location-based information may be shared with third-parties, including your wireless service provider, applications providers, Samsung, and other third-parties providing services.

Use of AGPS in Emergency Calls

When you make an emergency call, the cellular network may activate AGPS technology in your mobile device to tell the emergency responders your approximate location.

AGPS has limitations and might not work in your area. Therefore:

- Always tell the emergency responder your location to the best of your ability; and
- Remain on the mobile device for as long as the emergency responder instructs you.

Navigation

Maps, directions, and other navigation-data, including data relating to your current location, may contain inaccurate or incomplete data, and circumstances can and do change over time. In some areas, complete information may not be available. Therefore, you should always visually confirm that the navigational instructions are consistent with what you see before following them. All users should pay attention to road conditions, closures, traffic, and all other factors that may impact safe driving or walking. Always obey posted road signs.

Emergency Calls

This mobile device, like any wireless mobile device, operates using radio signals, wireless and landline networks, as well as user-programmed functions, which cannot guarantee connection in all conditions, areas, or circumstances.

Therefore, you should never rely solely on any wireless mobile device for essential communications (medical emergencies, for example). Before traveling in remote or underdeveloped areas, plan an alternate method of contacting emergency services personnel. Remember, to make or receive any calls, the mobile device must be switched on and in a service area with adequate signal strength.

Emergency calls may not be possible on all wireless mobile device networks or when certain network services and/or mobile device features are in use. Check with local service providers.

To make an emergency call:

- 1. If the mobile device is not on, switch it on.
- 2. From the Home screen, tap 📞 . The dialer is displayed.
- Key in the emergency number for your present location (for example, 911 or other official emergency number). Emergency numbers vary by location.
- 4. Press the key.

If certain features are in use (call blocking, for example), you may first need to deactivate those features before you can make an emergency call. Consult your User Manual and your local cellular service provider. When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your mobile device may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Care and Maintenance

Your mobile device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years:

Keep your Samsung Mobile Device away from:

Liquids of any kind

Keep the mobile device dry. Precipitation, humidity, and liquids contain minerals that will corrode electronic circuits. If the mobile device does get wet, do not accelerate drying with the use of an oven, microwave, or dryer, because this may damage the mobile device and could cause a fire or explosion.

Do not use the mobile device with a wet hand. Doing so may cause an electric shock to you or damage to the mobile device.

Extreme heat or cold

Avoid temperatures below 0°C / 32°F or above 45°C / 113°F.

Microwaves

Do not try to dry your mobile device in a microwave oven. Doing so may cause a fire or explosion.

Dust and dirt

Do not expose your mobile device to dust, dirt, or sand.

Cleaning solutions

Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the mobile device. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.

Shock or vibration

Do not drop, knock, or shake the mobile device. Rough handling can break internal circuit boards.

Paint

Do not paint the mobile device. Paint can clog the device's moving parts or ventilation openings and prevent proper operation.

Responsible Listening

Caution! Avoid potential hearing loss.

Damage to hearing occurs when a person is exposed to loud sounds over time. The risk of hearing loss increases as sound is played louder and for longer durations. Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cell phones, at high volume settings for long durations may lead to permanent noise-induced hearing loss.

This includes the use of headphones (including headsets, earbuds, and Bluetooth® or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound, and distorted hearing. Individual susceptibility to noise-induced

hearing loss and potential hearing problem varies. Additionally, the amount of sound produced by a portable audio device varies depending on the nature of the sound, the device settings, and the headphones that are used. As a result, there is no single volume setting that is appropriate for everyone or for every combination of sound, settings, and equipment.

You should follow some common sense recommendations when using any portable audio device:

- Always turn the volume down before plugging the earphones into an audio source.
- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- Be aware that you can adapt to higher volume settings over time, not realizing that the higher volume may be harmful to your hearing.
- When using headphones, turn the volume down if you cannot hear the
 people speaking near you or if the person sitting next to you can hear
 what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you
 choose to listen to your portable device in a noisy environment, use
 noise-cancelling headphones to block out background environmental
 noise. By blocking background environment noise, noise cancelling
 headphones should allow you to hear the music at lower volumes than
 when using earbuds.

- Limit the amount of time you listen. As the volume increases, less time is required before you hearing could be affected.
- Avoid using headphones after exposure to extremely loud noises, such as rock concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you
 experience ringing in your ears, hear muffled speech, or experience
 any temporary hearing difficulty after listening to your portable audio
 device, discontinue use and consult your doctor.

You can obtain additional information on this subject from the following sources:

American Academy of Audiology

11730 Plaza American Drive, Suite 300 Reston. VA 20190

Voice: (800) 222-2336 Email: info@audiology.org

Internet:

http://www.audiology.org/Pages/default.aspx

National Institute on Deafness and Other Communication Disorders

National Institutes of Health

31 Center Drive, MSC 2320 Bethesda, MD 20892-2320

Email: nidcdinfo@nih.gov

Internet:

http://www.nidcd.nih.gov/

National Institute for Occupational Safety and Health (NIOSH)

395 E Street, S.W., Suite 9200 Patriots Plaza Building

Washington, DC 20201

Voice: 1-800-35-NIOSH (1-800-356-4674) 1-800-CDC-INFO (1-800-232-4636) Outside the U.S. 513-533-8328

Email: cdcinfo@cdc.gov

Internet:

http://www.cdc.gov/niosh/topics/noise/

default.html

1-888-232-6348 TTY

Operating Environment

Remember to follow any special regulations in force in any area, and always switch your mobile device off whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the mobile device or any accessory to another device, read its user's quide for detailed safety instructions. Do not connect incompatible products.

Using Your Mobile Device Near Other Electronic Devices

Most modern electronic equipment is shielded from Radio Frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless mobile device. Consult the manufacturer to discuss alternatives.

Implantable Medical Devices

A minimum separation of six (6) inches should be maintained between a handheld wireless mobile device and an implantable medical device, such as a pacemaker or implantable cardioverter defibrillator, to avoid potential interference with the device.

Persons who have such devices:

- Should ALWAYS keep the mobile device more than six (6) inches from their implantable medical device when the mobile device is turned ON;
- Should not carry the mobile device in a breast pocket:
- Should use the ear opposite the implantable medical device to minimize the potential for interference;

- Should turn the mobile device OFF immediately if there is any reason to suspect that interference is taking place;
- Should read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your wireless mobile device with an implantable medical device, consult your health care provider.

For more information see: http://www.fcc.gov/oet/rfsafety/rf-fags.html#.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your mobile device off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle before using your mobile device in a motor vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your mobile device off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your mobile device off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Users are advised to switch the mobile device off while at a refueling point (service station).

Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust, or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

When your Device is Wet

Do not turn on your device if it is wet. If your device is already on, turn it off and remove the battery immediately (if the device will not turn off or you cannot remove the battery, leave it as-is). Then, dry the device with a towel and take it to a service center.

FCC Hearing Aid Compatibility (HAC) Regulations for Wireless Devices

The U.S. Federal Communications Commission (FCC) has established requirements for digital wireless mobile devices to be compatible with hearing aids and other assistive hearing devices.

When individuals employing some assistive hearing devices (hearing aids and cochlear implants) use wireless mobile devices, they may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and mobile devices also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless mobile devices to assist hearing device users find mobile devices that may be compatible with their hearing devices. Not all mobile devices have been rated. Mobile devices that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated mobile device successfully. Trying out the mobile device with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Wireless mobile devices rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than mobile devices that are not labeled. M4 is the better/higher of the two ratings. M-ratings refer to enabling acoustic coupling with hearing aids that do not operate in telecoil mode.


T-Ratings: Mobile devices rated T3 or T4 meet FCC requirements and are likely to generate less interference to hearing devices than mobile devices that are not labeled. T4 is the better/higher of the two ratings. T-ratings refer to enabling inductive coupling with hearing aids operating in telecoil mode.

Hearing devices may also be rated. Your hearing aid manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise.

Under the current industry standard, American National Standards Institute (ANSI) C63.19, the hearing aid and wireless mobile device rating values are added together to indicate how usable they are together. For example, if a hearing aid meets the M2 level rating and the wireless mobile device meets the M3 level rating, the sum of the two values equals M5.

Under the standard, this should provide the hearing aid user with normal use while using the hearing aid with the particular wireless mobile device. A sum of 6 or more would indicate excellent performance.

However, these are not guarantees that all users will be satisfied. T ratings work similarly.

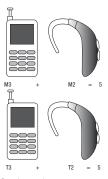

The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

HAC for Newer Technologies

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids.

It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

Restricting Children's Access to Your Mobile Device

Your mobile device is not a toy. Do not allow children to play with it because they could hurt themselves and others, damage the mobile device, or make calls that increase your mobile device hill

Keep the mobile device and all its parts and accessories out of the reach of small children.

FCC Notice and Cautions

FCC Notice

The mobile device may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the mobile device if such interference cannot be eliminated. Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association.

Cautions

Any changes or modifications to your mobile device not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment. Only use approved batteries, antennas, and chargers. The use of any unauthorized accessories may be dangerous and void the mobile device warranty if said accessories cause damage or a defect to the mobile device.

Although your mobile device is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.

Other Important Safety Information

 Only qualified personnel should service the mobile device or install the mobile device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.

- Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted.
- Check regularly that all wireless mobile device equipment in your vehicle is mounted and operating properly.
- When using a headset in dry environments, static electricity can build
 up in the headset and cause a small quick static electrical shock. To
 minimize the risk of electrostatic discharge from the headset avoid
 using the headset in extremely dry environments or touch a grounded
 unpainted metal object to discharge static electricity before inserting
 the headset.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the mobile device, its parts, or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment near or in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your mobile device off before boarding an aircraft. The use of wireless mobile devices in aircraft is illegal and may be dangerous to the aircraft's operation. Check with appropriate authorities before using any function of a mobile device while on an aircraft.

- Failure to observe these instructions may lead to the suspension or denial of cell phone services to the offender, or legal action, or both.
- While using your device, leave some lights on in the room and do not hold the screen too close to your eyes.
- Seizures or blackouts can occur when you are exposed to flashing lights while watching videos or playing games for extended periods. If you feel any discomfort, stop using the device immediately.
- Reduce risk of repetitive motion injuries. When you repetitively
 perform actions, such as pressing keys, drawing characters on a
 touch screen with your fingers, or playing games, you may experience
 occasional discomfort in your hands, neck, shoulders, or other parts of
 your body. When using your device for extended periods, hold the
 device with a relaxed grip, press the keys lightly, and take frequent
 breaks. If you continue to have discomfort during or after such use,
 stop use and see a physician.
- If your device has a camera flash or light, do not use the flash or light close to the eyes of people or pets. [122011]

End User License Agreement for Software

IMPORTANT. READ CAREFULLY: This End User License Agreement ("EULA") is a legal agreement between you (either an individual or a single entity) and Samsung Electronics Co., Ltd. for software owned by Samsung Electronics Co., Ltd. and its affiliated companies and its third party suppliers and licensors that

accompanies this EULA, which includes computer software and may include associated media, printed materials, "online" or electronic documentation ("Software").

BY CLICKING THE "I ACCEPT" BUTTON (OR IF YOU BYPASS OR OTHERWISE DISABLE THE "I ACCEPT", AND STILL INSTALL, COPY, DOWNLOAD, ACCESS OR OTHERWISE USE THE SOFTWARE), YOU AGREE TO BE BOUND BY THE TERMS OF THIS EULA. IF YOU DO NOT ACCEPT THE TERMS IN THIS EULA, YOU MUST CLICK THE "DECLINE" BUTTON, AND DISCONTINUE USE OF THE SOFTWARE.

- 1. GRANT OF LICENSE. Samsung grants you the following rights provided that you comply with all terms and conditions of this EULA: You may install, use, access, display and run one copy of the Software on the local hard disk(s) or other permanent storage media of one computer and use the Software on a single computer or a mobile device at a time, and you may not make the Software available over a network where it could be used by multiple computers at the same time. You may make one copy of the Software in machine-readable form for backup purposes only; provided that the backup copy must include all copyright or other proprietary notices contained on the original.
- 2. RESERVATION OF RIGHTS AND OWNERSHIP. Samsung reserves all rights not expressly granted to you in this EULA. The Software is protected by copyright and other intellectual property laws and

treaties. Samsung or its suppliers own the title, copyright and other intellectual property rights in the Software. The Software is licensed, not sold.

- 3. LIMITATIONS ON END USER RIGHTS. You may not reverse engineer, decompile, disassemble, or otherwise attempt to discover the source code or algorithms of, the Software (except and only to the extent that such activity is expressly permitted by applicable law not withstanding this limitation), or modify, or disable any features of, the Software, or create derivative works based on the Software. You may not rent, lease, lend, sublicense or provide commercial hosting services with the Software.
- 4. CONSENT TO USE OF DATA. You agree that Samsung and its affiliates may collect and use technical information gathered as part of the product support services related to the Software provided to you, if any, related to the Software. Samsung may use this information solely to improve its products or to provide customized services or technologies to you and will not disclose this information in a form that personally identifies you.
- 5. UPGRADES. This EULA applies to updates, supplements and add-on components (if any) of the Software that Samsung may provide to you or make available to you after the date you obtain your initial copy of the Software, unless we provide other terms along with such upgrade. To use Software identified as an upgrade, you must first be licensed for the Software identified by

- Samsung as eligible for the upgrade. After upgrading, you may no longer use the Software that formed the basis for your upgrade eligibility.
- 6. SOFTWARE TRANSFER. You may not transfer this EULA or the rights to the Software granted herein to any third party unless it is in connection with the sale of the mobile device which the Software accompanied. In such event, the transfer must include all of the Software (including all component parts, the media and printed materials, any upgrades, this EULA) and you may not retain any copies of the Software. The transfer may not be an indirect transfer, such as a consignment. Prior to the transfer, the end user receiving the Software must agree to all the EULA terms.
- 7. EXPORT RESTRICTIONS. You acknowledge that the Software is subject to export restrictions of various countries. You agree to comply with all applicable international and national laws that apply to the Software, including the U.S. Export Administration Regulations, as well as end user, end use, and destination restrictions issued by U.S. and other governments.
- 8. TERMINATION. This EULA is effective until terminated. Your rights under this License will terminate automatically without notice from Samsung if you fail to comply with any of the terms and conditions of this EULA. Upon termination of this EULA, you must cease all use of the Software and destroy all copies, full or partial, of the Software.

9. THIRD-PARTY APPLICATIONS. Certain third-party applications may be included with, or downloaded to this mobile device. SAMSUNG makes no representations whatsoever about any of these applications. Since SAMSUNG has no control over such applications, Purchaser acknowledges and agrees that SAMSUNG is not responsible for the availability of such applications and is not responsible or liable for any content, advertising, products, services, or other materials on or available from such applications. Purchaser expressly acknowledges and agrees that use of third-party applications is at Purchaser's sole risk and that the entire risk of unsatisfactory quality, performance, accuracy and effort is with Purchaser. It is up to Purchaser to take precautions to ensure that whatever Purchaser selects to use is free of such items as viruses, worms, Trojan horses, and other items of a destructive nature. References on this mobile device to any names, marks, products, or services of any third-parties are provided solely as a convenience to Purchaser, and do not constitute or imply an endorsement. sponsorship, or recommendation of, or affiliation with the third-party or its products and services. Purchaser agrees that SAMSUNG shall not be responsible or liable, directly or indirectly. for any damage or loss caused or alleged to caused by, or in connection with, use of or reliance on any such third-party content, products, or services available on or through any such application. Purchaser acknowledges and agrees that your use of any third-party application is governed by such third-party application provider's Terms of Use, License Agreement, Privacy Policy, or other such agreement and that any information or personal data you provide, whether knowingly or unknowingly, to such third-party application provider, will be subject to such third-party application provider's privacy policy, if such a policy exists. SAMSUNG DISCLAIMS ANY RESPONSIBILITY FOR ANY DISCLOSURE OF INFORMATION OR ANY OTHER PRACTICES OF ANY THIRD-PARTY APPLICATION PROVIDER.

10. Disclaimer of Warranty Regarding Third-Party Applications. SAMSUNG DOFS NOT WARRANT OR MAKE ANY REPRESENTATIONS REGARDING THE AVAILABILITY, USE, TIMELINESS, SECURITY, VALIDITY, ACCURACY, OR RELIABILITY OF, OR THE RESULTS OF THE USE OF, OR OTHERWISE RESPECTING. THE CONTENT OF ANY THIRD-PARTY APPLICATION WHETHER SUCH THIRD-PARTY APPLICATION IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG, IS DOWNLOADED, OR OTHERWISE OBTAINED. USE OF ANY THIRD-PARTY APPLICATION IS DONE AT PURCHASER'S OWN DISCRETION AND RISK AND PURCHASER IS SOLELY RESPONSIBLE FOR ANY DAMAGE TO YOUR MOBILE DEVICE OR LOSS OF DATA THAT RESULTS FROM THE DOWNLOADING OR USE OF SUCH THIRD-PARTY APPLICATIONS, SAMSLING EXPRESSLY DISCLAIMS ANY WARRANTY REGARDING WHETHER PURCHASER'S PERSONAL INFORMATION IS CAPTURED BY ANY THIRD-PARTY APPLICATION

PROVIDER OR THE USE TO WHICH SUCH PERSONAL INFORMATION MAY BE PUT BY SUCH THIRD-PARTY APPLICATION PROVIDER, ANY THIRD-PARTY APPLICATIONS PROVIDED WITH THIS MOBILE DEVICE ARE PROVIDED "AS IS" AND ON AN "AS AVAILABLE" BASIS. WITHOUT WARRANTIES OF ANY KIND FROM SAMSUNG, EITHER EXPRESS OR IMPLIED, TO THE FULLEST EXTENT POSSIBLE PURSUANT TO APPLICABLE LAW. SAMSUNG DISCLAIMS ALL WARRANTIES EXPRESS, IMPLIED, OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, SATISFACTORY QUALITY OR WORKMANLIKE EFFORT, FITNESS FOR A PARTICULAR PURPOSE. RELIABILITY OR AVAILABILITY. ACCURACY. LACK OF VIRUSES. QUIET ENJOYMENT, NON-INFRINGEMENT OF THIRD PARTY RIGHTS OR OTHER VIOLATION OF RIGHTS. SAMSUNG DOES NOT WARRANT AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE THIRD-PARTY APPLICATION. THAT THE FUNCTIONS CONTAINED IN THE THIRD-PARTY APPLICATION WILL MEET PURCHASER'S REQUIREMENTS. THAT THE OPERATION OF THE THIRD-PARTY APPLICATION WILL BE UNINTERRUPTED OR ERROR-FREE, OR THAT DEFECTS IN THE THIRD-PARTY APPLICATION WILL BE CORRECTED. PURCHASER ASSUMES THE ENTIRE COST OF ALL NECESSARY SERVICING, REPAIR, OR CORRECTION, SOME JURISDICTIONS DO NOT ALLOW **EXCLUSIONS OR LIMITATIONS ON HOW LONG AN IMPLIED** WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. NO ADVICE OR INFORMATION, WHETHER ORAL OR WRITTEN, OBTAINED BY PURCHASER FROM SAMSUNG SHALL BE DEEMED TO ALTER THIS DISCLAIMER OF WARRANTY REGARDING THIRD-PARTY APPLICATIONS, OR TO CREATE ANY WARRANTY.

11. Limitation of Liability. SAMSUNG WILL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND ARISING OUT OF OR RELATING TO THE USE OR THE INABILITY TO USE ANY THIRD-PARTY APPLICATION, ITS CONTENT OR FUNCTIONALITY, INCLUDING BUT NOT LIMITED TO DAMAGES CAUSED BY OR RELATED TO ERRORS, OMISSIONS, INTERRUPTIONS, DEFECTS, DELAY IN OPERATION OR TRANSMISSION, COMPUTER VIRUS, FAILURE TO CONNECT, NETWORK CHARGES, AND ALL OTHER DIRECT. INDIRECT. SPECIAL. INCIDENTAL. EXEMPLARY. OR CONSEQUENTIAL DAMAGES EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION. OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. NOT WITHSTANDING THE FOREGOING. SAMSUNG'S TOTAL LIABILITY TO PURCHASER FOR ALL LOSSES, DAMAGES, CAUSES OF ACTION, INCLUDING BUT NOT LIMITED TO THOSE BASED ON CONTRACT, TORT, OR OTHERWISE, ARISING OUT OF PURCHASER'S USE OF THIRD-PARTY APPLICATIONS ON THIS MOBILE DEVICE. OR ANY OTHER PROVISION OF THIS EULA.

SHALL NOT EXCEED THE AMOUNT PURCHASER PAID SPECIFICALLY FOR ANY SUCH THIRD-PARTY APPLICATION THAT WAS INCLUDED WITH THIS MOBILE DEVICE. THE FOREGOING LIMITATIONS, EXCLUSIONS, AND DISCLAIMERS (INCLUDING SECTIONS 9, 10, AND 11) SHALL APPLY TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, EVEN IF ANY REMEDY FAILS ITS ESSENTIAL PURPOSE.

12. U.S. Government End Users Restricted Rights. The Software is licensed only with "restricted rights" and as "commercial items" consisting of "commercial software" and "commercial software documentation" with only those rights as are granted to all other end users pursuant to the terms and conditions herein. All Software and Products provided to the United States Government pursuant to solicitations issued on or after December 1, 1995 is provided with the commercial rights and restrictions described elsewhere herein. All Software and Products provided to the United States Government pursuant to solicitations issued prior to December 1, 1995 are provided with RESTRICTED RIGHTS as provided for in FAR, 48 CFR 52.227-14 (JUNE 1987) or DFAR, 48 CFR 252.227-7013 (OCT 1988), as applicable.

13. APPLICABLE LAW. This EULA is governed by the laws of TEXAS, without regard to conflicts of laws principles. This EULA shall not be governed by the UN Convention on Contracts for the International Sale of Goods, the application of which is expressly

excluded. If a dispute, controversy or difference is not amicably settled, it shall be finally resolved by arbitration in Seoul, Korea in accordance with the Arbitration Rules of the Korean Commercial Arbitration Board. The award of arbitration shall be final and binding upon the parties.

14. ENTIRE AGREEMENT; SEVERABILITY. This EULA is the entire agreement between you and Samsung relating to the Software and supersedes all prior or contemporaneous oral or written communications, proposals and representations with respect to the Software or any other subject matter covered by this EULA. If any provision of this EULA is held to be void, invalid, unenforceable or illegal, the other provisions shall continue in full force and effect.

Sign Up Now

Customize your Samsung phone experience

- Activate product warranty
- Access to a personalized My Samsung Mobile account
 - No monthly fees

Get More

- \cdot Latest info on promotions, events and special offers on related products
 - Review Samsung products and share your opinion
 - Great deals on downloads



Register now at www.samsung.com/register

Scan this code to go directly to the registration page.

samsung mob!le

Index

Α Address Book Options 71 Google Search 31 Alarm 131 Ahc mode 61 Google+ 28 Latitude 29 **Alerts** Add 3 sec Pause 48 Maps 29 Adding a New Contact AMBFR 108 Imminent Extreme 108 Memo 29 Idle Screen 65 Imminent Severe 108 Address Book 65 Messenger 29 Adding a New Contact 65 Presidential 108 Mini Diary 29 **AMBER Alerts** Music 29 Adding Pauses to Contact Disable 108 Numbers 67 My Files 29 Copying an entry to the Phone 75 AMBER alerts 108 Navigation 29 Photo Editor 30 Android System Recovery 171 Copying Entry to Phone 75 **Applications** Places 30 Copying Entry to SIM Card 74 Deleting Address Book Entries 75 AllShare 27 Play Books 30 Calculator 27 Play Music 30 Dialing a Number 68 Calendar 27 Play Store 30 Favorites 74 Finding an Address Book Entry 68 Camera 27 Quickoffice 30 Clock 27 Settings 31 Group Settings 73 Social Hub 31 Managing Address Book Entries Contacts 28 74 Downloads 28 Talk 31 Email 28 Task 31 Service Dialing Numbers 75 Using Contacts List 68 Gallery 28 Task Manager 31 Gmail 28 Using the Camcorder 95

Using the Camera 89	Visibility 154	Ending a Call 48
Video Maker 32	Visible Time-Out 154	International Call 47
Videos 32	Books 143	Making a Call 47
Voice Command 32	Browser	Manual Pause Dialing 48
Voice Recorder 32	Reset to Default 119	Options During a Call 54
Voice Search 32	C	Putting a Call on Hold 55
Voice Talk 32	Calculator 128	Saving the Missed Call Number to
World Clock 132	Calendar 129	Address Book 52
YouTube 32	Calibrate 163	Searching for a Number in
AT&T Music	Calibration	Address Book 58
Playlists 78	Horizontal 163	Using the Speakerphone 57
Auto Redial 160	Call Forwarding 159	Viewing All Calls 51
В	Call Functions 47	Viewing Missed Calls 51
Back key 36	3-Way Calling (Multi-Party Calling)	Call Rejection 158
Back key 36 Battery	3-Way Calling (Multi-Party Calling) 56	Call Rejection 158 Call Waiting 160
•	, , , , , , , , , , , , , , , , , , , ,	-
Battery	56	Call Waiting 160
Battery charging 9	56 Address Book 49	Call Waiting 160 Caller ID 160
Battery charging 9 Installing 8	56 Address Book 49 Adjusting the Call Volume 54	Call Waiting 160 Caller ID 160 Camcorder 95 Accessing the Video Folder 98 Camcorder Options 96
Battery charging 9 Installing 8 Low Battery Indicator 10	56 Address Book 49 Adjusting the Call Volume 54 Answering a Call 49	Call Waiting 160 Caller ID 160 Camcorder 95 Accessing the Video Folder 98 Camcorder Options 96 Shooting Video 95
Battery charging 9 Installing 8 Low Battery Indicator 10 Battery Use & Safety 187	56 Address Book 49 Adjusting the Call Volume 54 Answering a Call 49 Call Back Missed Call 52	Call Waiting 160 Caller ID 160 Camcorder 95 Accessing the Video Folder 98 Camcorder Options 96
Battery charging 9 Installing 8 Low Battery Indicator 10 Battery Use & Safety 187 Blocking	56 Address Book 49 Adjusting the Call Volume 54 Answering a Call 49 Call Back Missed Call 52 Call Duration 53	Call Waiting 160 Caller ID 160 Camcorder 95 Accessing the Video Folder 98 Camcorder Options 96 Shooting Video 95 Camcorder Options Camcorder Options after a Video is
Battery charging 9 Installing 8 Low Battery Indicator 10 Battery Use & Safety 187 Blocking Pop-ups 118	56 Address Book 49 Adjusting the Call Volume 54 Answering a Call 49 Call Back Missed Call 52 Call Duration 53 Call Log 51	Call Waiting 160 Caller ID 160 Camcorder 95 Accessing the Video Folder 98 Camcorder Options 96 Shooting Video 95 Camcorder Options
Battery charging 9 Installing 8 Low Battery Indicator 10 Battery Use & Safety 187 Blocking Pop-ups 118 Bluetooth 154	56 Address Book 49 Adjusting the Call Volume 54 Answering a Call 49 Call Back Missed Call 52 Call Duration 53 Call Log 51 Call Waiting 58	Call Waiting 160 Caller ID 160 Camcorder 95 Accessing the Video Folder 98 Camcorder Options 96 Shooting Video 95 Camcorder Options Camcorder Options after a Video is

Camera 88 Display / Touch-Screen 190 **Emergency Alerts** 107 DivX Accessing the Pictures Folder 94 **Emergency Calls** 192 Camera Options 90, 96 Locating VOD Number 85 Entering Text 59 Picture Folder 94 Overview 85 Changing the Text Entry Mode 60 Taking Pictures 89 Registering Your DivX Device 85 Using 123Sym Mode 62 Care and Maintenance 192 Using Abc Mode 61 Registration Code 178 **Changing Your Settings** 152 Do cell phones pose a health hazard? Using Android Keyboard 59 **Charging battery** 9 Using Swype 63 180 Children and Cell Phones 183 Using Symbol/Numeric Mode 62 Downloading Clock 131 New application 144 **Exposure to Radio Frequency (RF) CMAS** 107 Downloads 133 Signals 180 E Extreme Alert Commercial Mobile Alerting System (CMAS) 107, 186 Email 109 Disable 108 Contacts 65 Creating Additional Email Cookies Accounts 110 FCC Hearing Aid Compatibility (HAC) Emptying 117 Switching Between Email **Regulations for Wireless Devices** 197 **Creating a Playlist** 78 Accounts 110 **FCC Notice and Cautions** 199 n Synchronizing a Corporate Email Fixed Dialing Numbers 160 Diary 138 Account 109 Folder Display **Emergency Alert** Renaming 42 icons 20 Font Size Configuration 108 Status Bar 20 Caption 151

F

G	Gyro Sensor	L
Gallery 87	Calibration 163	Landscape 59
viewing pictures 87	Н	Latitude 134
viewing videos 88	Haptic Feedback 162	M
Getting Started 5	Health and Safety Information 180	Maps 135
Setting Up Your Phone 5	Home 25	Memo 137
Voice mail 14	Home key 36	Memory Card 44
Gmail 111	Home Screen	Memory Card Installation 6
Google	Overview 25	Menu
Create New Account 12	I I	key 36
Signing into Your Account 13	Icons	Menu Navigation 36
Google Books 143	Application 27	Merge Calls 56
Google Maps 135	Indicator 20	Message Options 102
Google Music 79	Icons, description 20	Message Search 105
GPS	In-Call Options 54	Messaging
Improving Accuracy 164	International Call 47	Creating and Sending Text
GPS & AGPS 191	Internet 114	Messages 101
Group	Internet Email 109	Deleting a message 105
Adding an Entry 73	J	Gmail 111
Editing 73	Joining Contacts 69	Options 102
Removing an Entry 73	K	Settings 106
Group Settings	Keypad	Signing into Email 109
Editing a Caller Group 73	Changing Text Input 60	Signing into Gmail 111
	'	Types of Messages 101

microSD card 6, 44	Now Playing Screen 81	N
Installing 7	Options While Playing 82	Navigating
Removing 7	Playing 81	Through Screens 33
microSDHC card 6, 44	Playing a Playlist 84	Navigation 140
Microsoft Exchange 109	Searching for Music 80	command keys 36
Mini Diary 138	Tab Options 82	terms used 33
Mobile Video 84	Music File Extensions	touch gestures 33
Mobile Web 114	3GP 76	Navigation Options 141
Entering Text in the Mobile Web	AAC 76	New applications
Browser 115	AAC+ 76	Downloading 144
Navigating with the Mobile Web	eAAC+ 76	Noise Suppression 160
114	M4A 76	0
Using Bookmarks 116	MP3 76	Ooffensive Words
Motion 170	MP4 76	Blocking 175
Multimedia 76	WMA 76	Operating Environment 195
Multi-Party Call	Music Player 76	Other Important Safety Information
Dropping One Participant 57	adding music 78	199
Music App	creating a playlist 78	Outlook 109
Adding Songs to Playlists 83	removing music 79	Overview
Changing Library View 80	Mute 54, 57	Home Screen 25
Changing Settings 80	My Files 139	
Creating a Playlist 83		
Deleting a Playlist 84		
Listening 81		

Q	Severe Alert
Quickoffice 145	Disable 108
R	Shortcuts
Reducing Exposure	Primary 26
Hands-Free Kits and Other	SIM card
Accessories 182	installation 6
Reject list 53	Installing 6
Responsible Listening 193	Smart Practices While Driving 186
Restricting Children's Access to Your	Snooze 131
Mobile device 198	Social Hub 146
S	Software Update
Safe Mode 15	Wi-Fi 179
Samsung Mobile Products and	Speakerphone Key 57
Recycling 189	Specific Absorption Rate (SAR)
Screen	Certification Information 184
Home 25	Status Bar 20
Navigation 33	Stopwatch 132
Screen Rotation 24	Swap 55
SD Card 45	Swype
Service Dialing Numbers 75	Configuring Settings 63, 172
Settings	Enabling 63
enabling wireless network	Entering Text 63
locations 164	Preferences 63, 172
	Select Input Method 63, 172
	Quickoffice 145 R Reducing Exposure Hands-Free Kits and Other Accessories 182 Reject list 53 Responsible Listening 193 Restricting Children's Access to Your Mobile device 198 S Safe Mode 15 Samsung Mobile Products and Recycling 189 Screen Home 25 Navigation 33 Screen Rotation 24 SD Card 45 Service Dialing Numbers 75 Settings enabling wireless network

Text Entry Tips 64	TTS 175	Use Wireless Networks 136
Swype Settings	TTY Mode 159	Use wireless networks 164
Configuring 63, 172	U	Using Favorites
Symbol/Numeric mode 62	UL Certified Travel Charger 190	Adding Favorites 117
System Recovery 14	Understanding Your Phone 16	Deleting a Favorite 117
T	Features of Your Phone 16	Editing Favorites 117
Task 147	Front View 16	V
Task Manager 148	Home 25	Vibration
Text Input	Rear View 18	Intensity 162
Abc mode 61	Side Views 17	Video Player 84
Methods 59	Unmute 54	Voice Mail
numeric mode 62	Updates	Accessing 14
symbol mode 62	Check For 178	From Another Phone 14
Text Templates 107	USB connection modes 126	Setup 14
Creating 107	USB connections	Voice Recorder 149
Text To Speech 175	as a mass storage device 126	Voice talk 150
Text-to-speech	USB settings	Volume 162
Configuration 175	as a mass storage device 126	W
Timer 133	mass storage device 126	Web 114
Touch Screen 11	Use GPS Satellites 136	Widgets
Lock/Unlock 11	Use Sensor Aiding 136	Gmail 134
Travel Charger 9		Settings 146
Using 10		Voice Recorder 149

Wi-Fi Activating 152 Manually Adding Network 153 WPS Button 153 Wi-Fi Direct 121, 153 World Clock Deleting an Entry 132 World clock 132 Y YouTube 150

Settings 151